



1988 TOYOTA Pickup & 4Runner (Cont.)

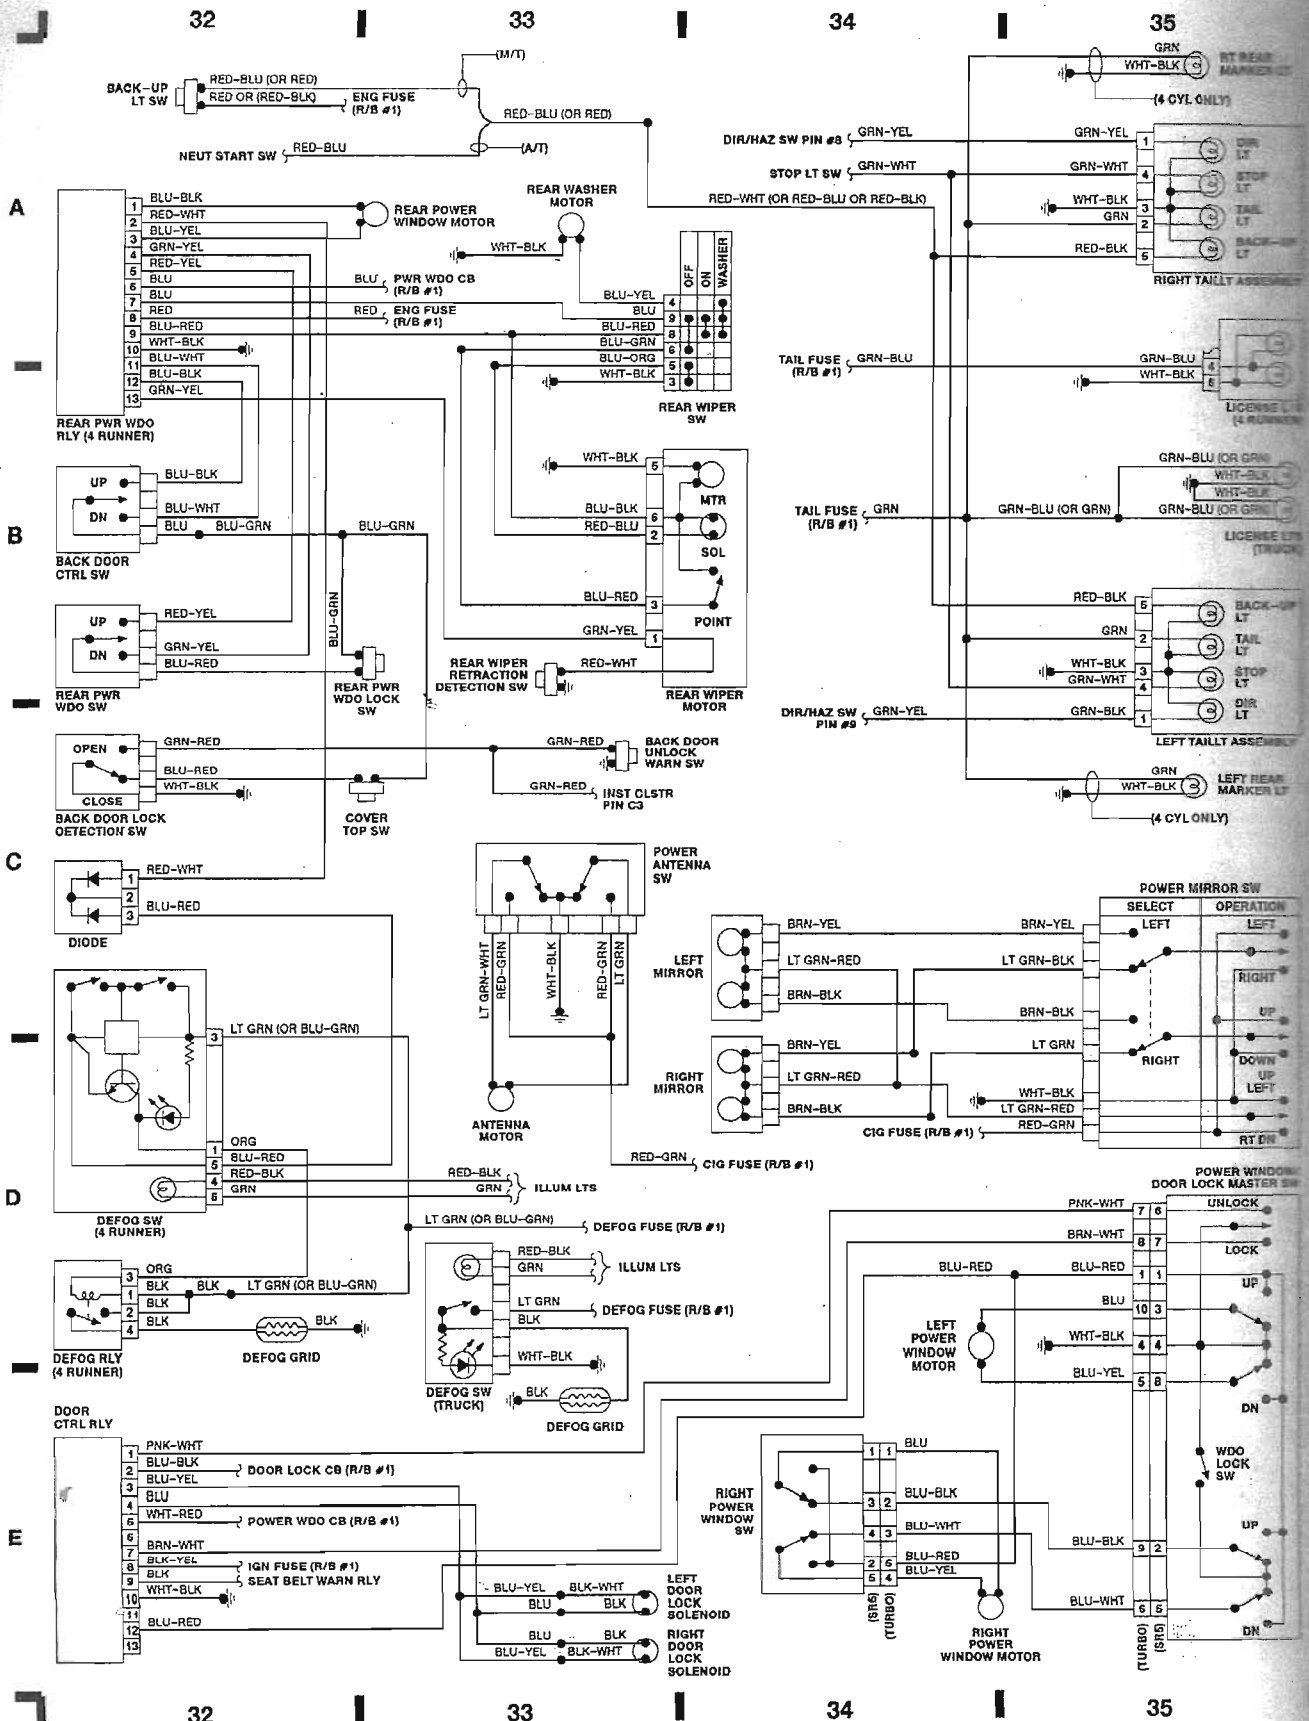

1988 TOYOTA Pickup & 4Runner

COMPONENT LOCATOR:


A/C AMP (CARB)	A 20
A/C AMP (EFI)	B 20
A/C SWITCH	B 22
A/T OIL WARN COMPUTER	C-D 31
ALTERNATOR	E 3
BACK DOOR UNLOCK WARN SW	C 33
BACK-UP LT SW (M/T)	A 32
BATTERY	A 3
BLOWER SWITCH	A-B 23
CIG LIGHTER	A 19
CIRCUIT OPENING RELAY (4 CYL EFI & TURBO)	A 10
CIRCUIT OPENING RELAY (V6)	A 14-15
CLOCK	A 19
CLUTCH START CANCEL SWITCH	B 2
COLD MIXTURE HEATER RELAY (CMH, CALIF)	B 7
COLD MIXTURE HEATER RELAY (CMH, FED)	E 7
COOLANT TEMP SENDER	B 30
CRUISE CTRL SYSTEM	D-E 20-23
DECK LIGHT SWITCH	D-E 19
DEFOG SWITCH (4 RUNNER)	D 32
DEFOG SWITCH (TRUCK)	D 33
DIR/HAZ FLASHER	E 27
DIR/HAZ SWITCH	E 27
DOOR CTRL RELAY	E 32
ECT ECU	A 24
ECT SOLENOID	A 27
EFI MAIN RELAY (4 CYL EFI & TURBO)	A 8
EFI MAIN RELAY (V6)	A 15
EMISSION CTRL COMPUTER (CARB, CALIF)	A-C 4-7
EMISSION CTRL COMPUTER (CARB, FED)	D-E 4-7
FUEL SENDER	B 30
4WD SWITCH (W/ECT)	B 30
4WD SWITCH (W/O ECT)	A 25-26
HEADLT/DIMMER SWITCH	E 24
HORN	C 1
IDLE UP SOLENOID	C 22
IGNITER (CARB, CALIF)	C 5
IGNITER (CARB, FED)	E 5
IGNITER (4 CYL EFI & TURBO)	E 10
IGNITER (V6)	E 14
IGNITION SWITCH	A 16
ILLUMINATION LIGHTS	D 30-31
INSTRUMENT CLUSTER	A-D 28
INTERIOR LIGHT	C 31
LT REMINDER RELAY	A 31
MAIN FUS LINK	A 2
NEUT START SW (W/ECT)	B-C 24
NEUT START SW (W/O ECT)	D 24
O/D IND (4 CYL)	B 27
O/D IND (V6)	C 27
O/D RELAY (4 CYL)	C 27
PPS COMPUTER	C-D 21
PARK BRAKE SWITCH	C 30
PATTERN SELECT SWITCH	A-B 27
POWER ANTENNA	C 33
POWER MIRROR SWITCH	C-D 35
POWER WINDOW MASTER SW	D-E 35
REAR HEATER	C 23
REAR PWR WDO RELAY (4 RUNNER)	A 32
REAR WIPER SW (4 RUNNER)	A 34
RELAY BOX #1 (R/B #1)	B-D 17-18
RELAY BOX #2 (R/B #2)	D-E 2
RELAY BOX #3 (R/B #3)	E 16
RELAY BOX #4 (R/B #4)	D 16
RHOSTAT	E 31
SEAT BELT WARN RLY	E 28
STARTER MOTOR	A 3
STARTER RELAY (M/T)	A 3
START INJ TIME SWITCH	B 3
STOP LIGHT SWITCH	D 23
TAIL LTS	A-B 35
TCCS ECU (4 CYL EFI & TURBO)	A-E 8-11
TCCS ECU (V6)	A-E 12-15
WIPER/WASHER SYSTEM	D 25-27

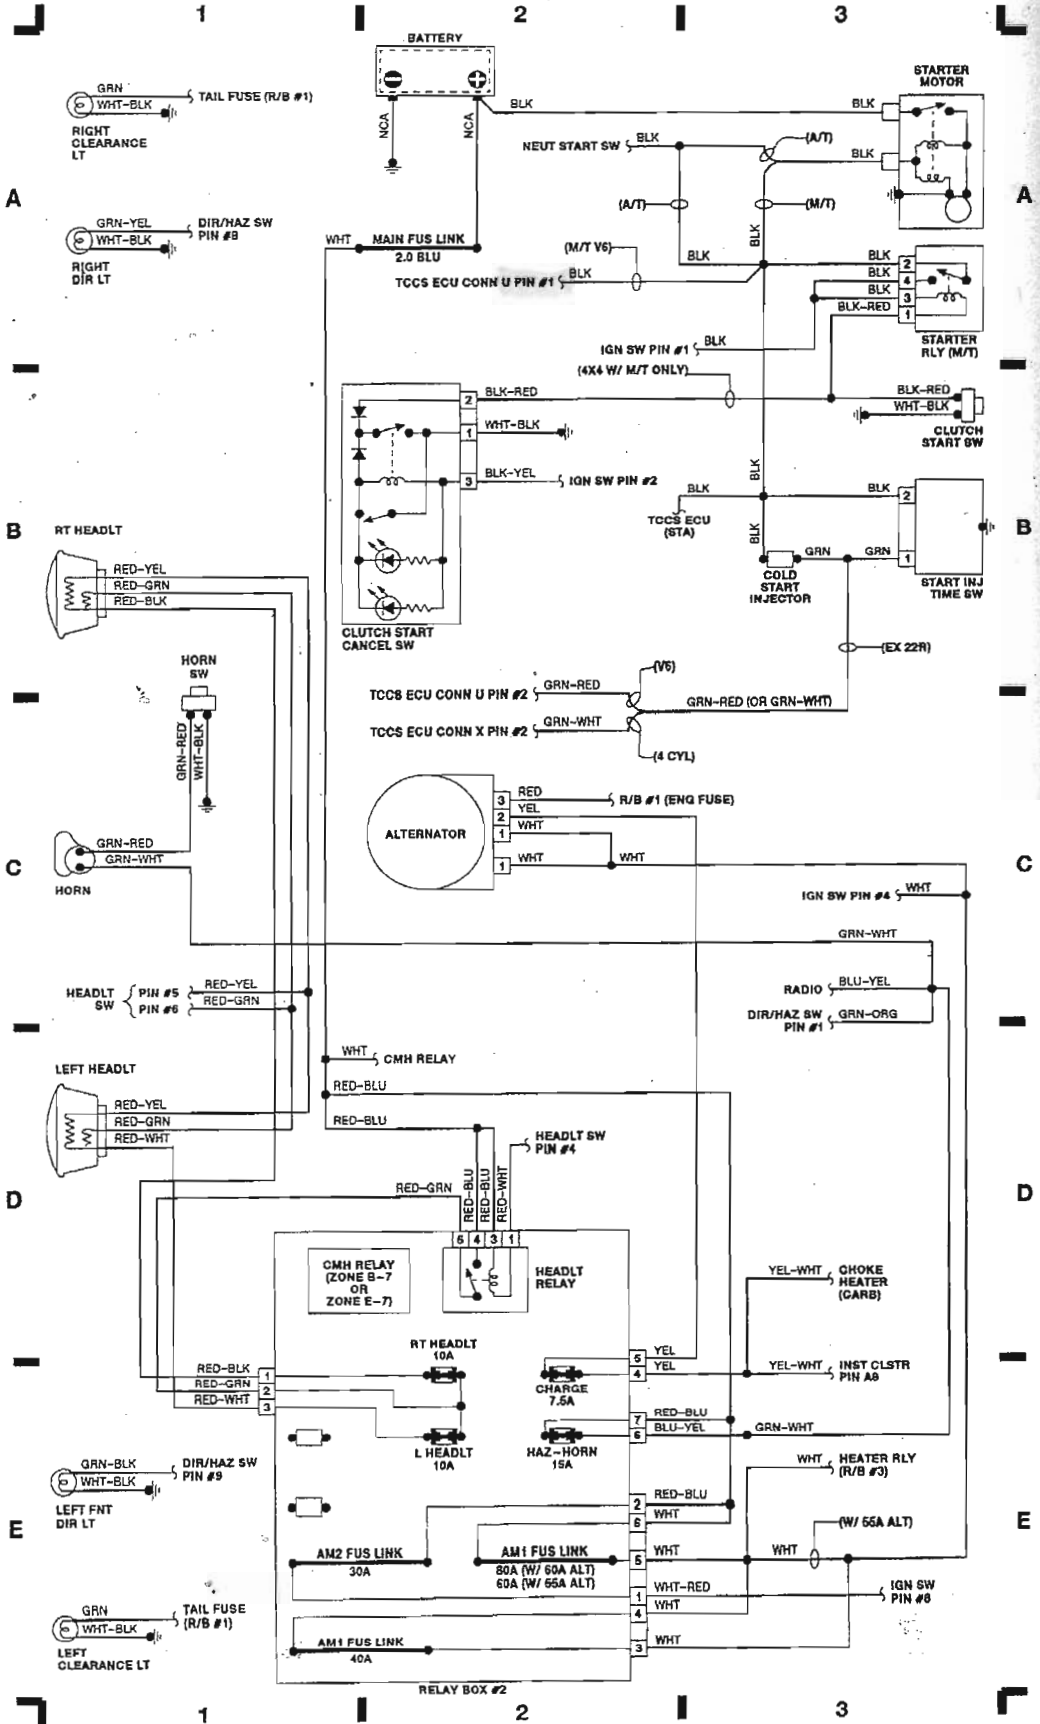


1988 TOYOTA Pickup & 4Runner (Cont.)

5-605

4CY

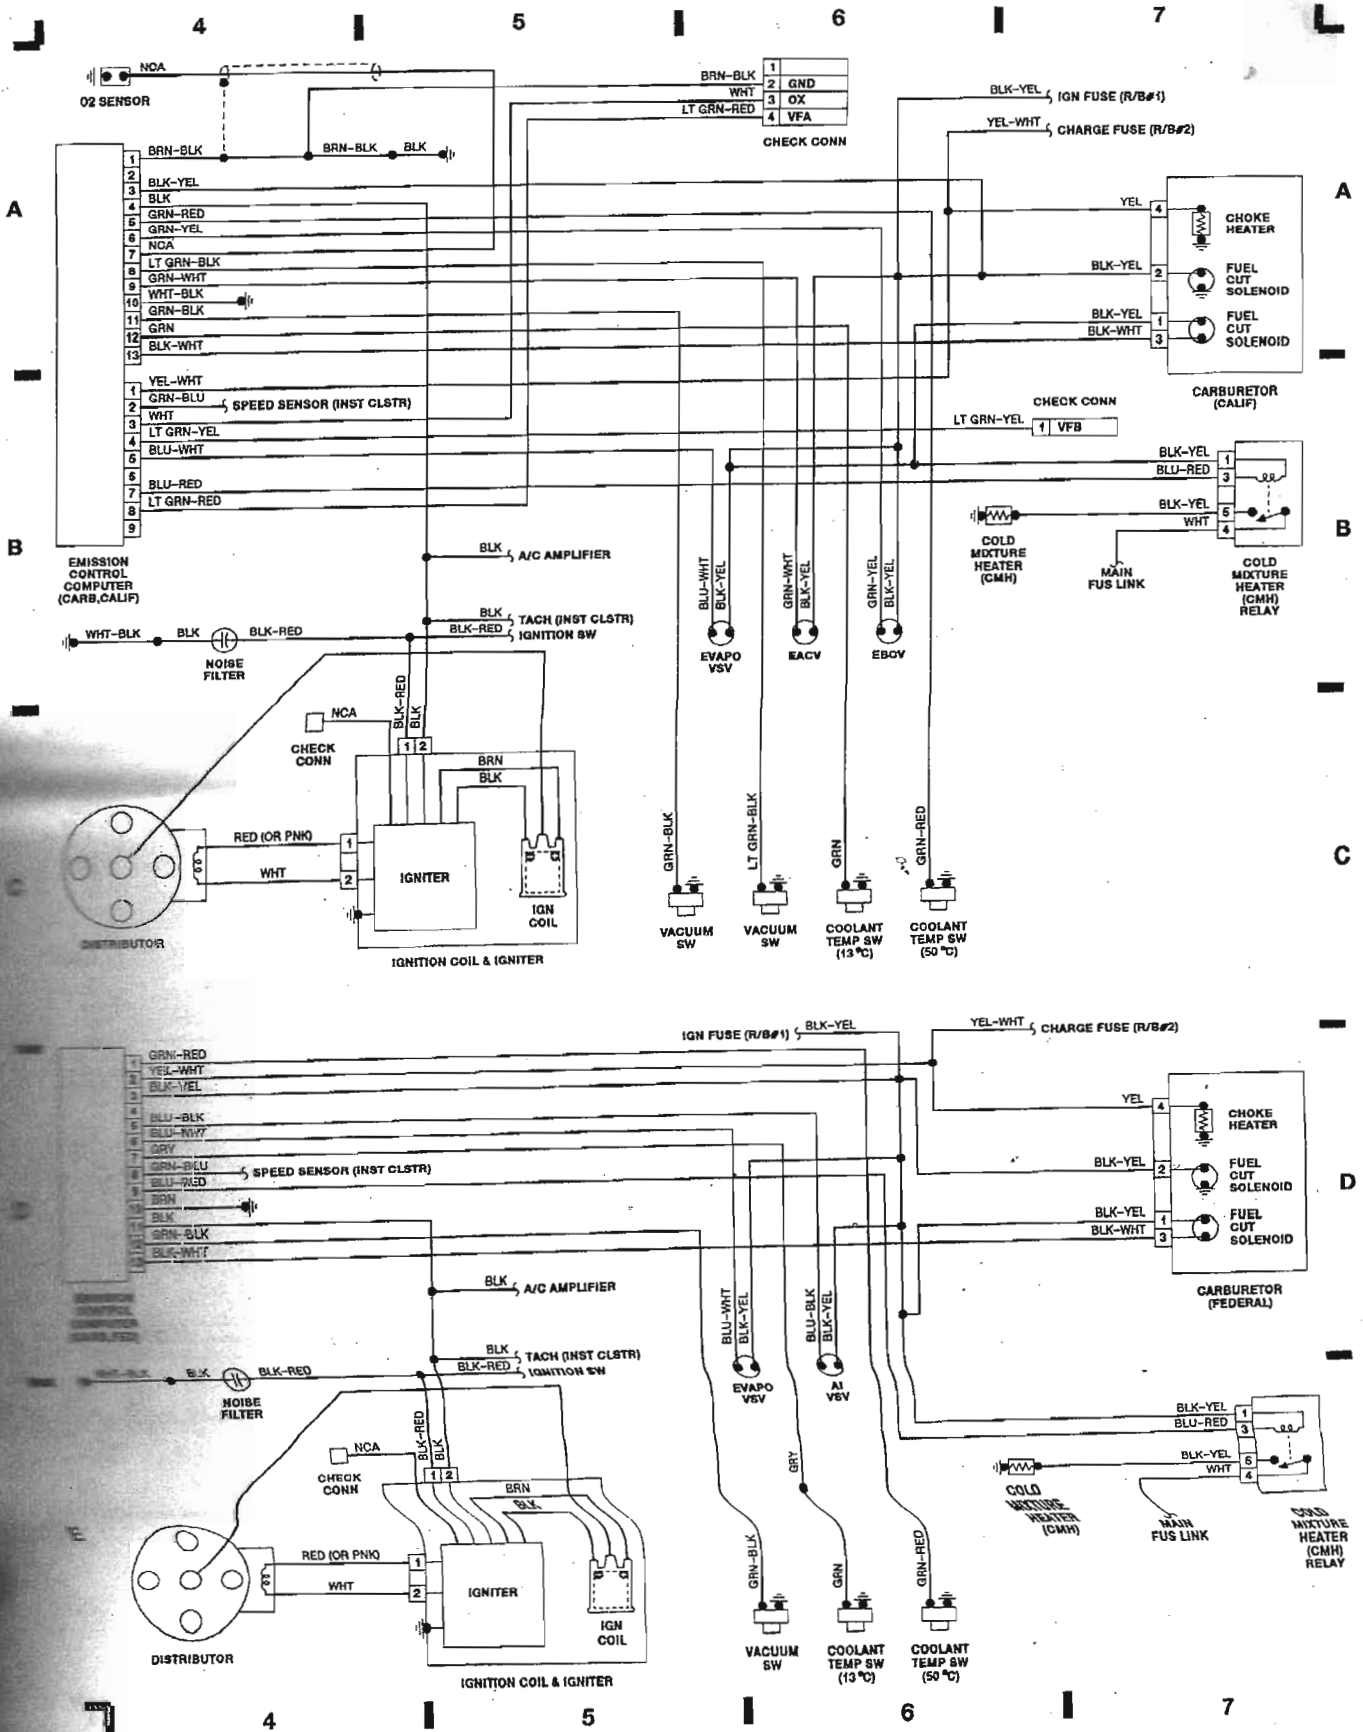


1988 TOYOTA Pickup & 4Runner (Cont.)

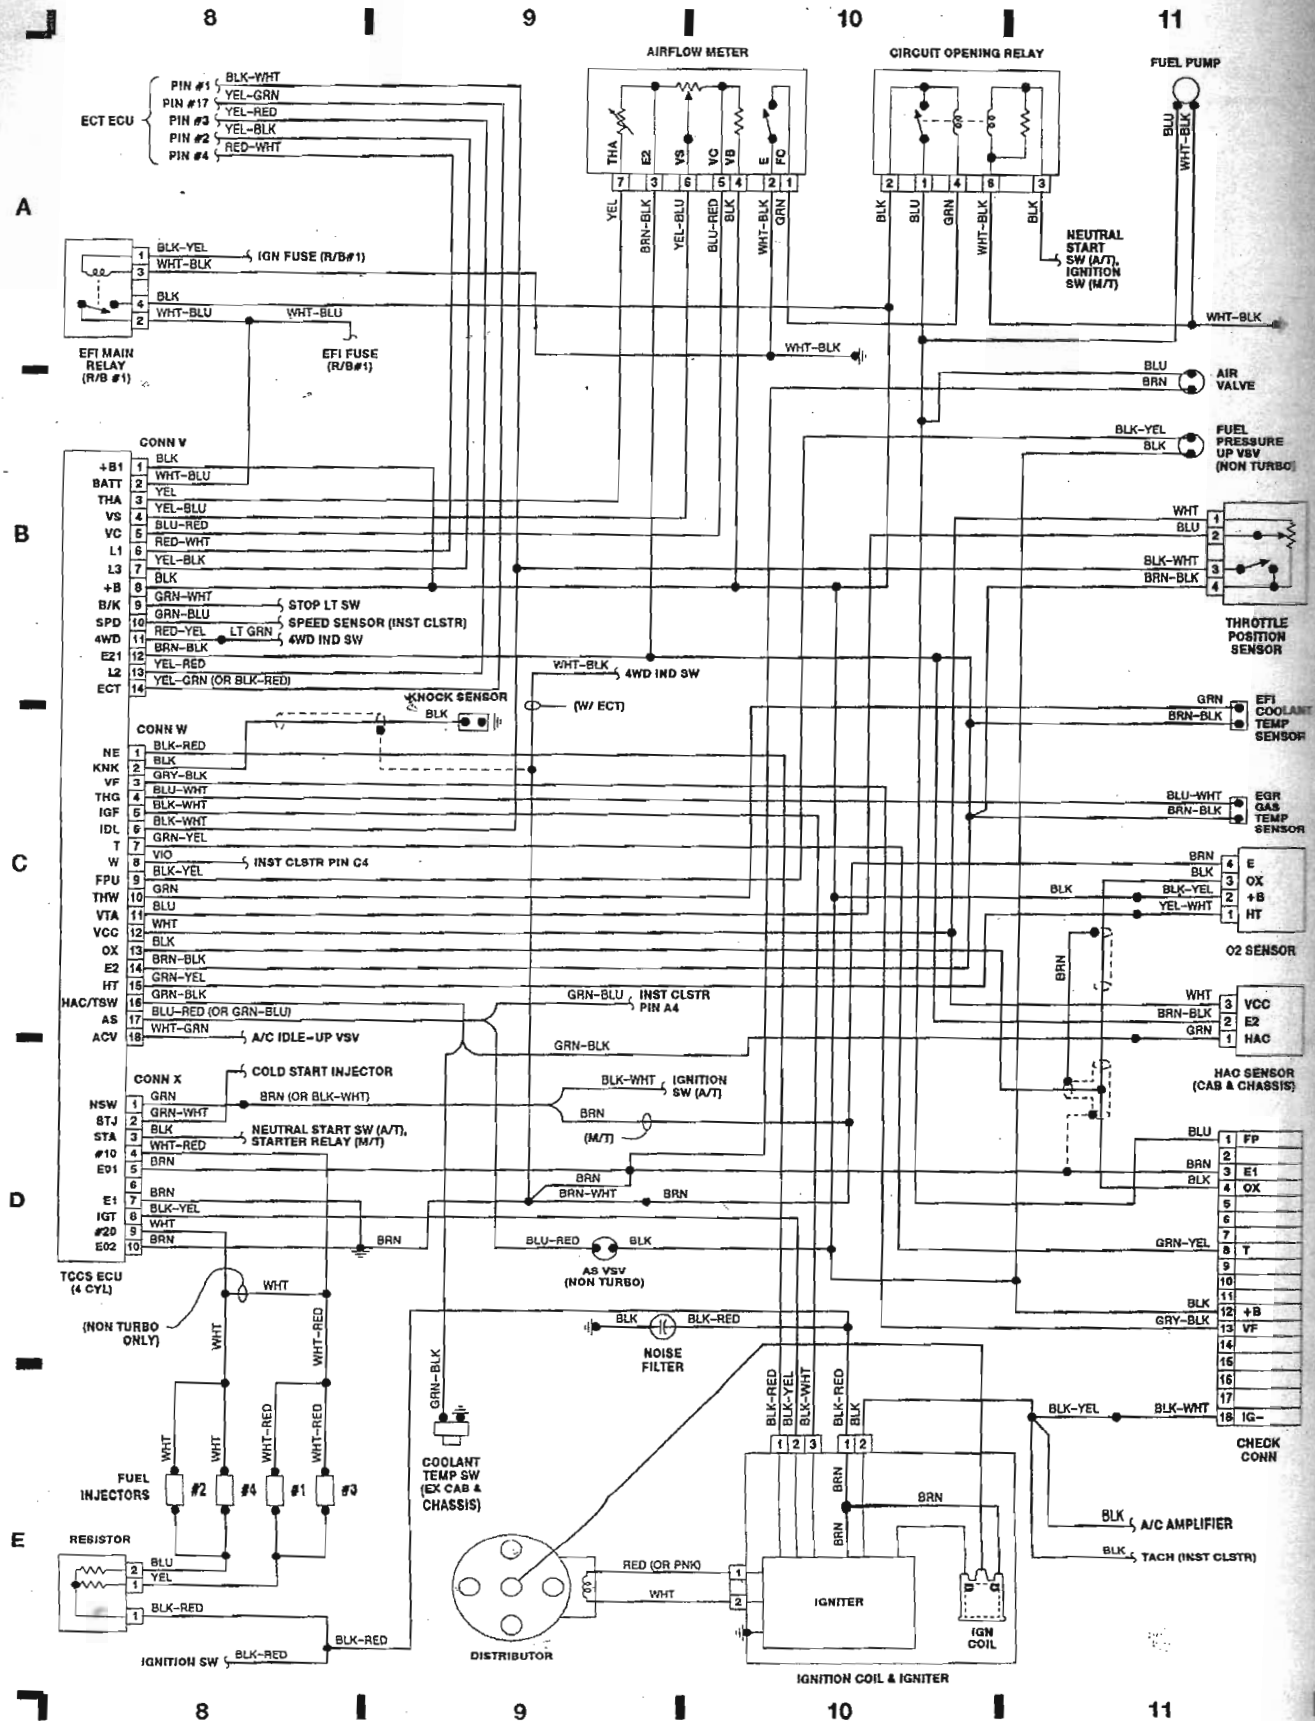


1988 TOYOTA Pickup & 4Runner (Cont.)

5-6U7

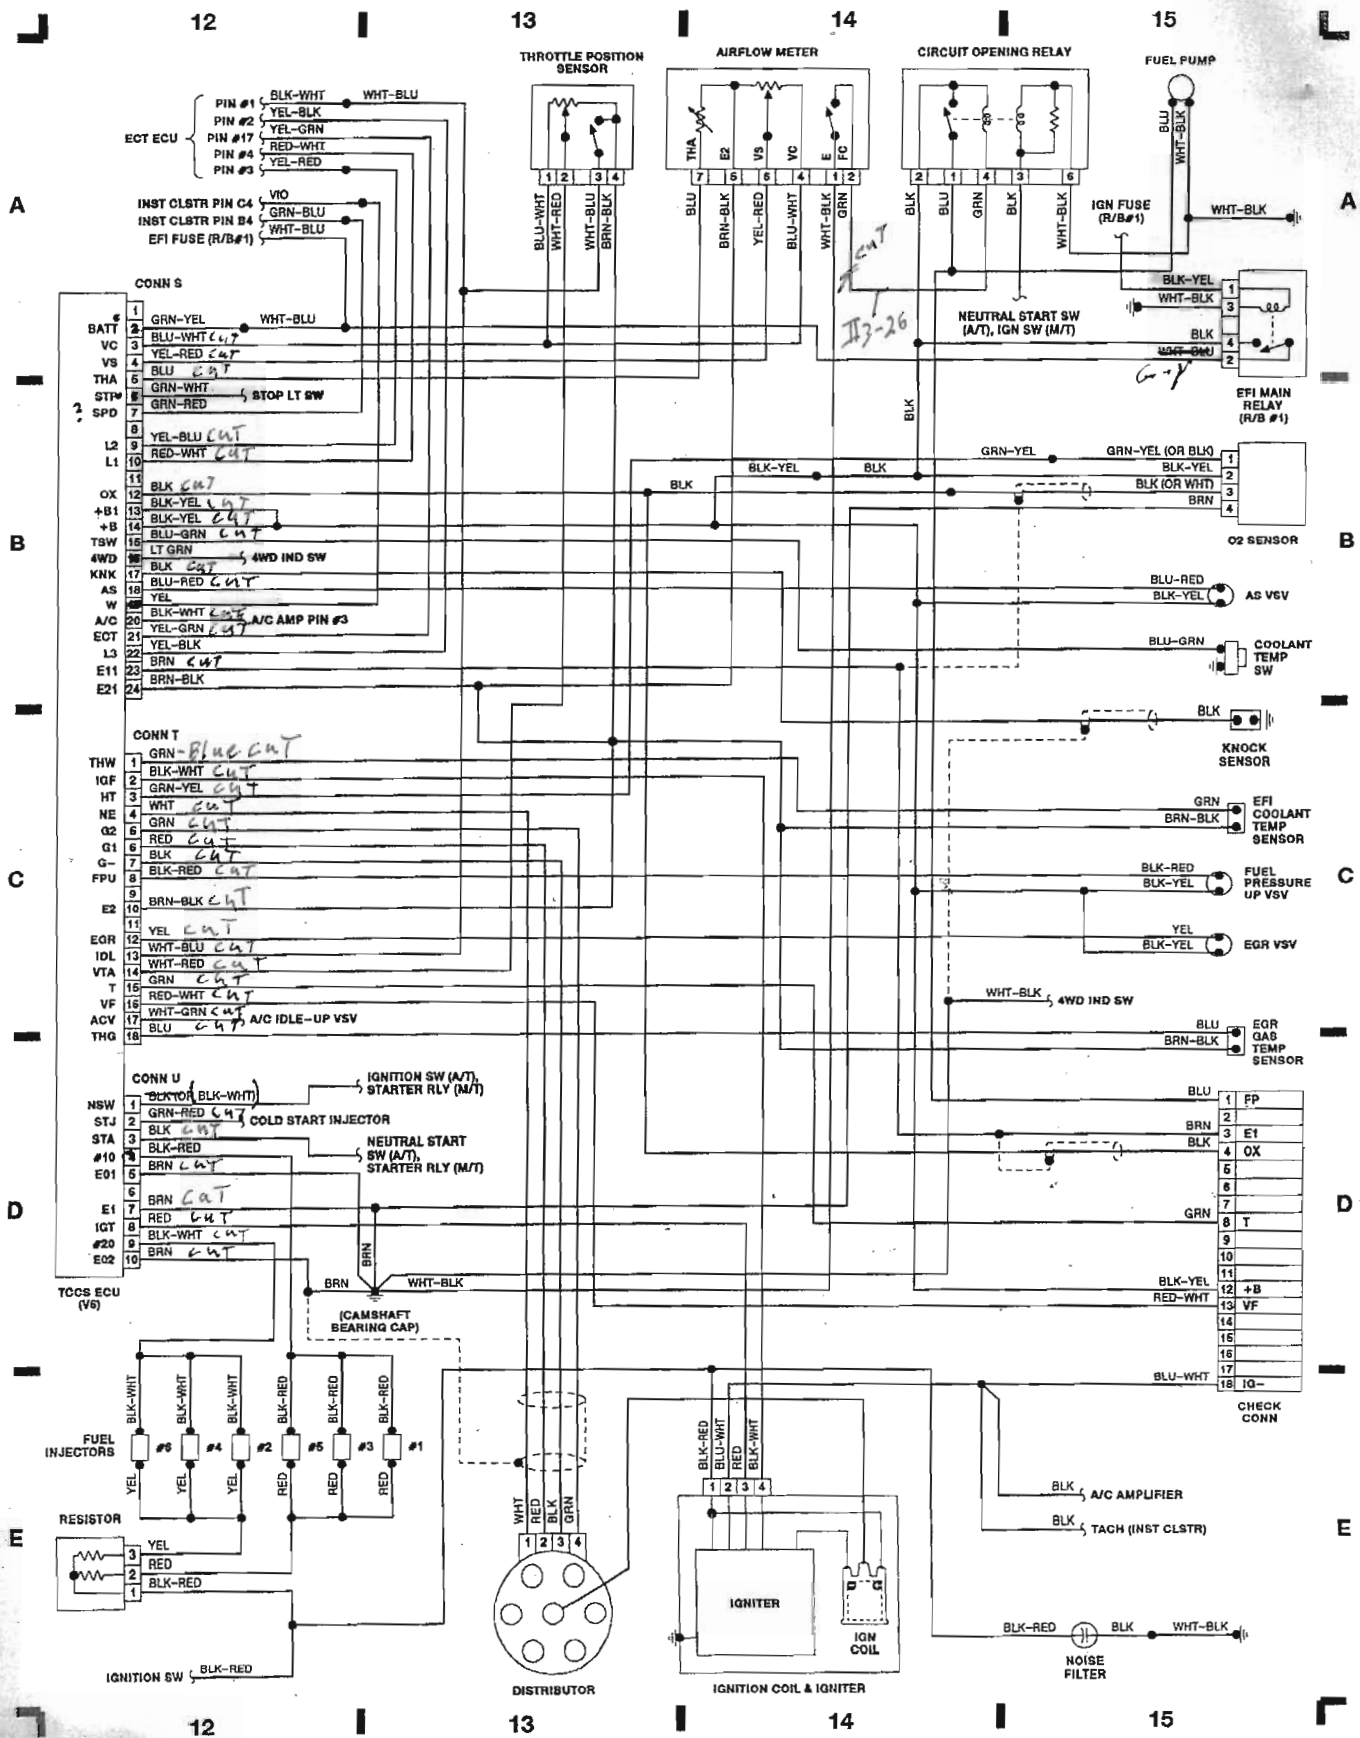

1988 TOYOTA Pickup & 4Runner (Cont.)

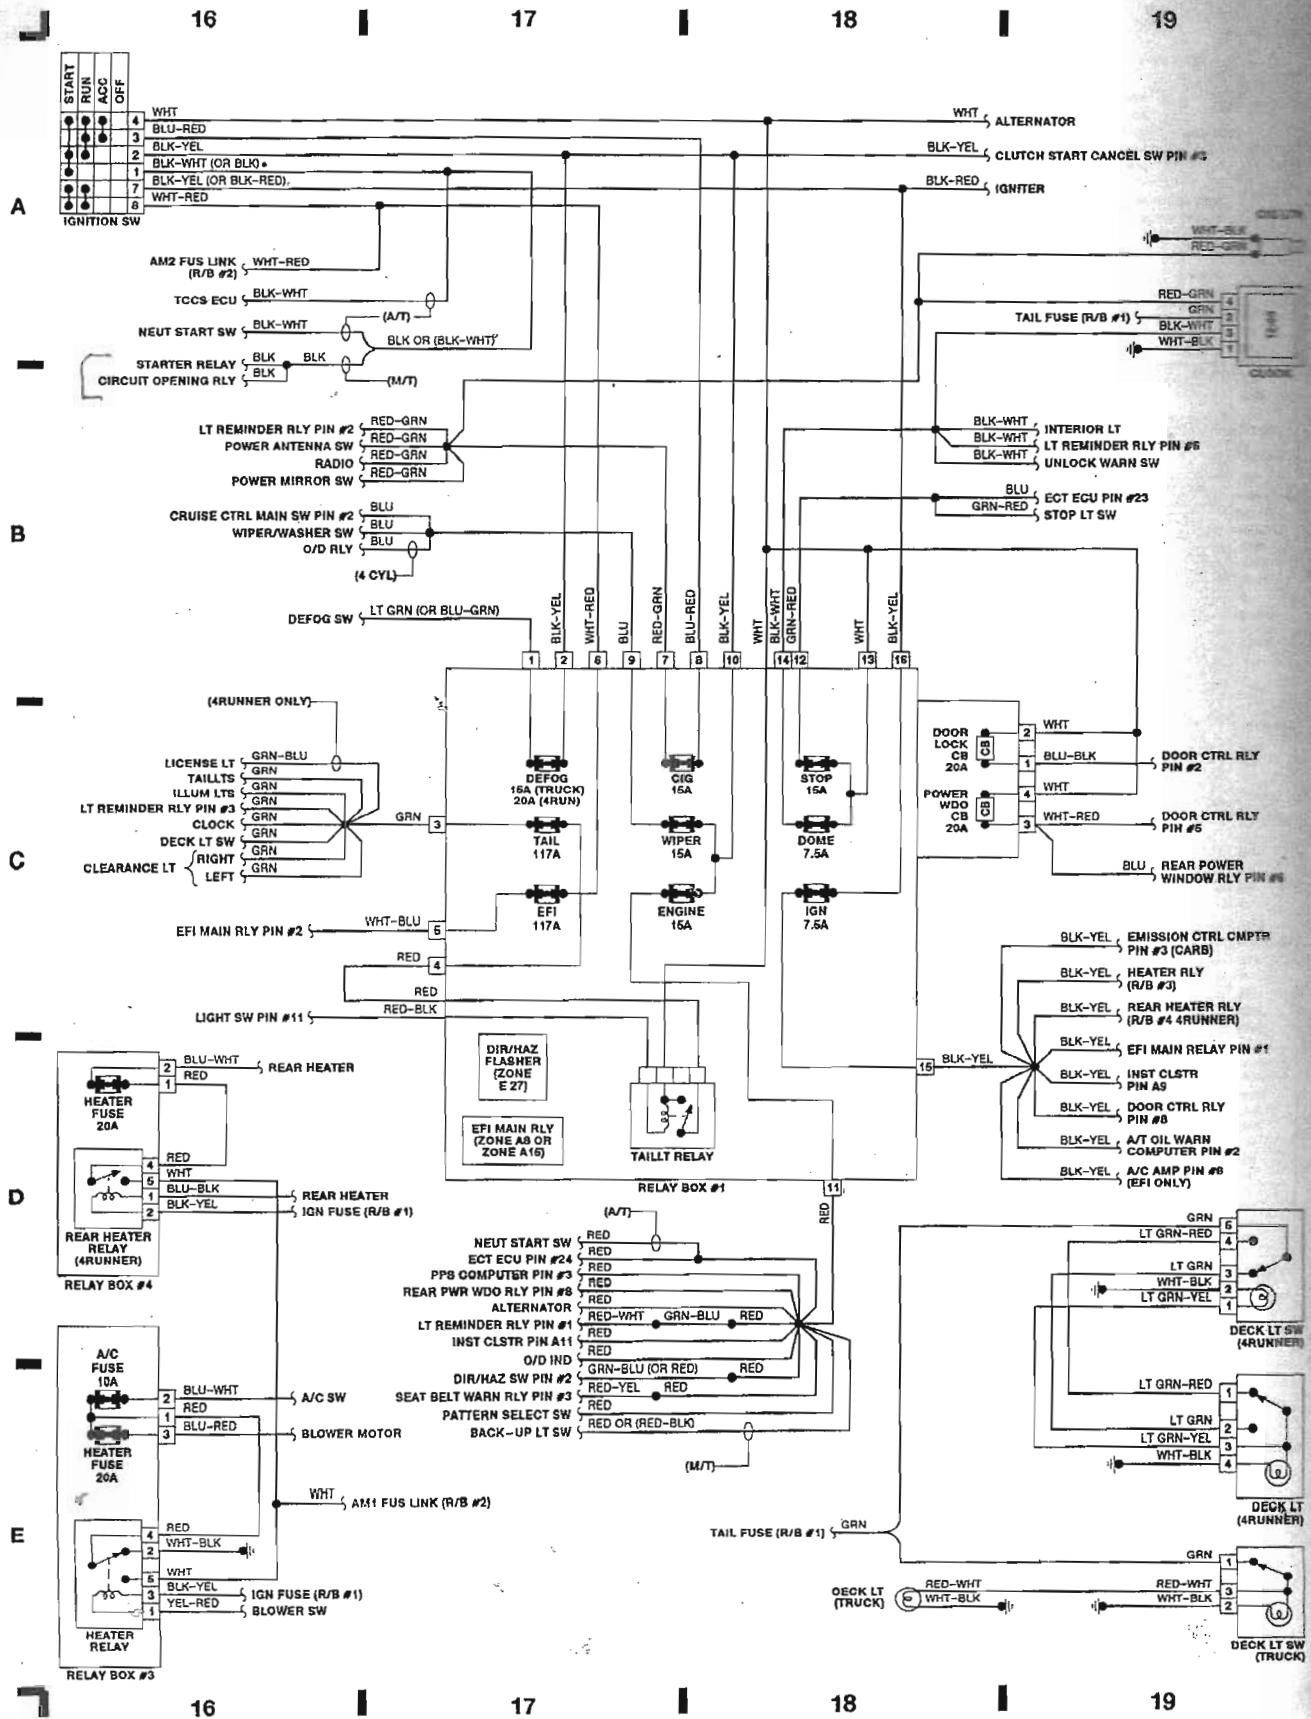


1988 TOYOTA Pickup & 4Runner (Cont.)

20

21

22

23

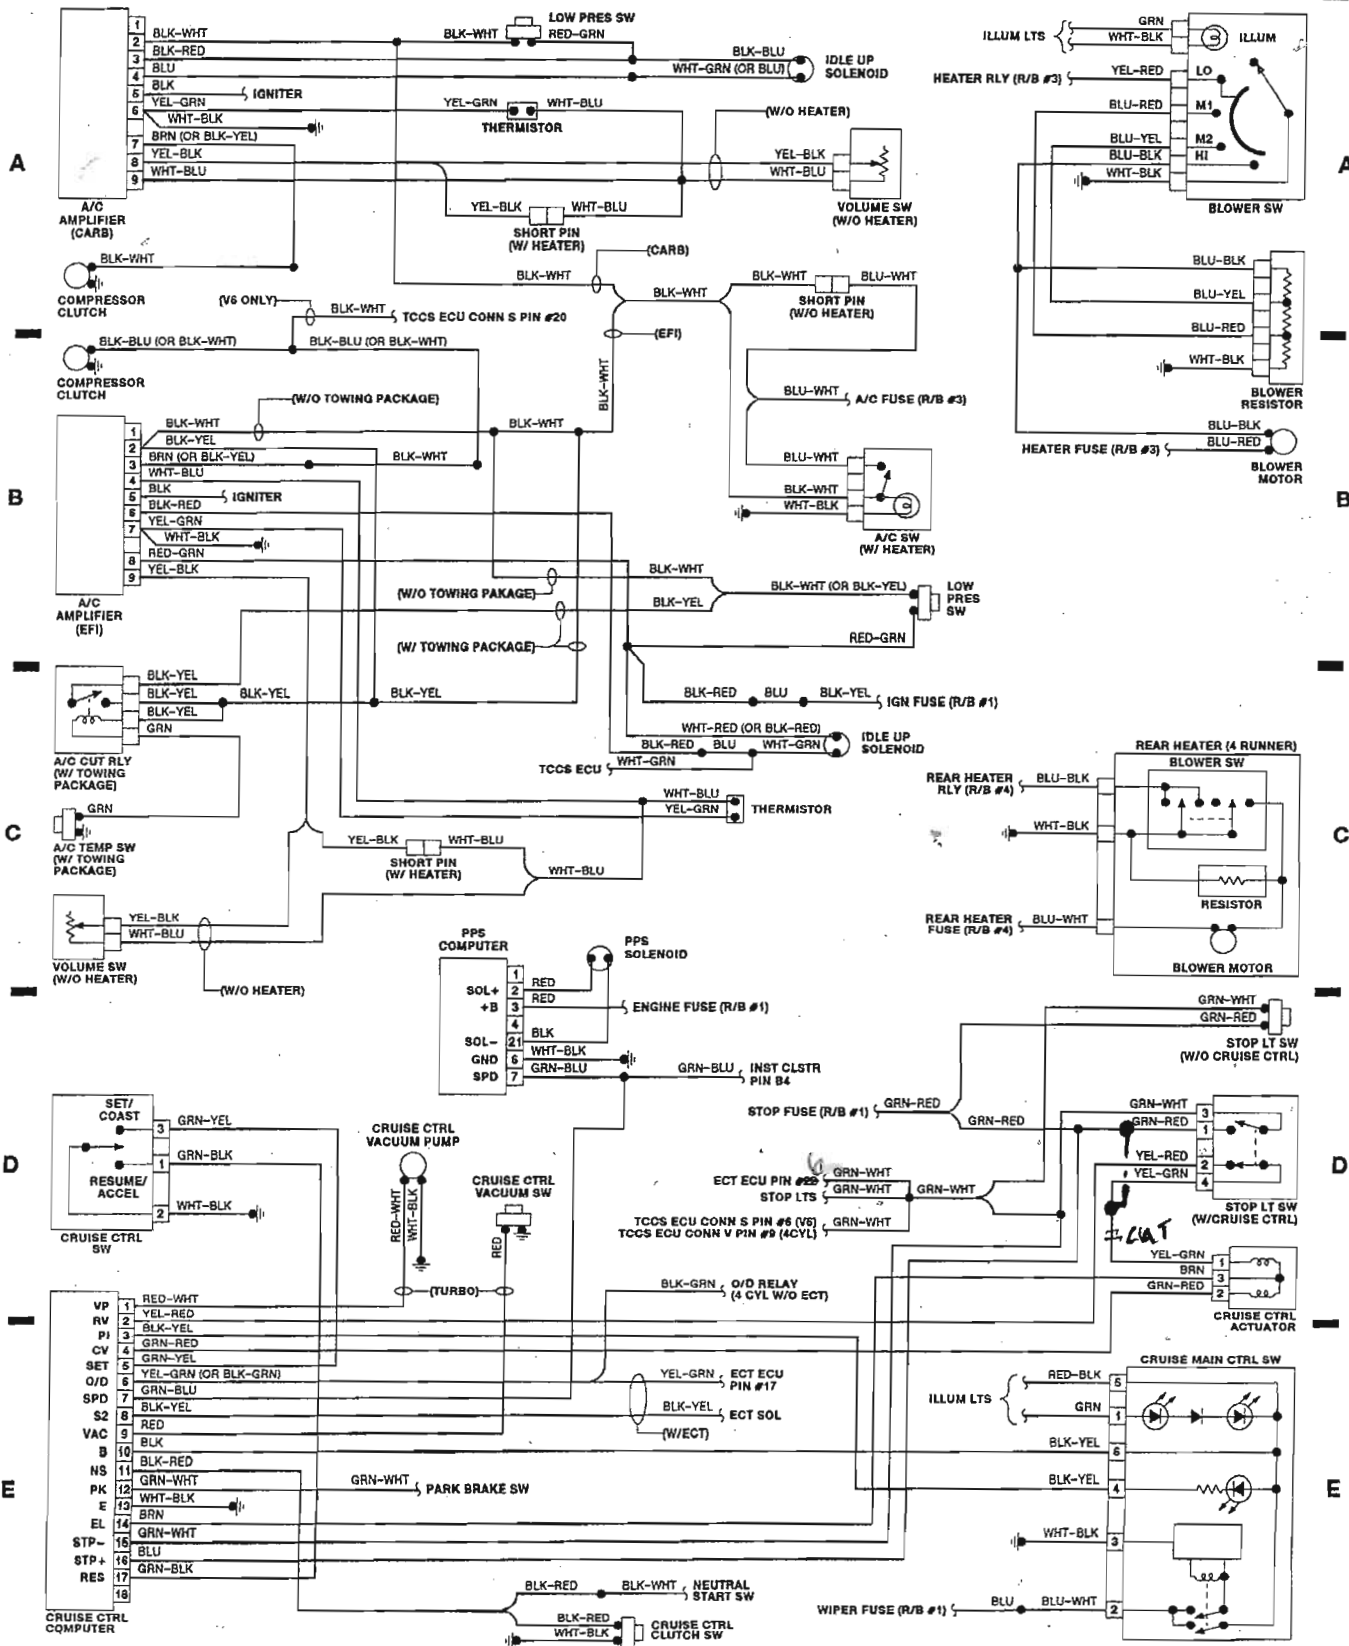

20

21

22

23