

## Troubleshooting Flashers

Symptom	Troubleshooting
• Signal lamps light, but don't flash	• Check and/or replace flasher
• Signal lamps do not operate on either side of vehicle	• Check and/or replace fuse
• Both signal lamps are out on one side of vehicle	• Check for bad lamps • Check grounding and wiring from turn signal lever
• One signal lamp is out on one side of vehicle	• Check and/or replace lamp
• Signal lamp flashes too rapidly on one side of vehicle	• Check and/or replace lamps • Check whether the proper lamp is installed (A heavy-duty lamp in a standard circuit will flash too rapidly.)
• Signal lamp flashes too slowly on one side of vehicle	• Check whether the proper lamp is installed (A standard lamp in a heavy-duty circuit will flash too slowly)