


# 4WD (M/T)

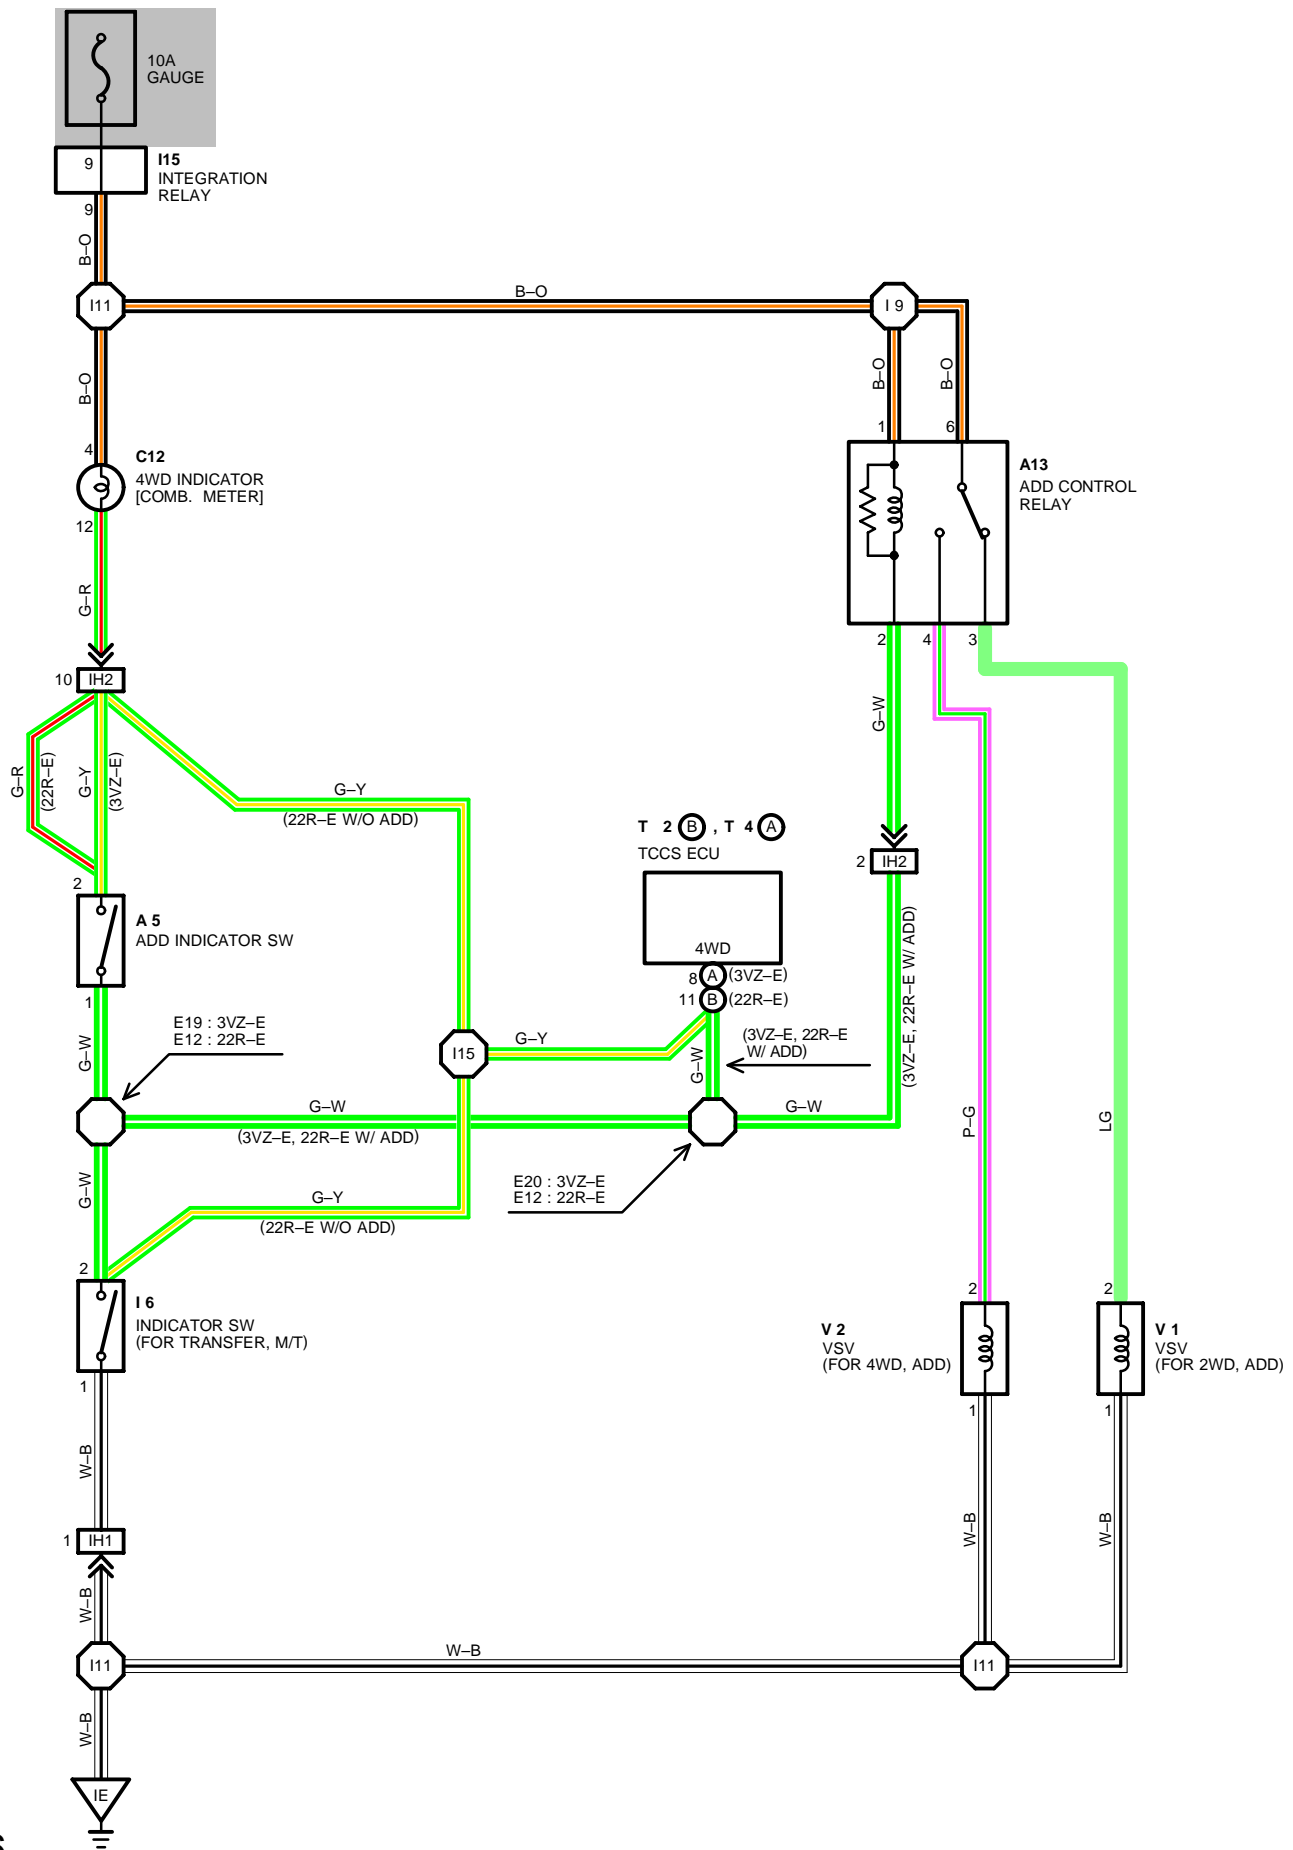

## SERVICE HINTS

### A13 ADD CONTROL RELAY

- 3-6 : CLOSED WITH IGNITION SW AT **ON** POSITION AND INDICATOR SW OFF  
 4-6 : CLOSED WITH IGNITION SW AT **ON** POSITION AND INDICATOR SW ON

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	22 (3VZ-E), 23 (22R-E)	I 6	22 (3VZ-E), 23 (22R-E)	T 4	A 24
A13	24	I15	24	V 1	22 (3VZ-E), 23 (22R-E)
C12	24	T 2	B 24	V 2	22 (3VZ-E), 23 (22R-E)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IH1	30	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IH2		

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	30	LEFT KICK PANEL

 
### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	28 (22R-E)	ENGINE WIRE	I 9	30	COWL WIRE
E19	26 (3VZ-E)		I11		
E20	26 (3VZ-E)		I15		30


A 5 DARK GRAY



A13




C12 BLUE

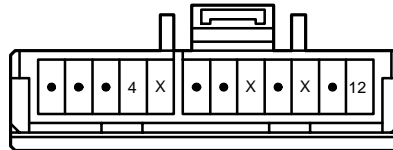


I 6




I15

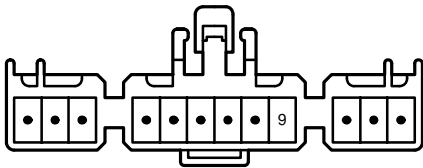

T 2 (B) DARK GRAY

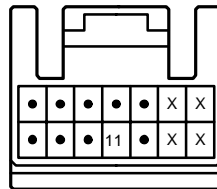

T 4 (A) DARK GRAY

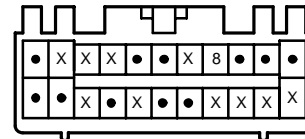

V 1 BROWN



V 2 BLUE

