


# K OVERALL ELECTRICAL WIRING DIAGRAM

\* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

206 HOW TO READ THIS SECTION

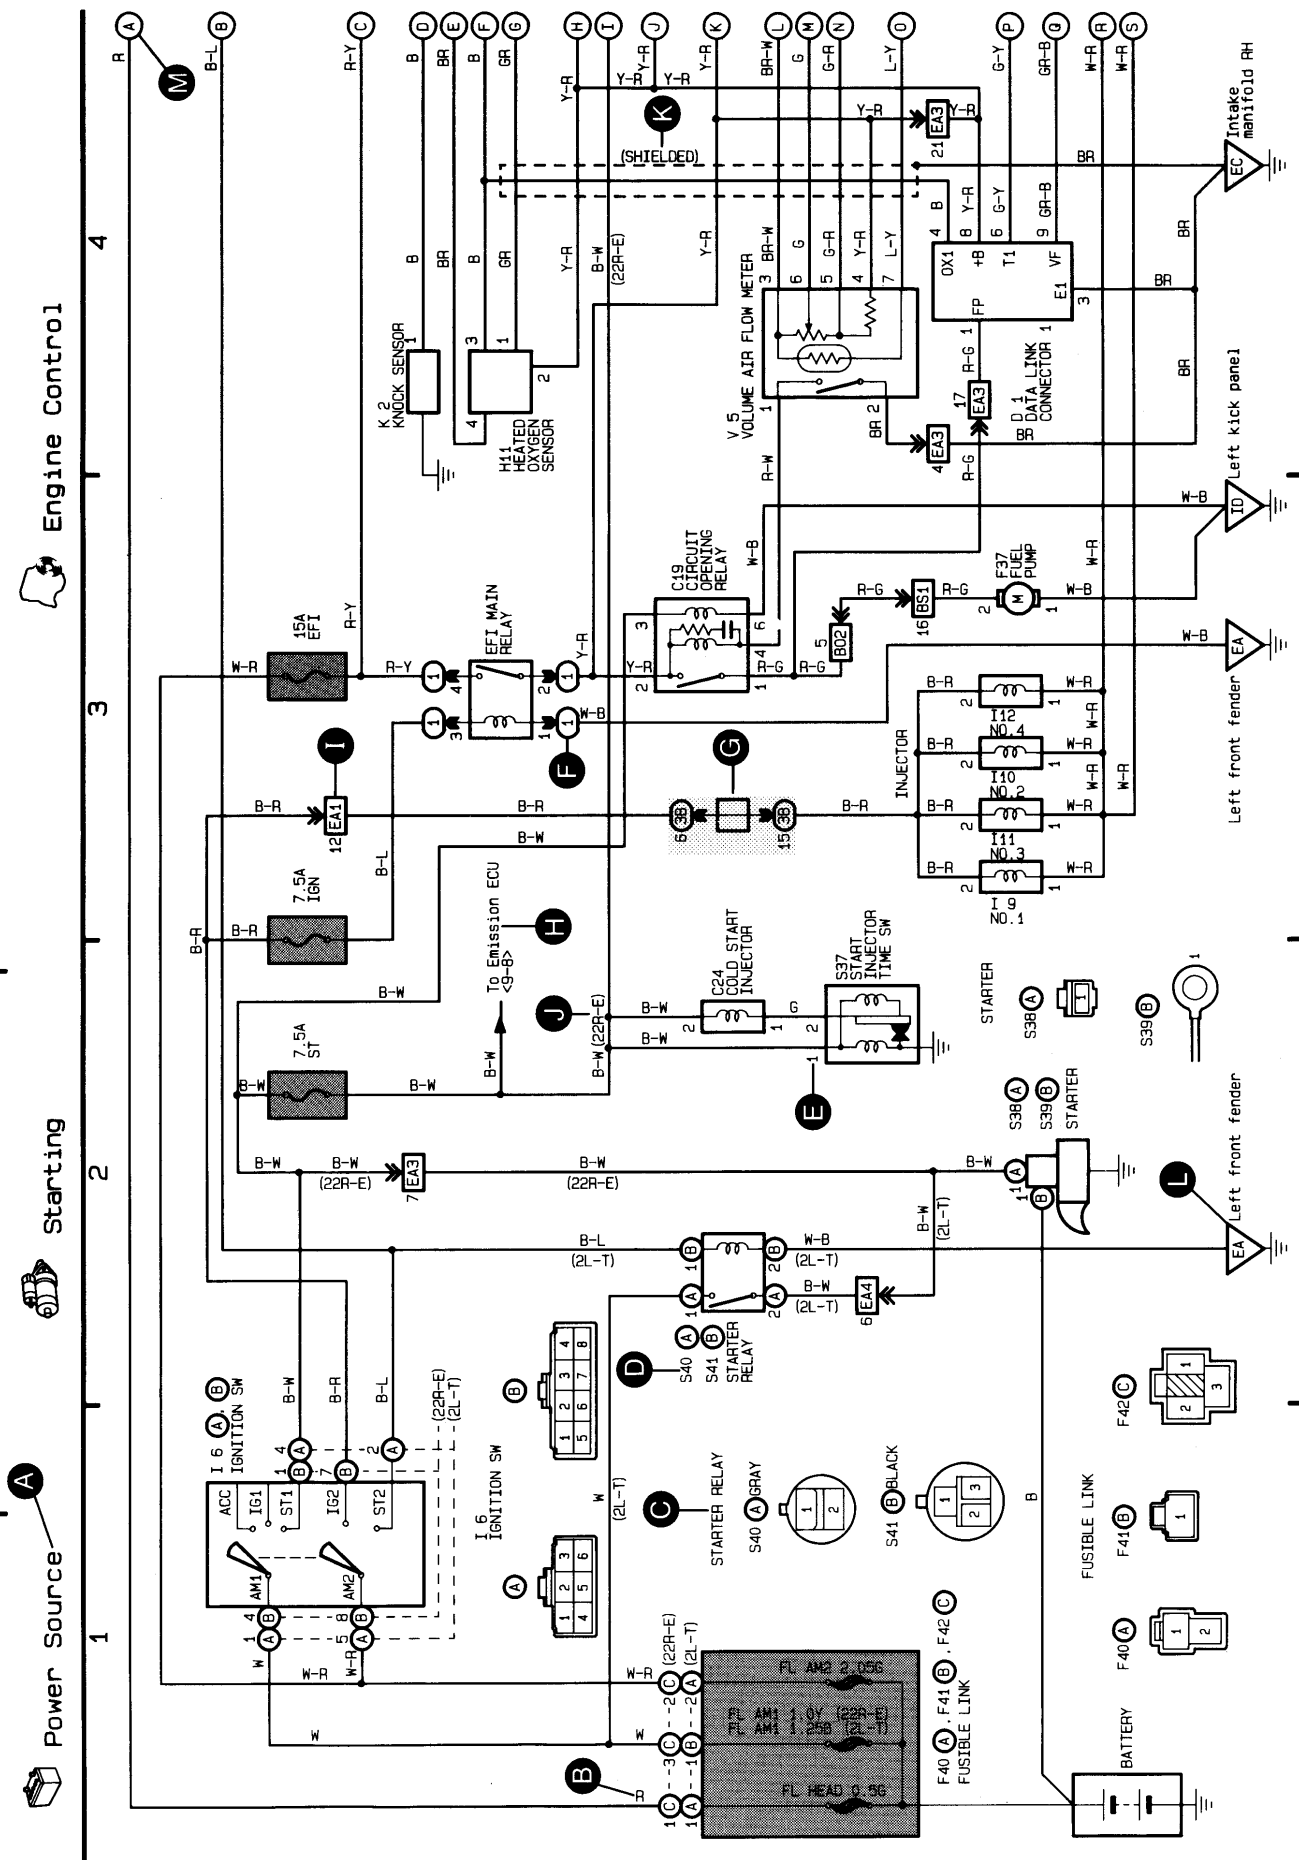

Power Source




Starting




Engine Control

1 2 3 4

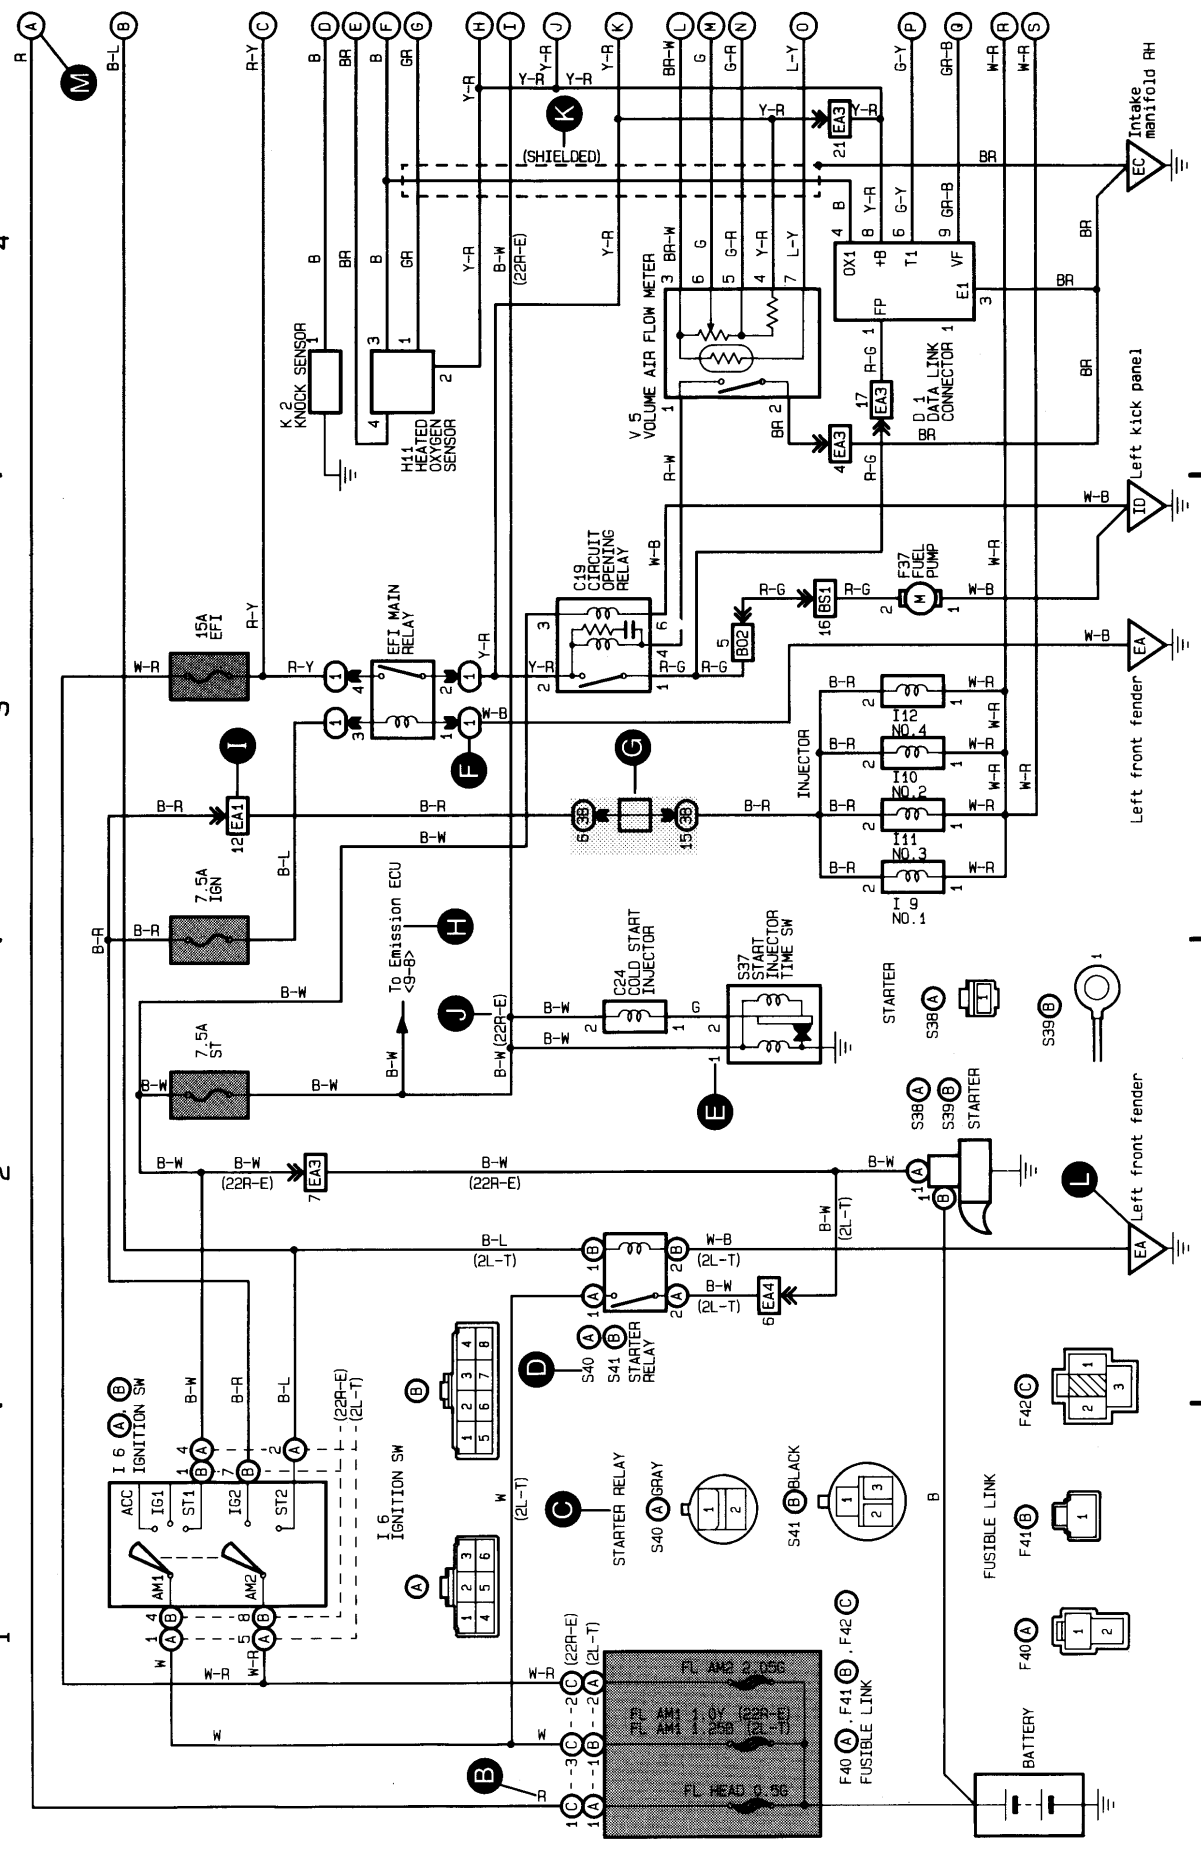


- G:** Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification).

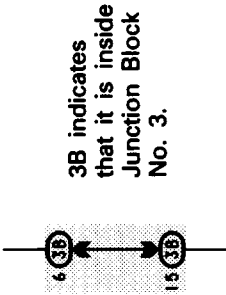

Example:

- H:** Indicates related system.
- I:** Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗).

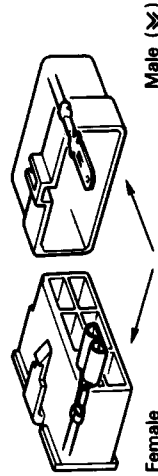

- J:** ( ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.
- K:** Indicates a shielded cable.




- L:** Indicates and located on ground point.
- M:** The same code occurring on the next page indicates that the wire harness is continuous.

- A:** System Title
- B:** Indicates the wiring color.

Wire colors are indicated by an alphabetical code.


- B = Black L = Blue R = Red
- BR = Brown LG = Light Green V = Violet
- G = Green O = Orange W = White
- GR = Gray P = Pink Y = Yellow

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

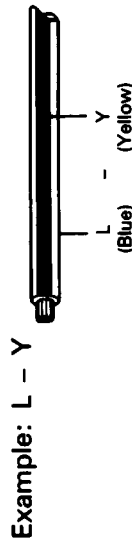

- C:** Indicates the connector to be connected to a part (the numeral indicates the pin No.)
- D:** The position of the parts is the same as shown in the wiring diagram and wire routing.
- E:** Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right

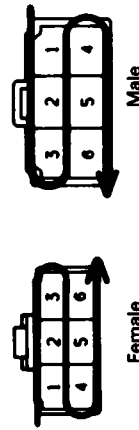
























 




The numbering system for the overall wiring diagram is the same as above.

- F:** Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.
- Example: **1** Indicates Relay Block No. 1.


# K OVERALL ELECTRICAL WIRING DIAGRAM

## SYSTEM INDEX

1996 Model (Location No. 1 to 24)


SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	15-2 	Engine Control	3-2 (5VZ-FE A/T) 4-2 (5VZ-FE M/T) 5-2 (3RZ-FE A/T) 6-2 (3RZ-FE M/T) 	SRS	16-2 
Air Conditioning	23-2 (5VZ-FE) 24-2 (3RZ-FE) 	Headlight	7-2 (USA) 8-2 (Canada) 	Starting	1-2 (5VZ-FE) 2-2 (3RZ-FE) 
Auto Antenna	20-2 	Horn	11-4 	Stop Light	14-4 
Back-Up Light	16-4 	Ignition	1-4 (5VZ-FE) 2-4 (3RZ-FE) 	Taillight and Illumination	10-2 
Charging	2-3 	Interior Light	9-4 	Turn Signal and Hazard Warning Light	11-3 
Cigarette Lighter and Clock	20-3 	Light Reminder Buzzer	18-4 	Unlock and Seat Belt Warning	9-2 
Combination Meter	21-2 (w/ Tachometer) 22-2 (w/o Tachometer) 	Power Source	1~24-1 	Wiper and Washer	11-2 
Cruise Control	14-2 	Power Window	17-4 	4WD	7-3 
Door Lock Control	17-2 	Radio and Player	19-2 		
Electronically Controlled Transmission and A/T Indicator	12-2 (5VZ-FE) 13-2 (3RZ-FE) 	Remote Control Mirror	18-2 		

# 1 TOYOTA T100

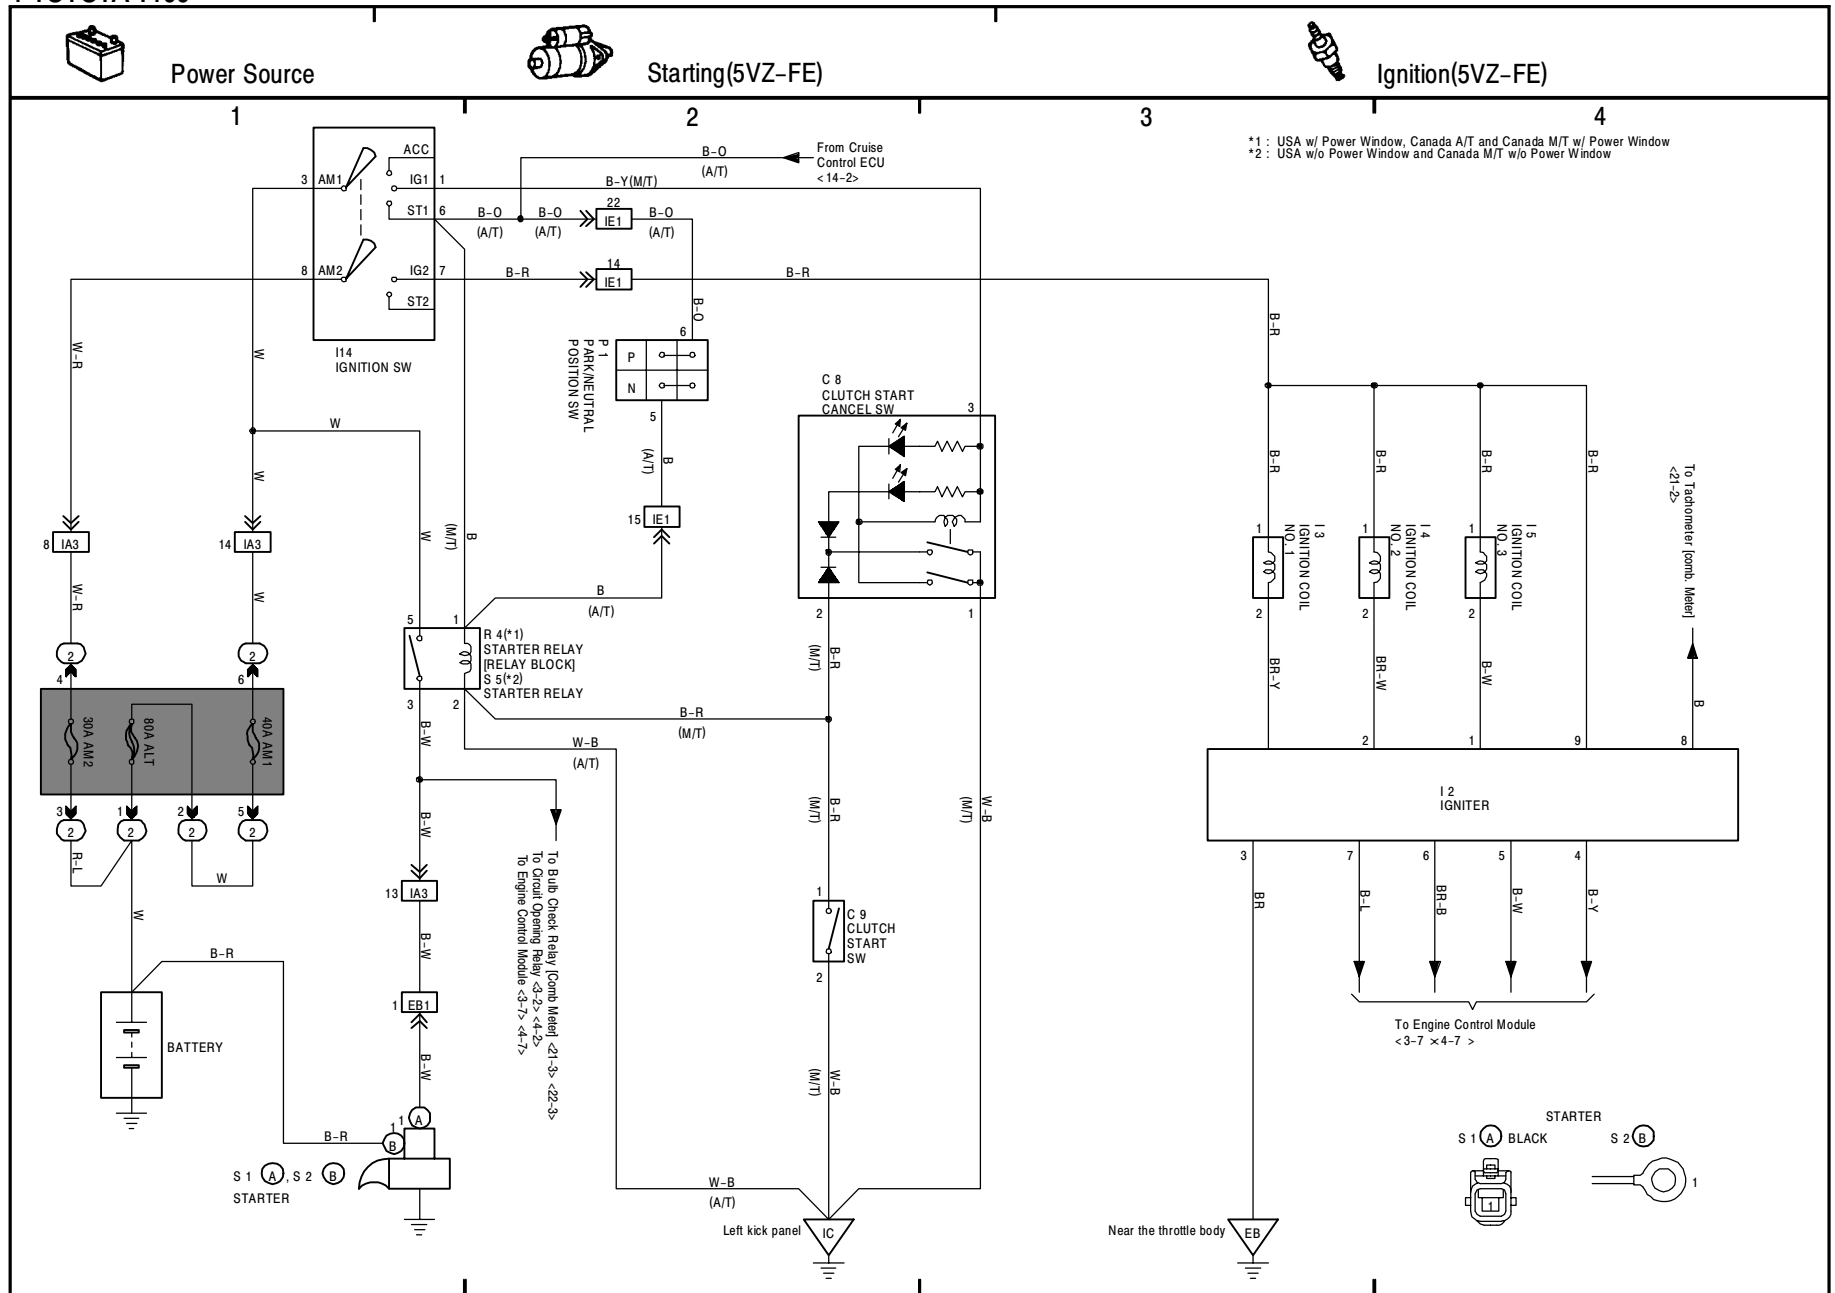


2 TOYOTA T100

K OVERALL ELECTRICAL WIRING DIAGRAM

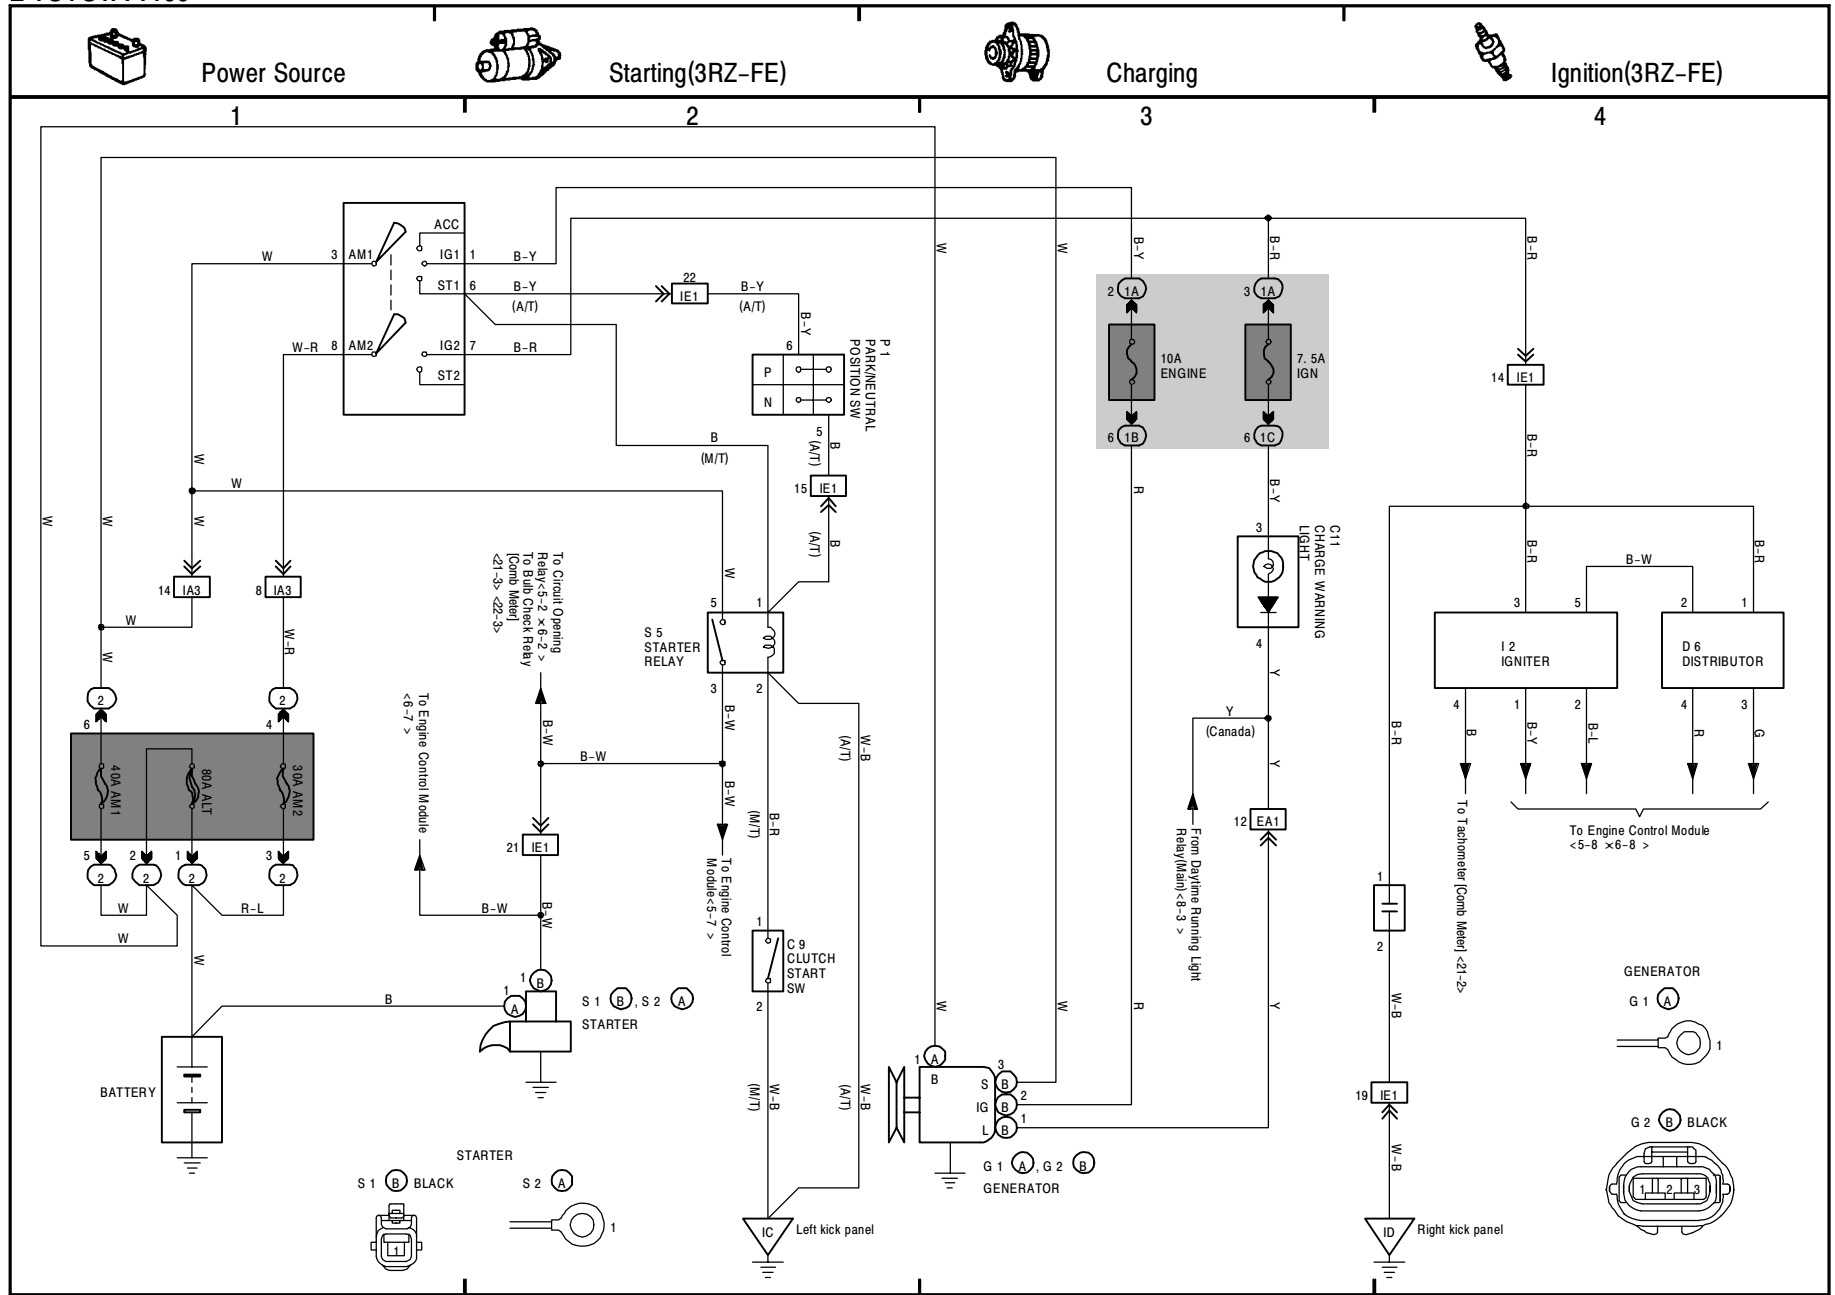




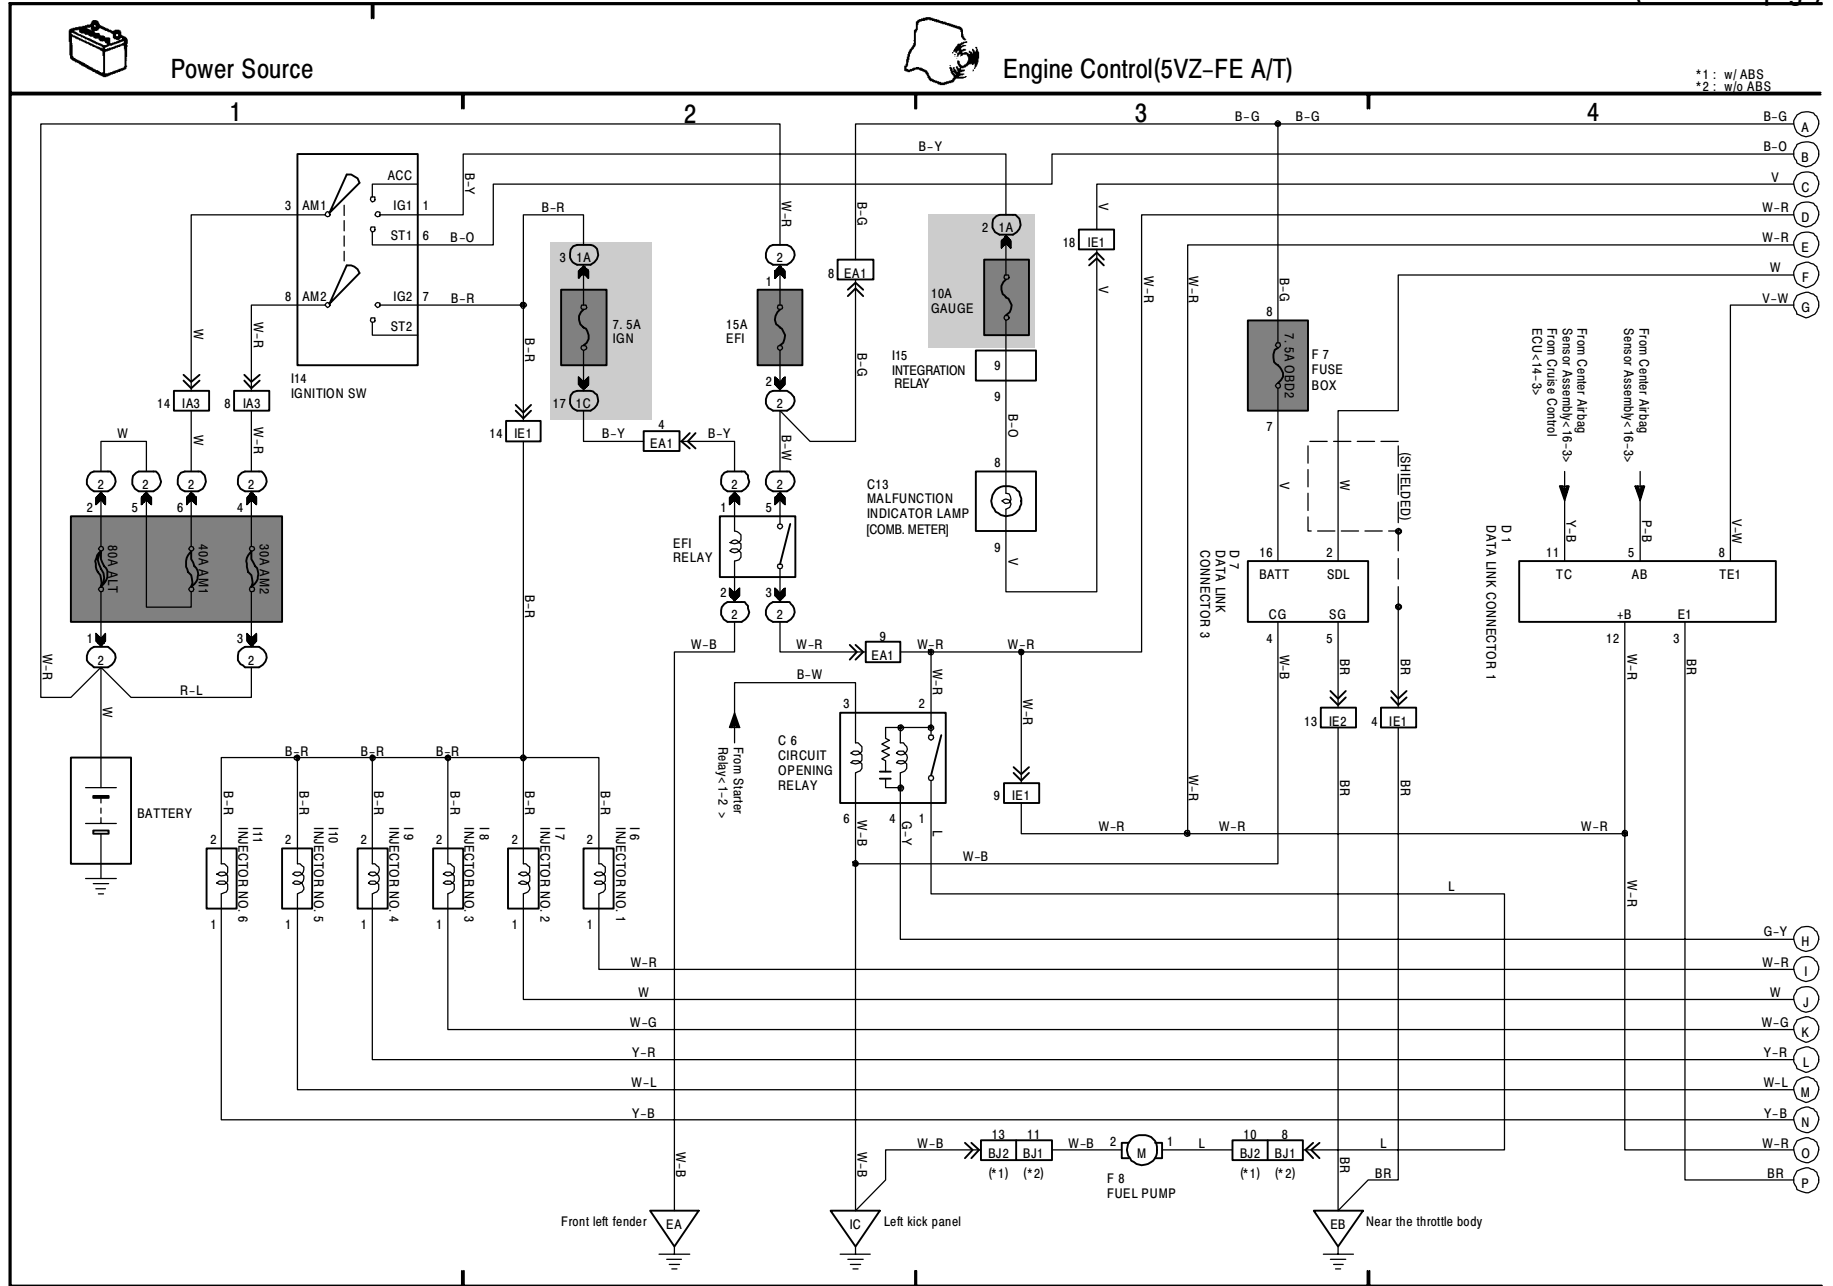


# 3 TOYOTA T100(Cont' d)



## Engine Control(5VZ-FE A/T)

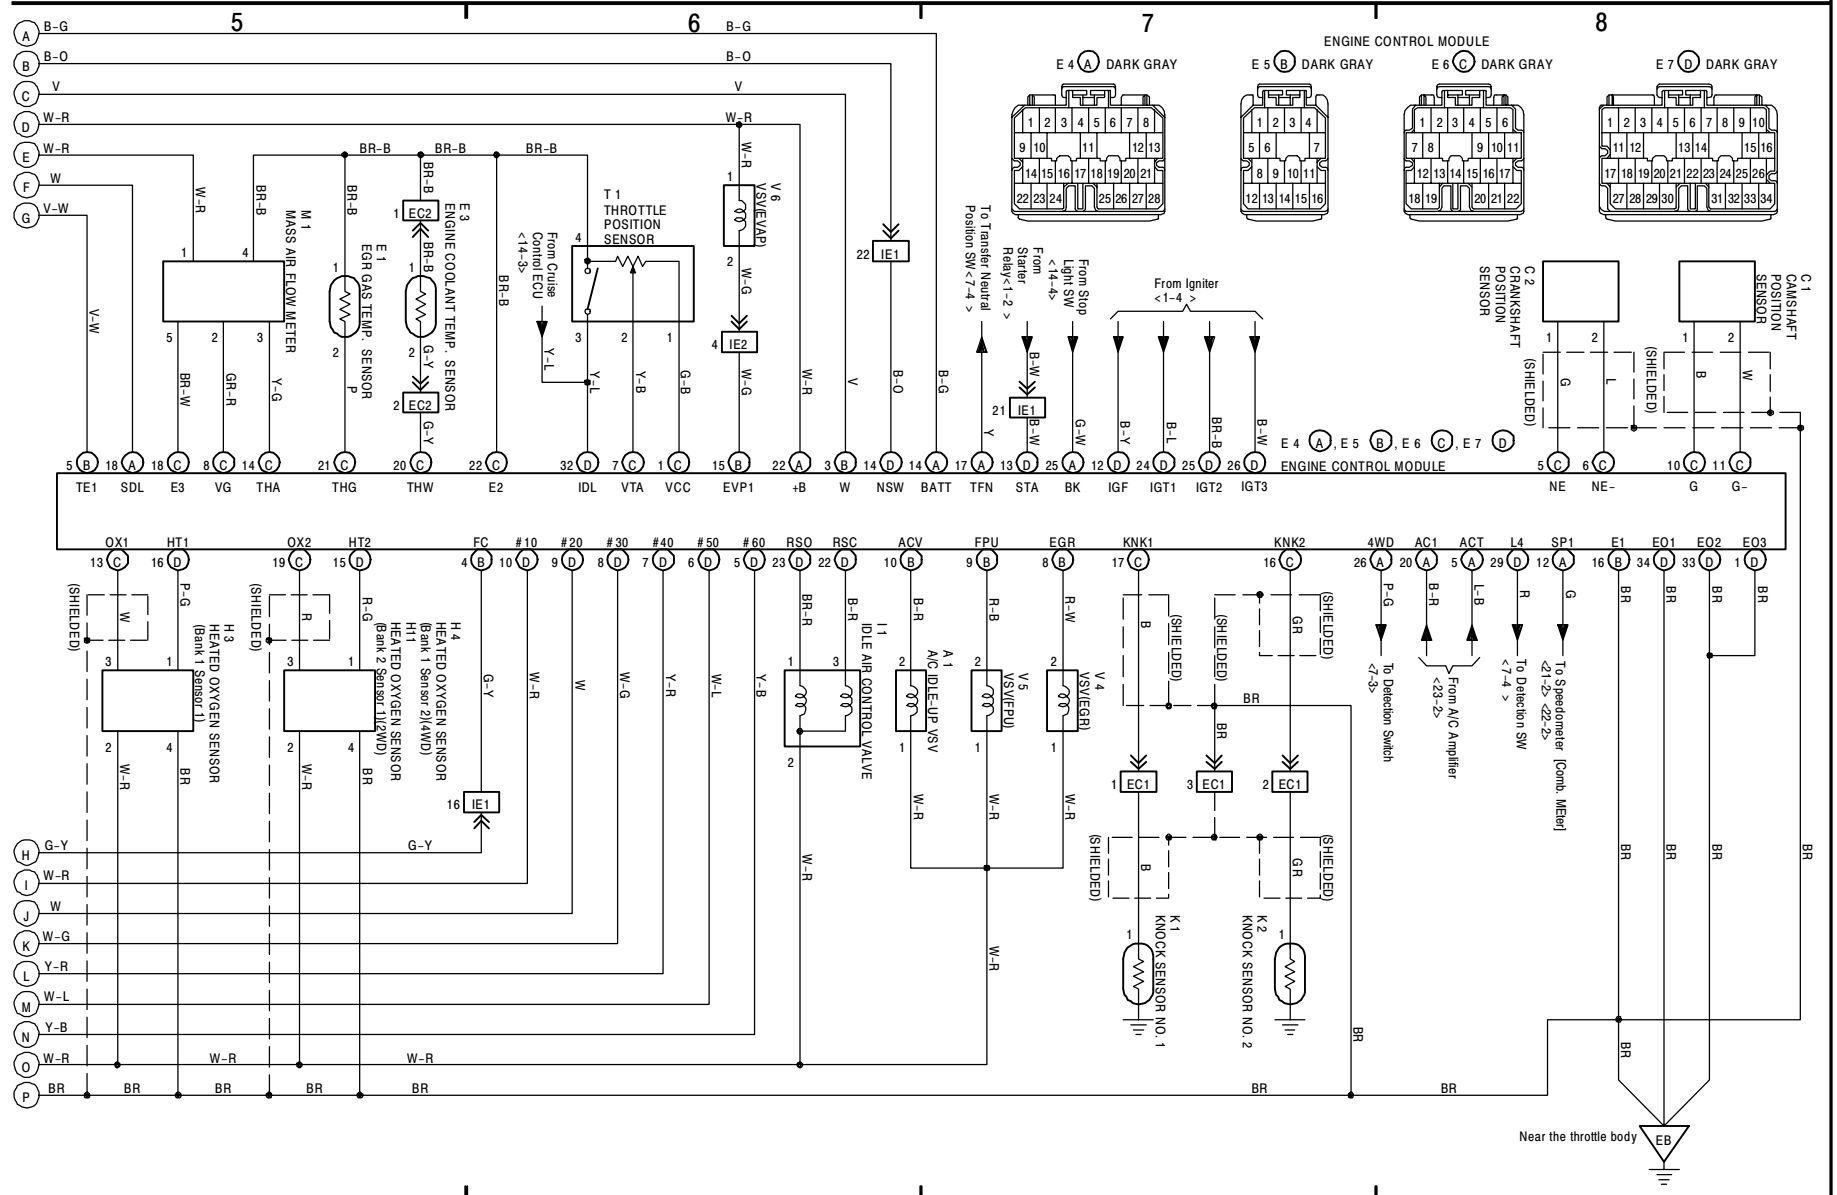




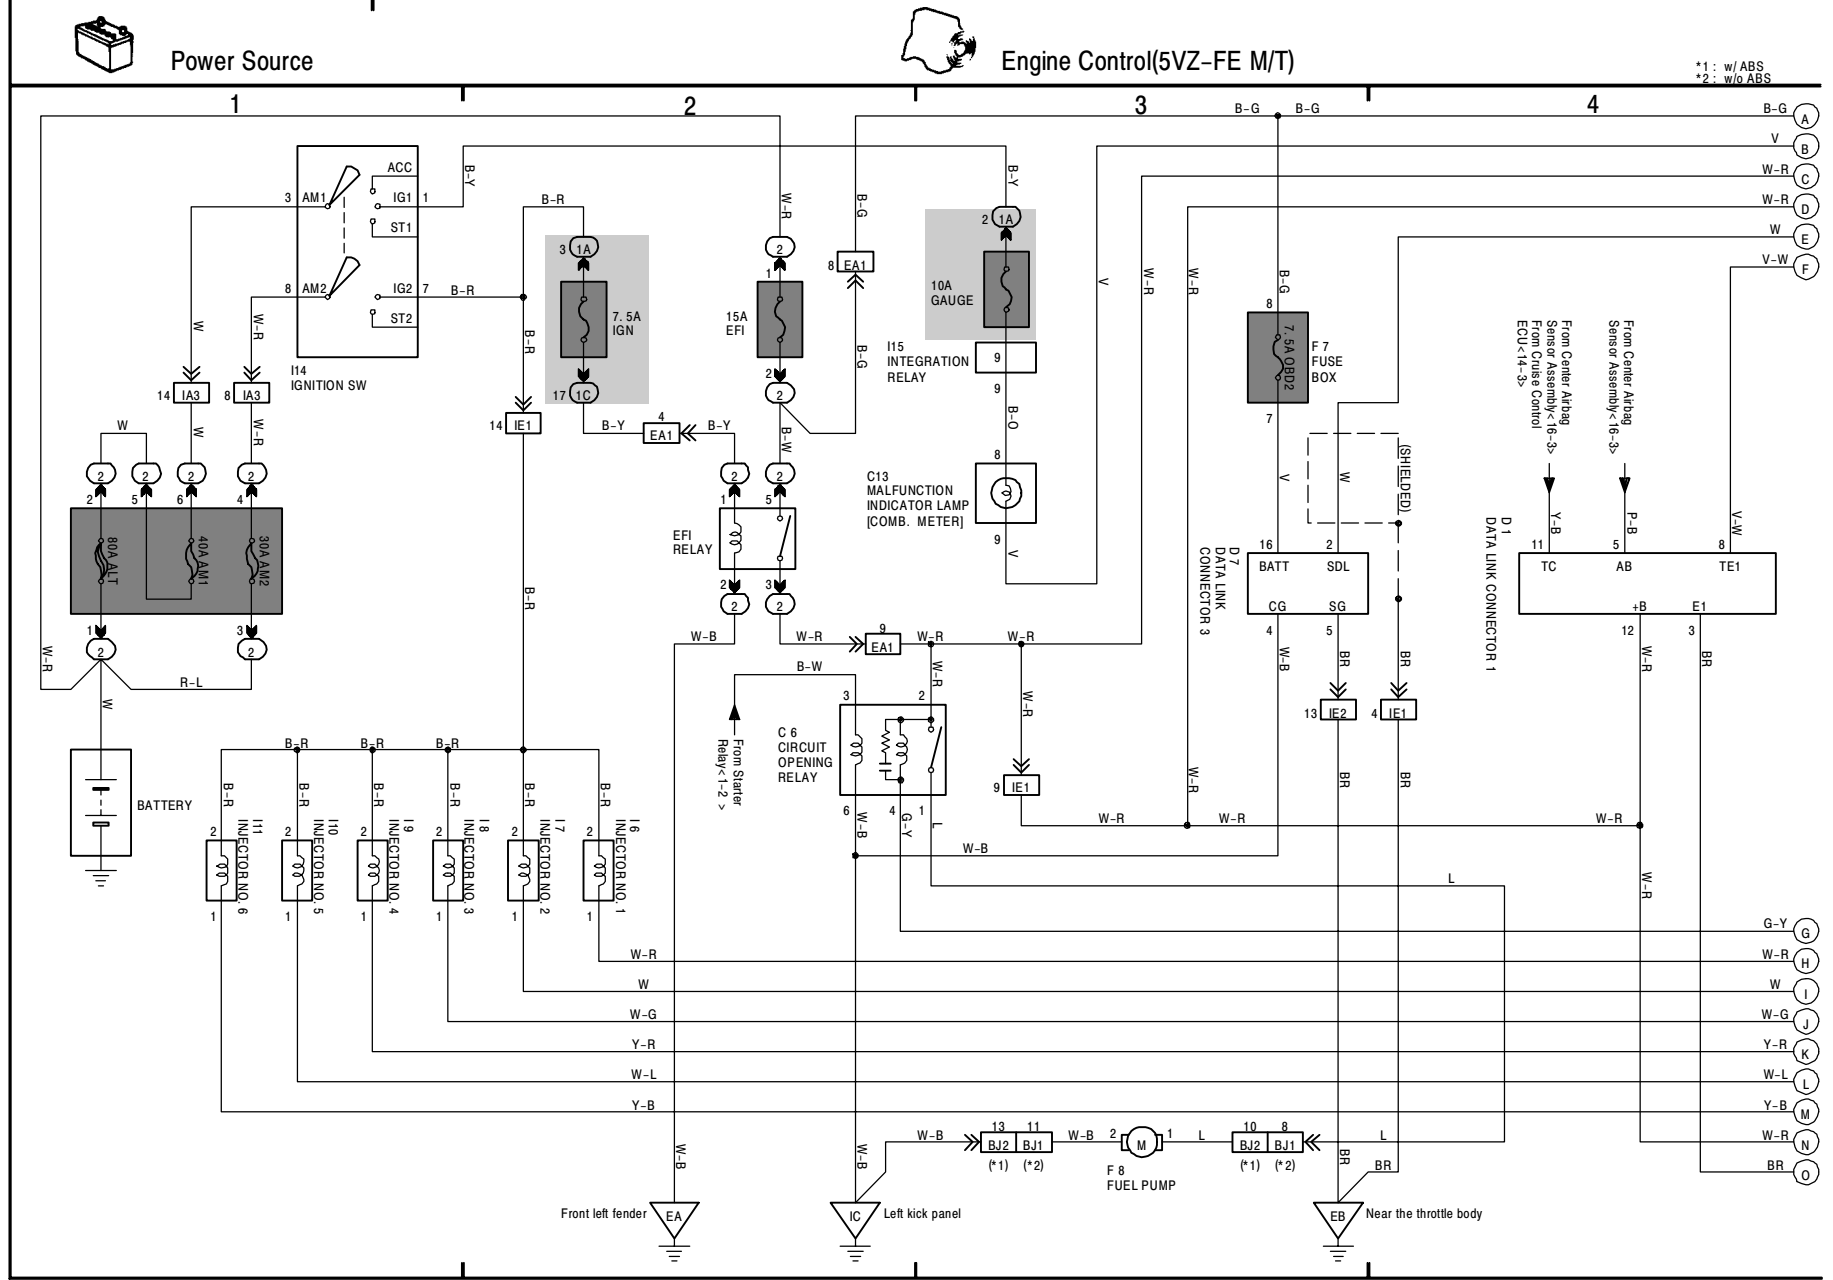


# 4 TOYOTA T100(Cont' d)



## Engine Control(5VZ-FE M/T)

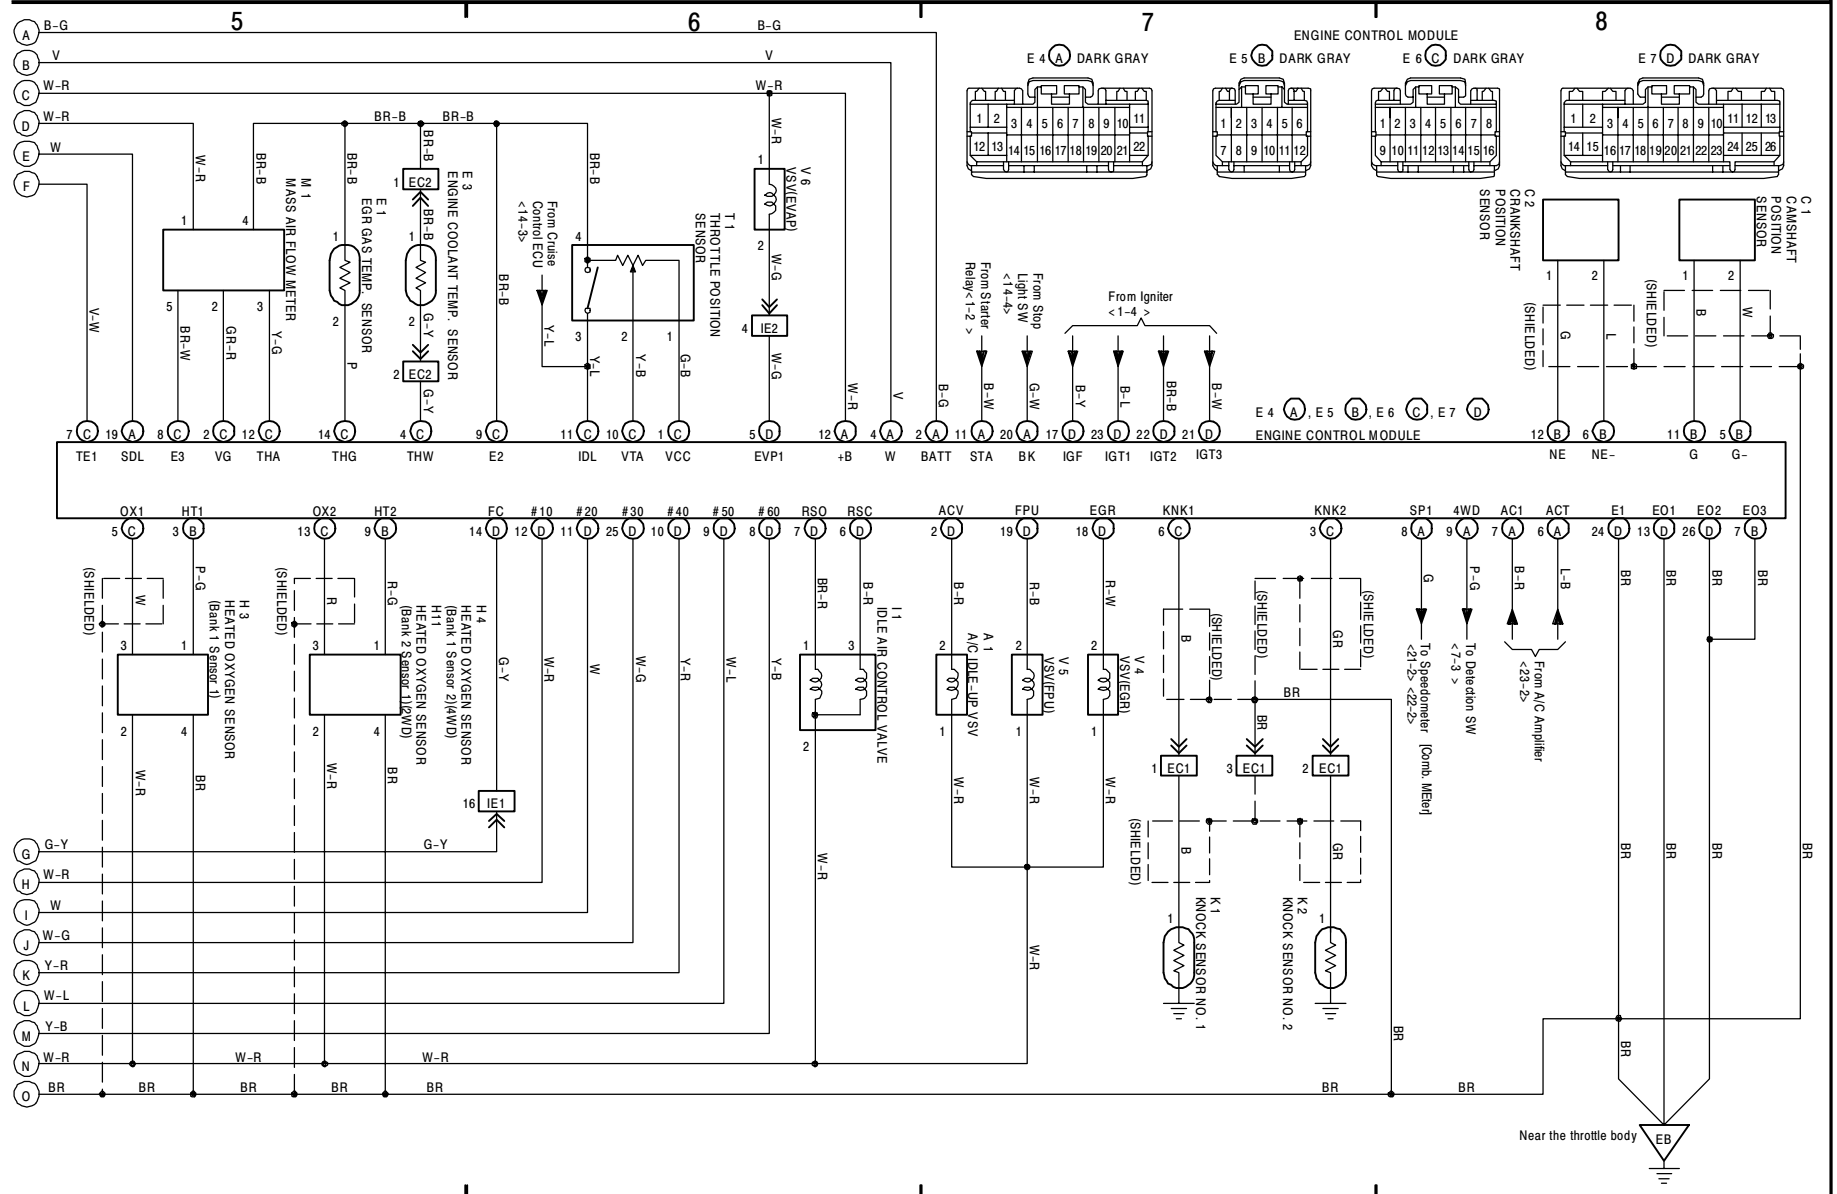


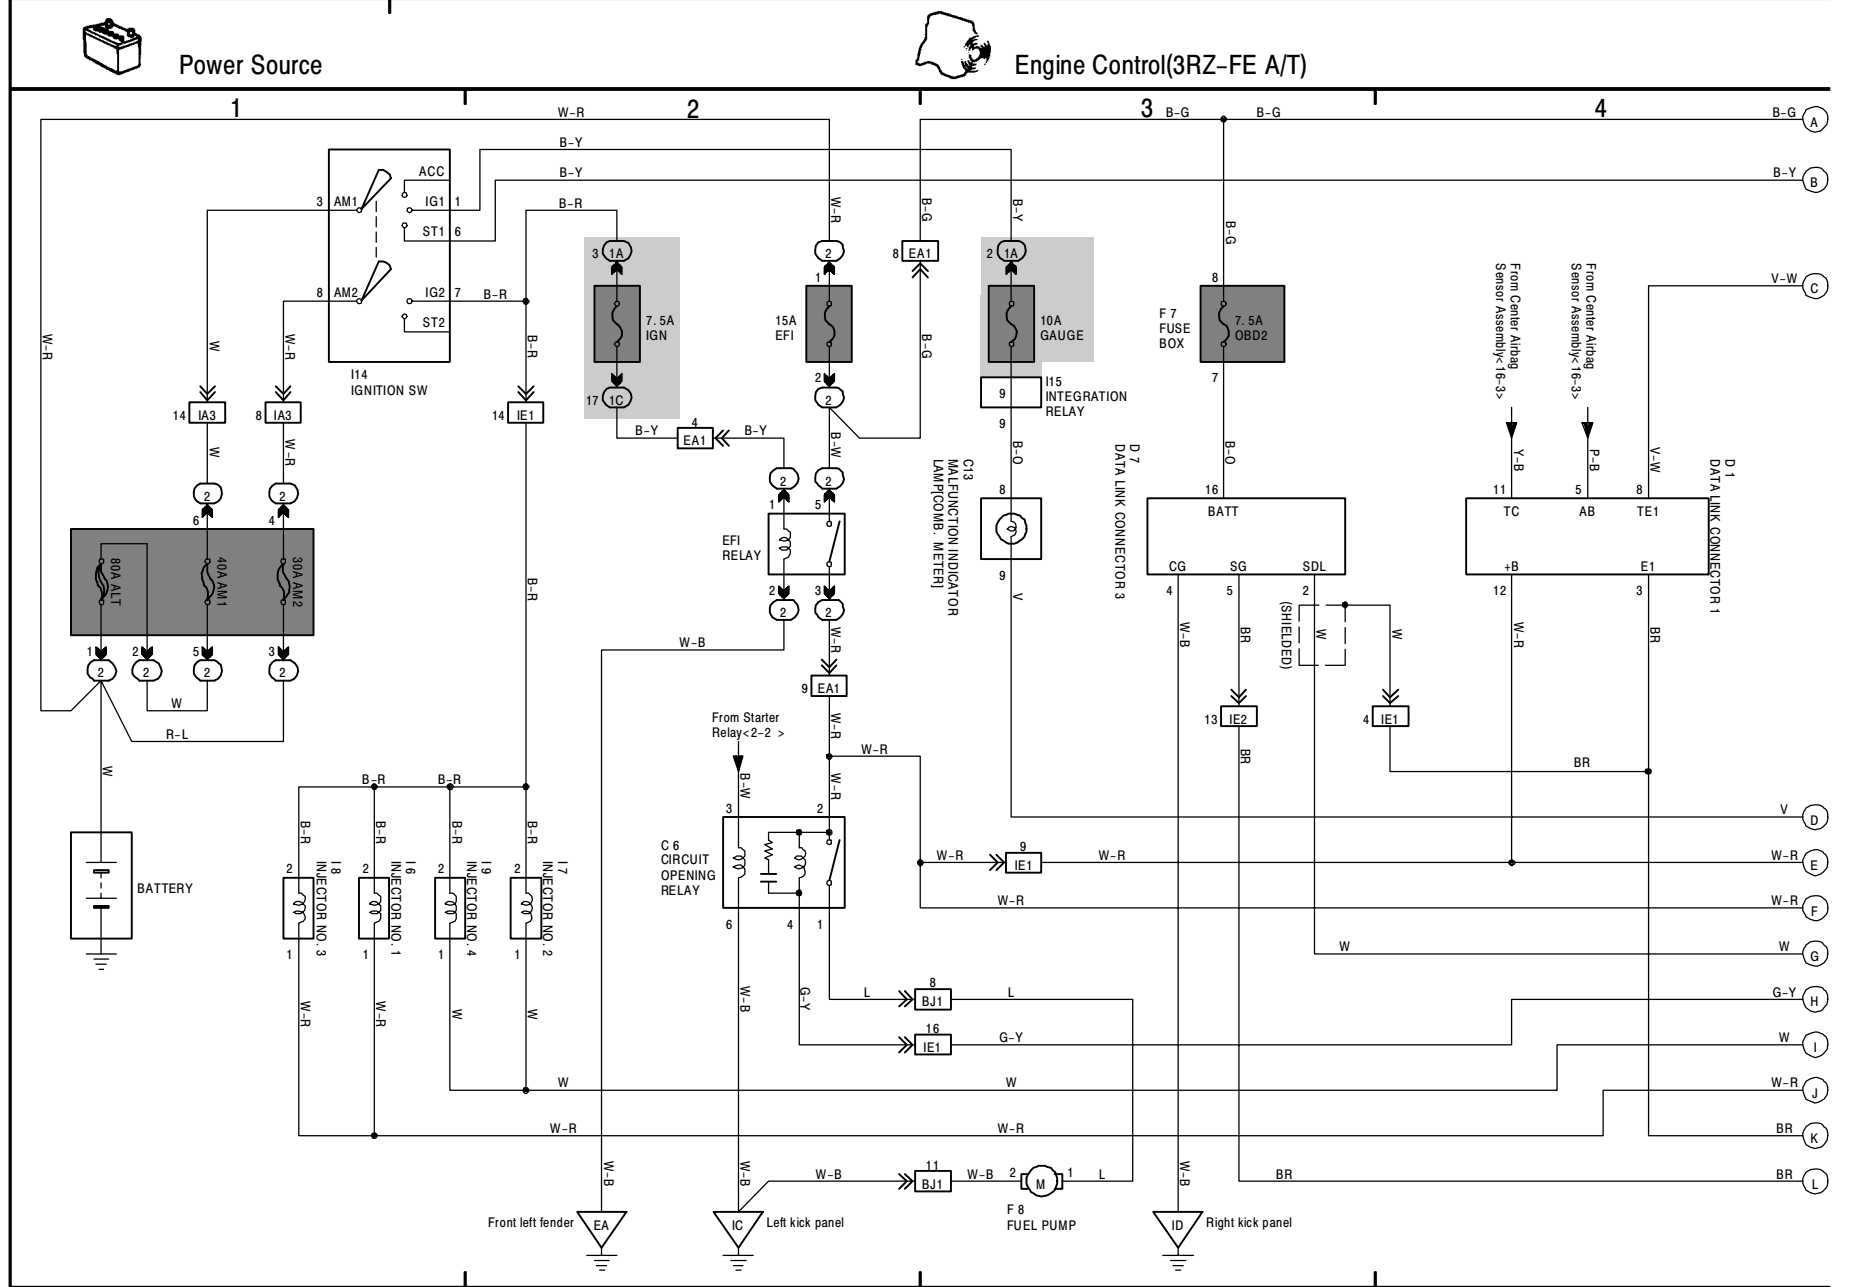

5 TOYOTA T100(Cont' d)



Engine Control(3RZ-FE A/T)

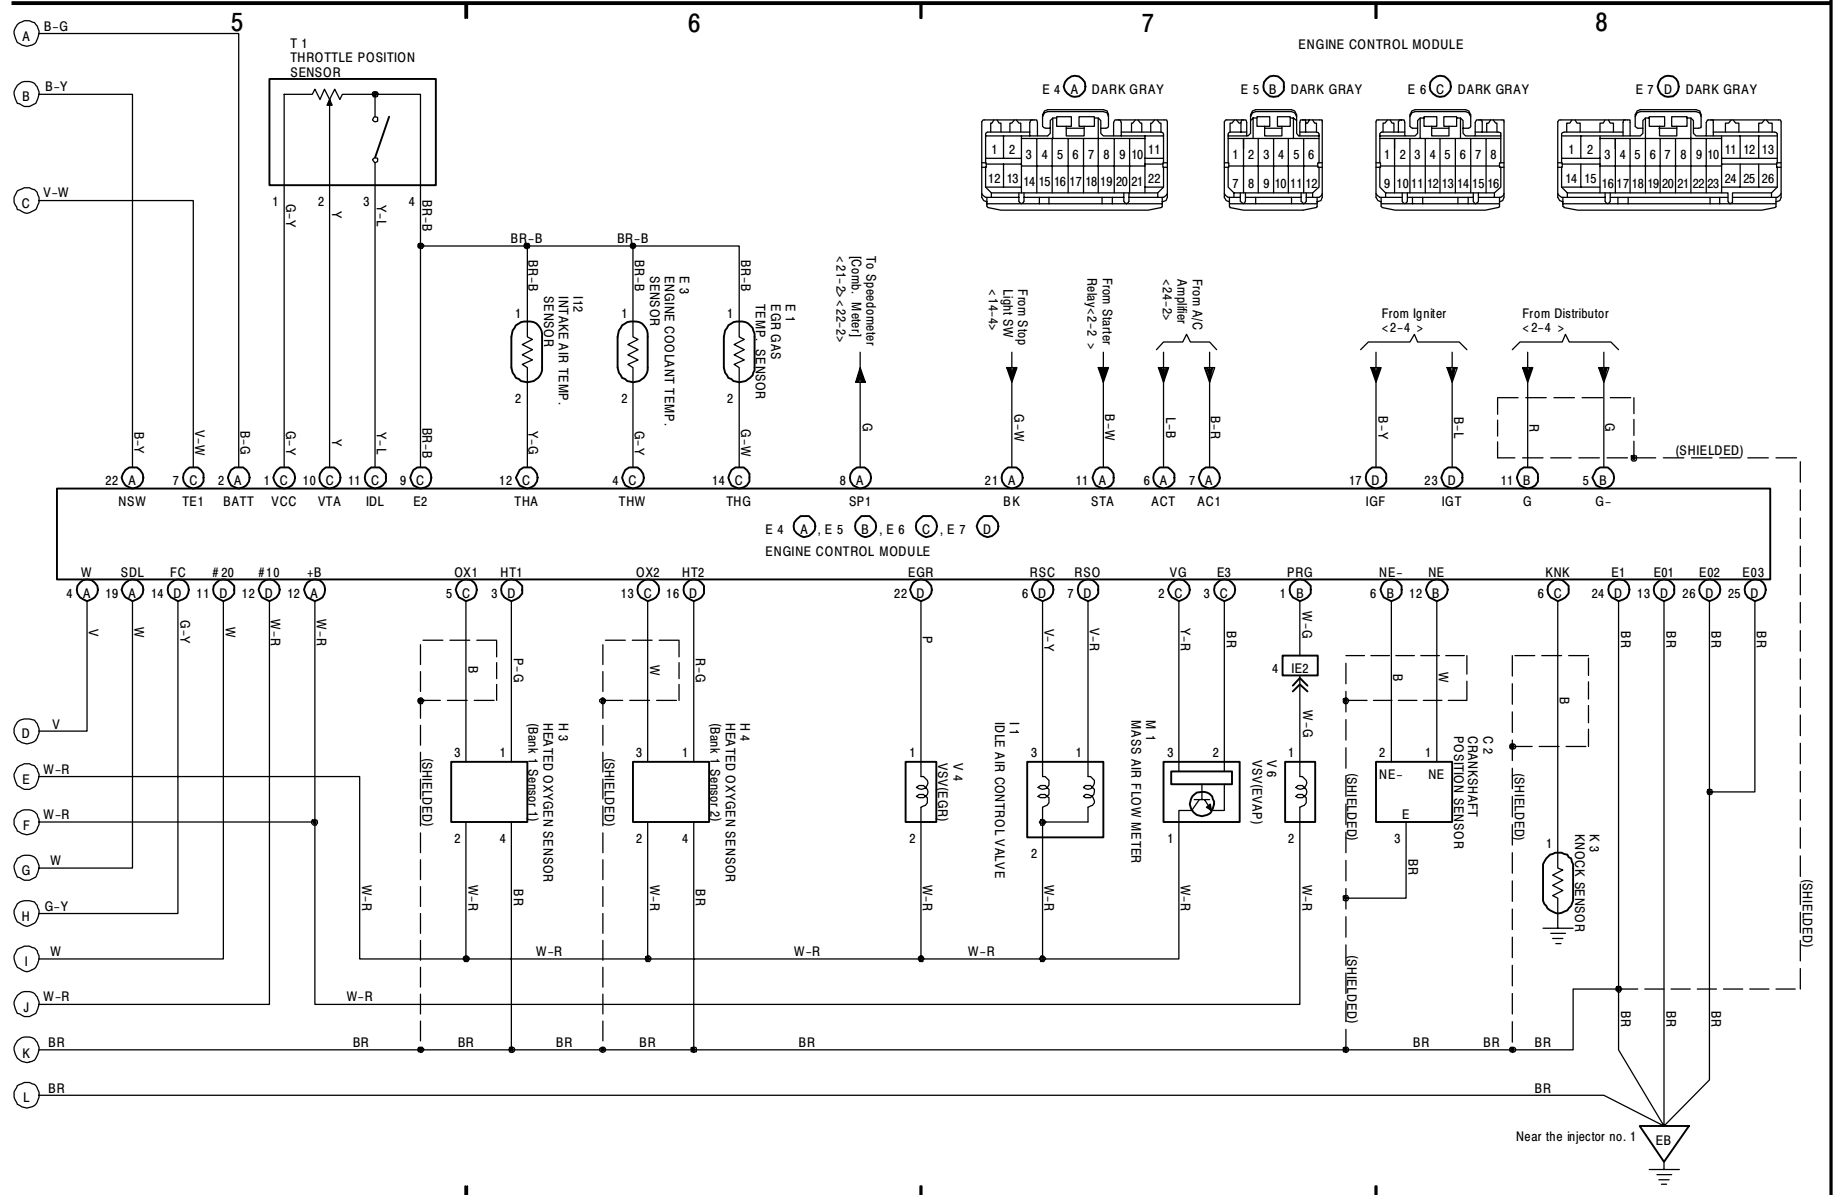




Power Source




Engine Control(3RZ-FE M/T)

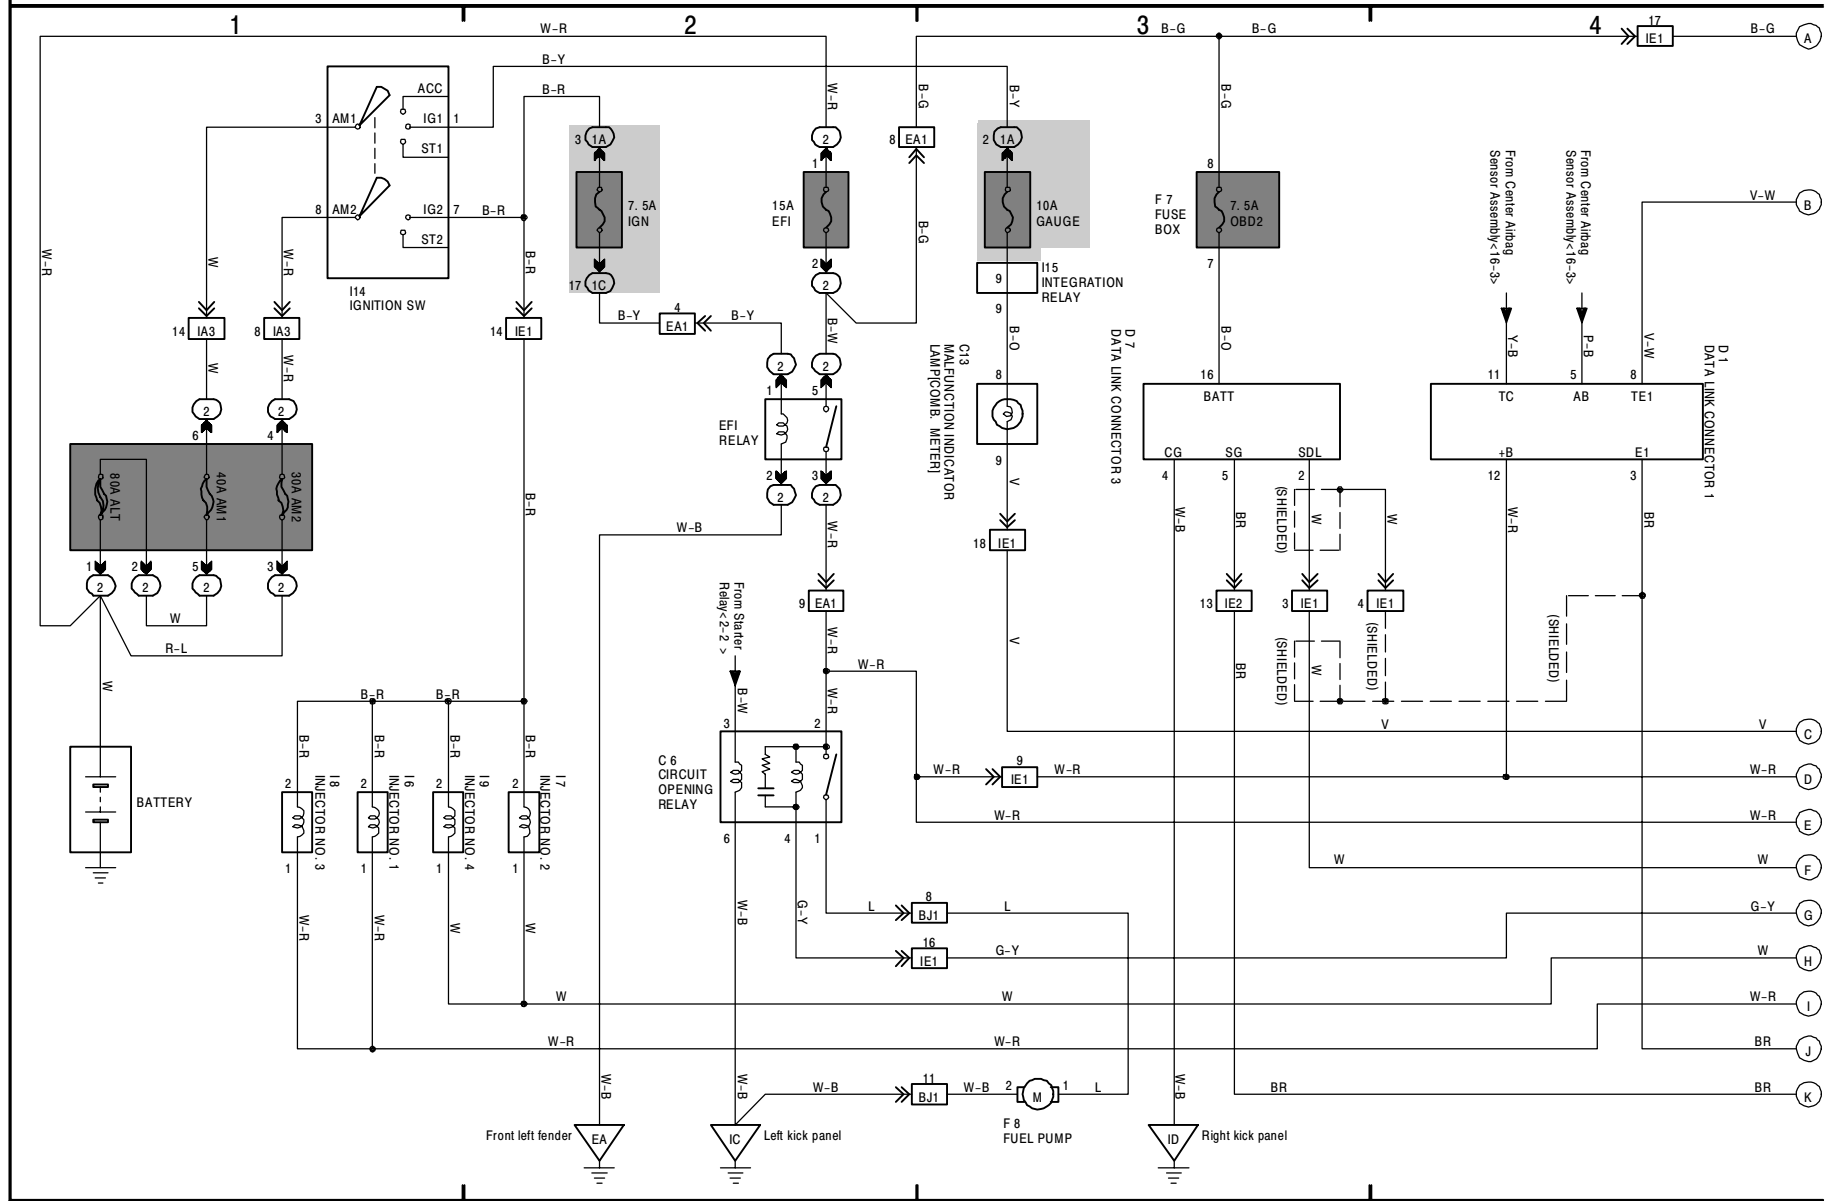


6 TOYOTA T100(Cont' d)




Engine Control(3RZ-FE M/T)

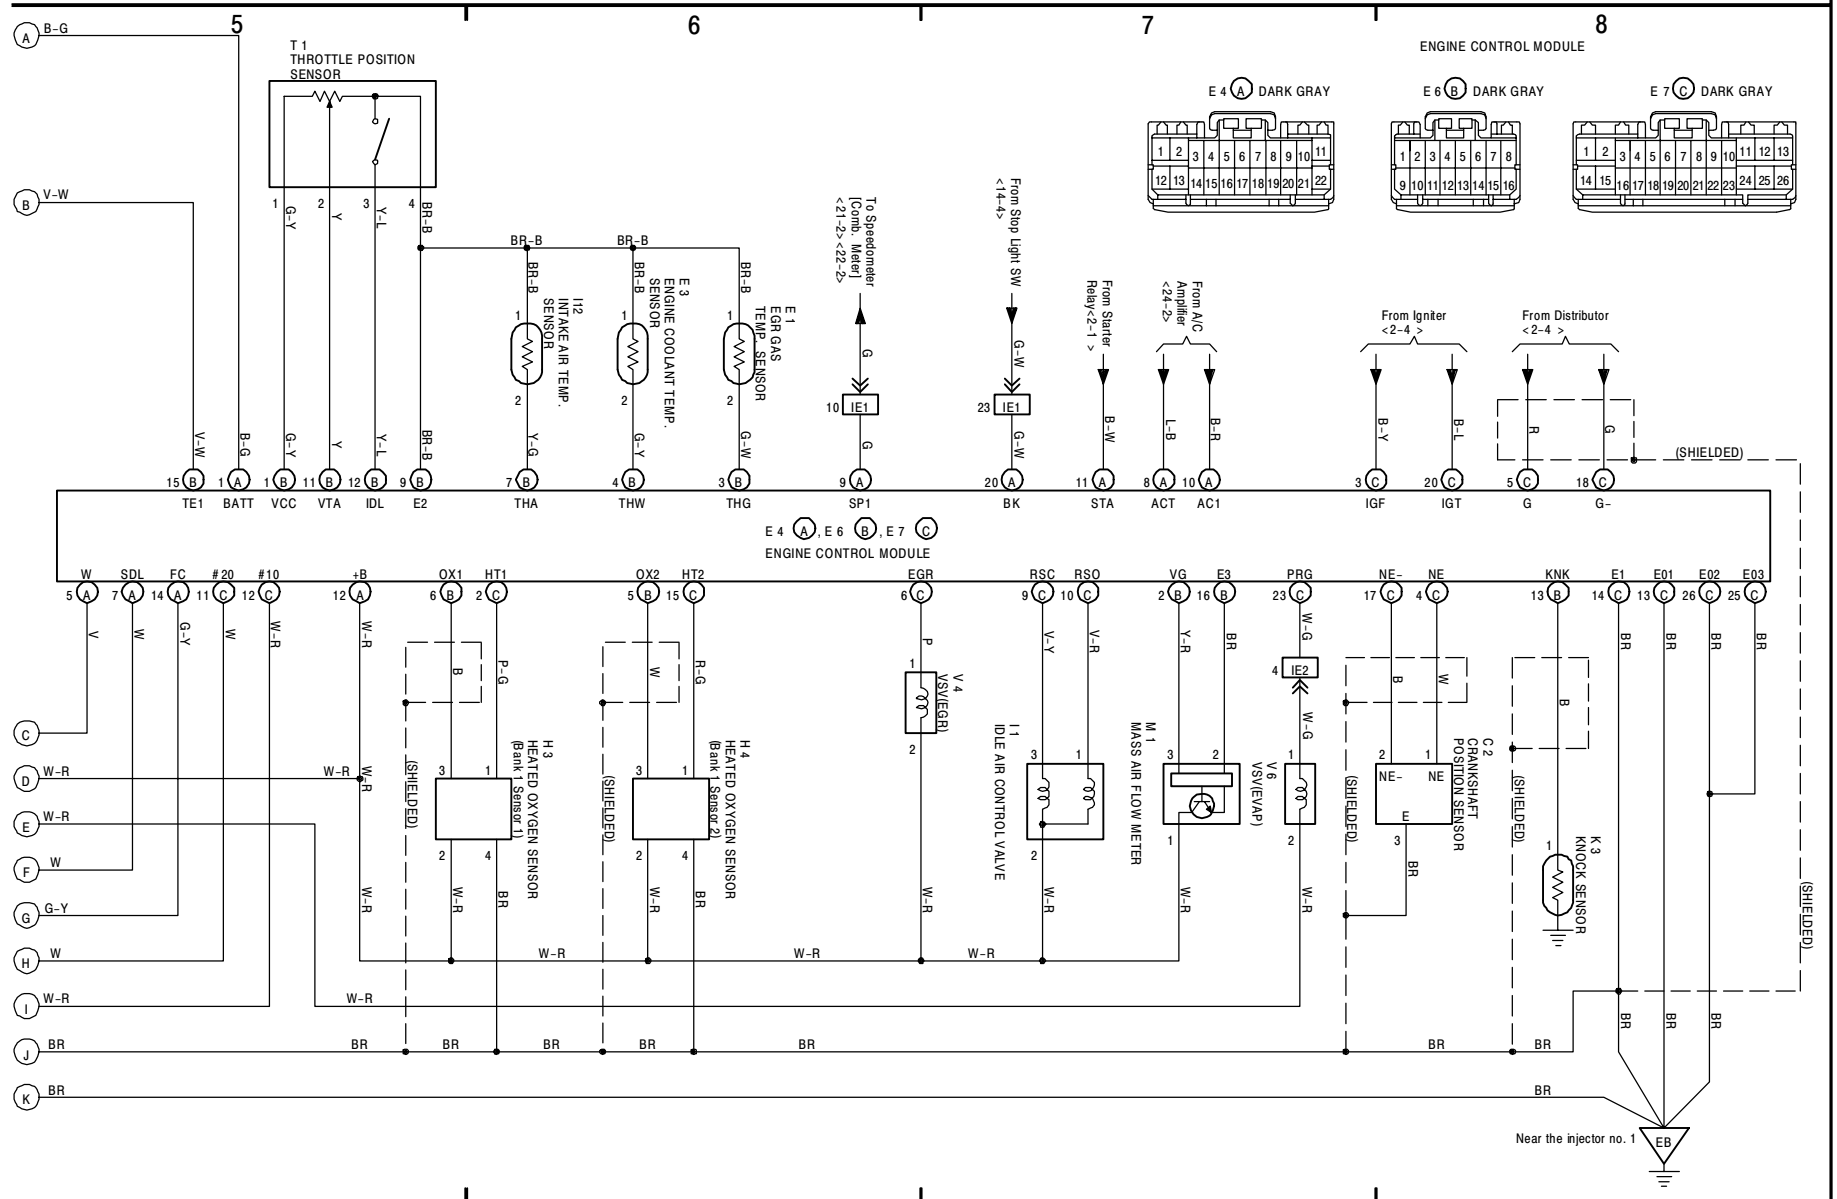

7 TOYOTA T100

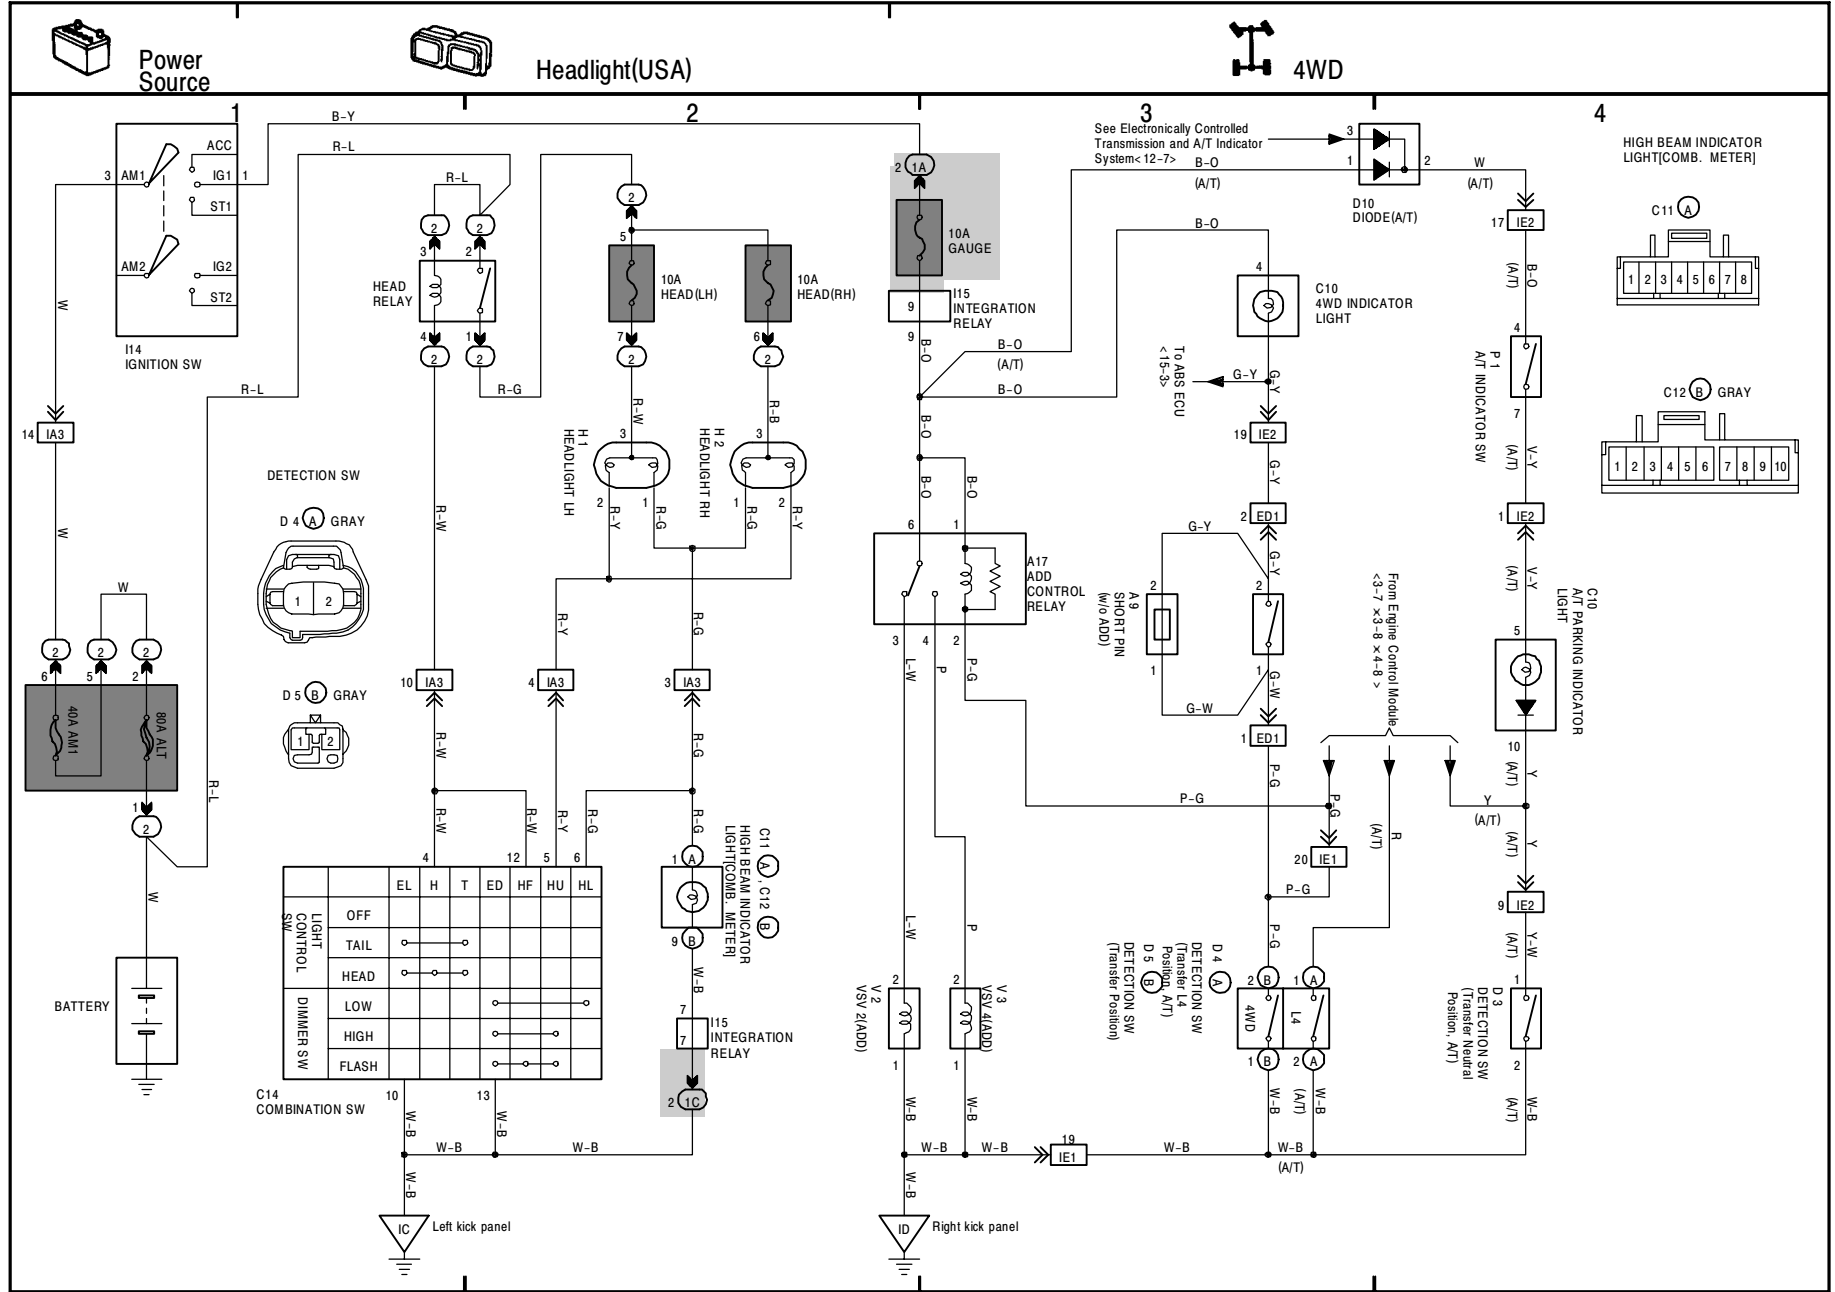


# 8 TOYOTA T100

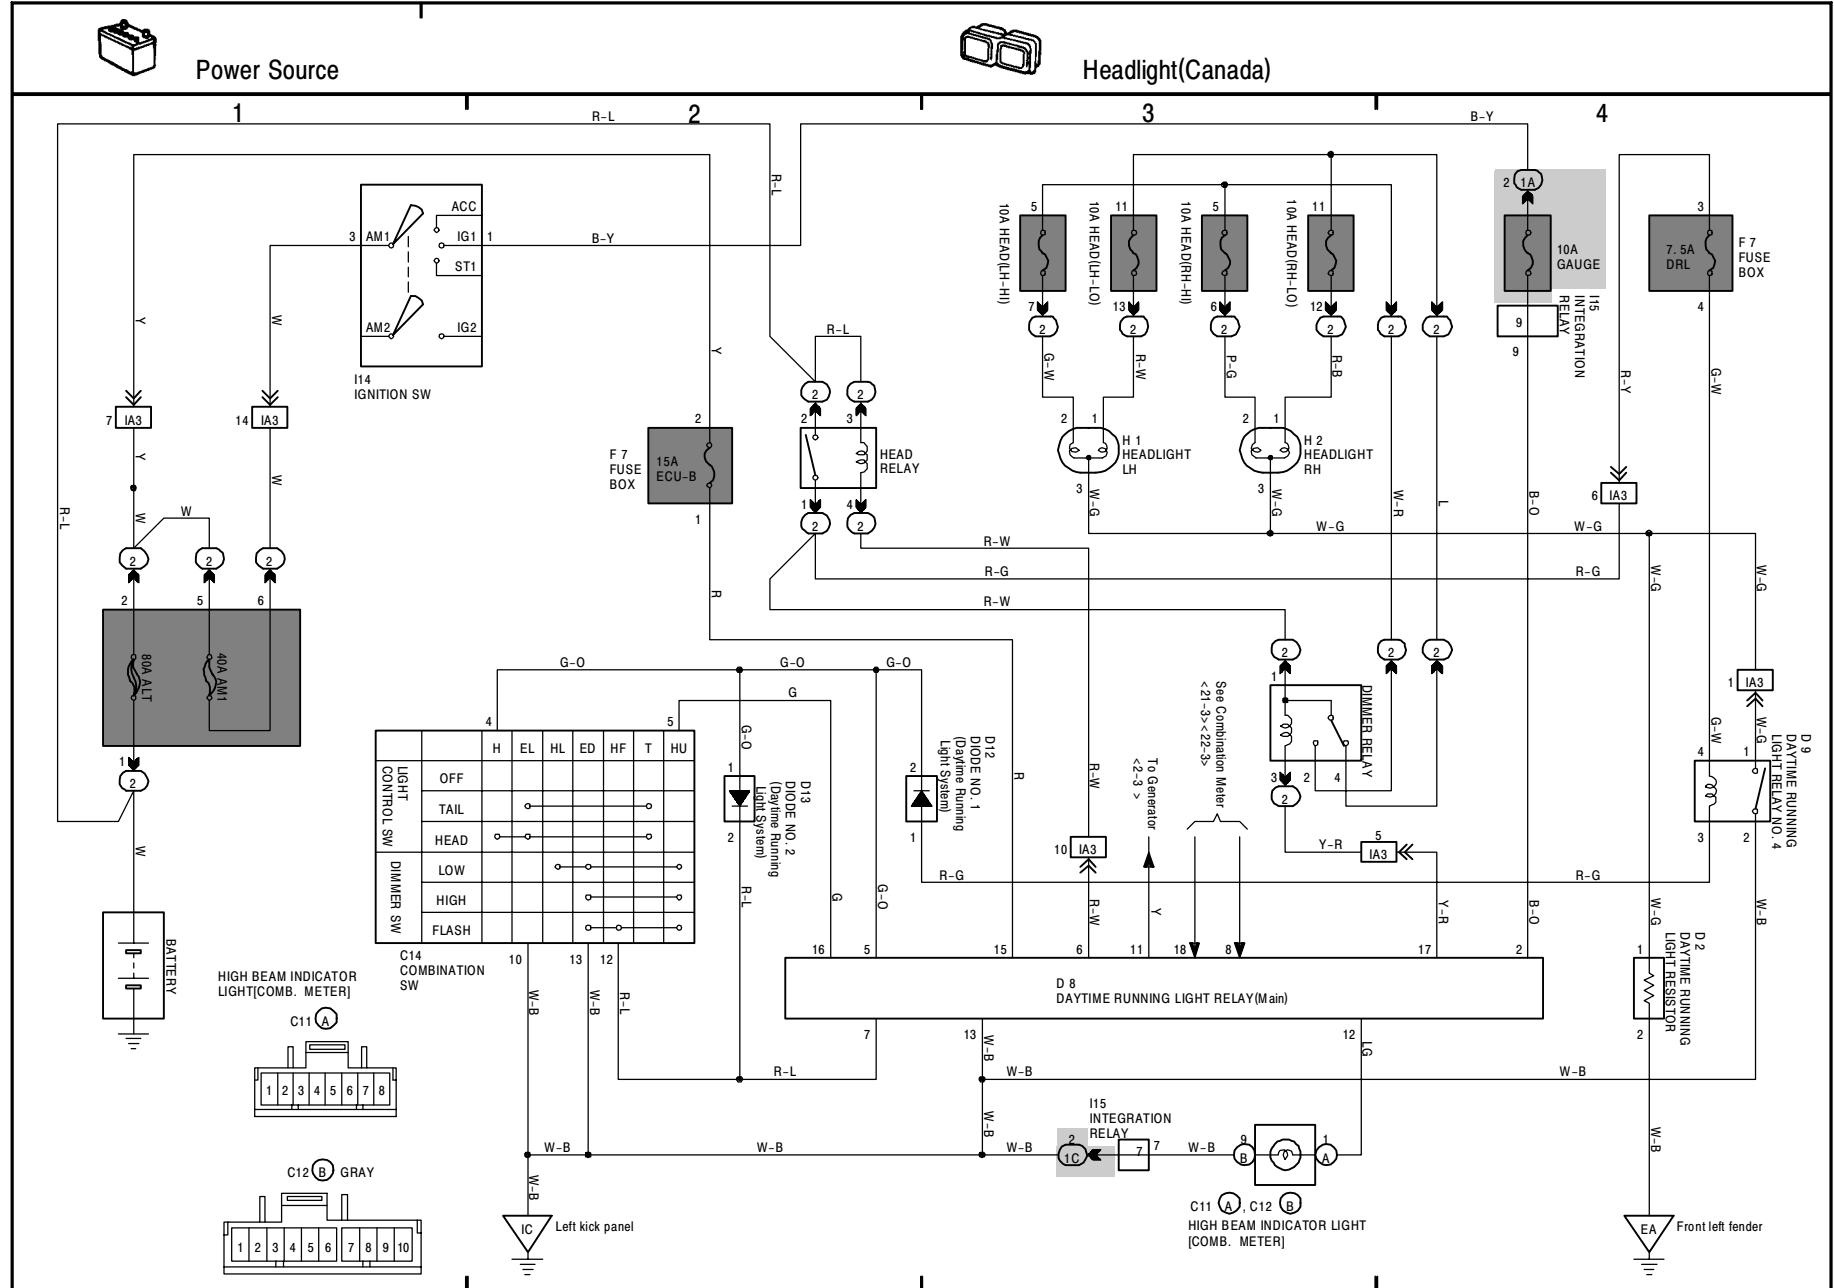




9 TOYOTA T100


K OVERALL ELECTRICAL WIRING DIAGRAM

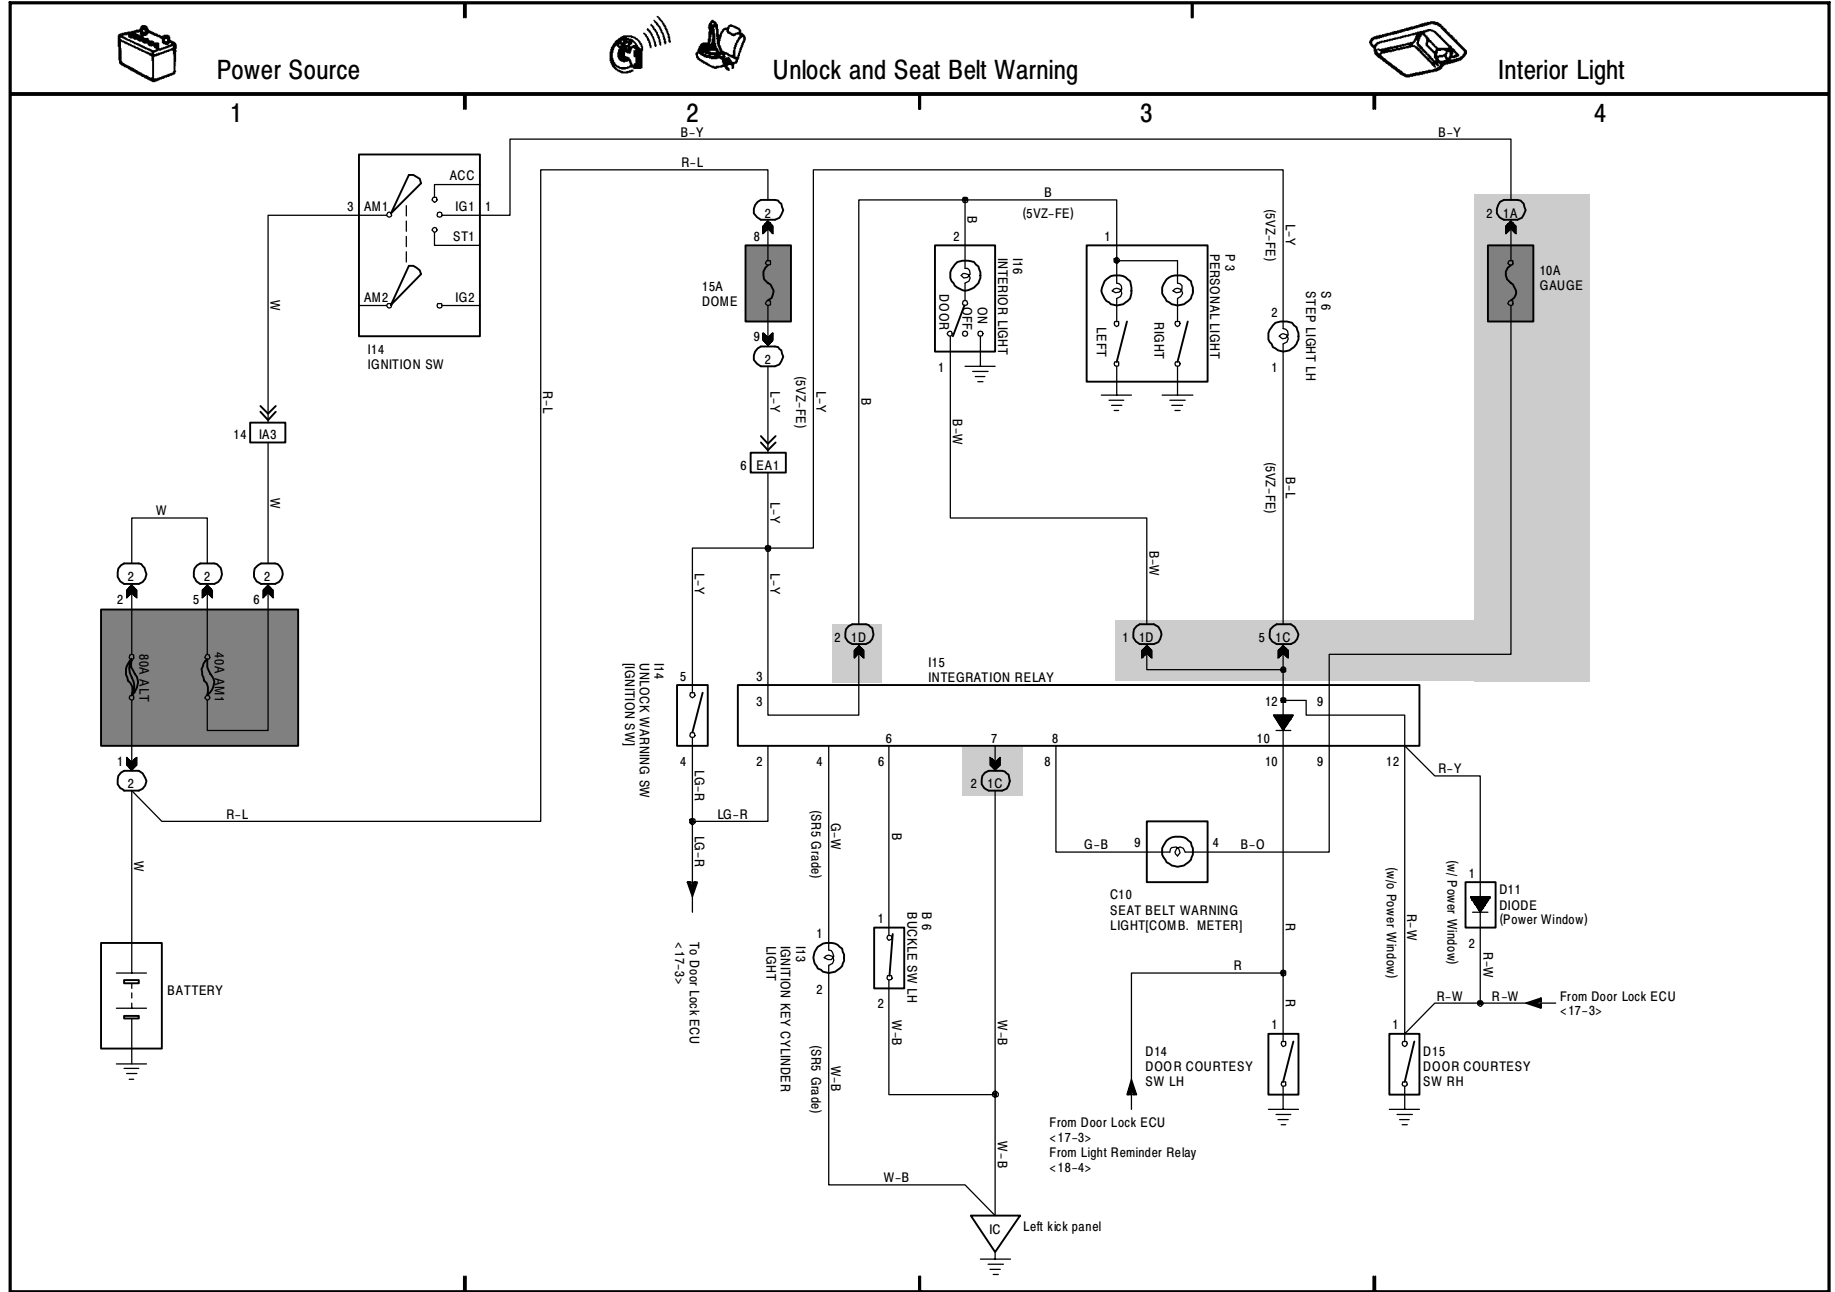


# 10 TOYOTA T100

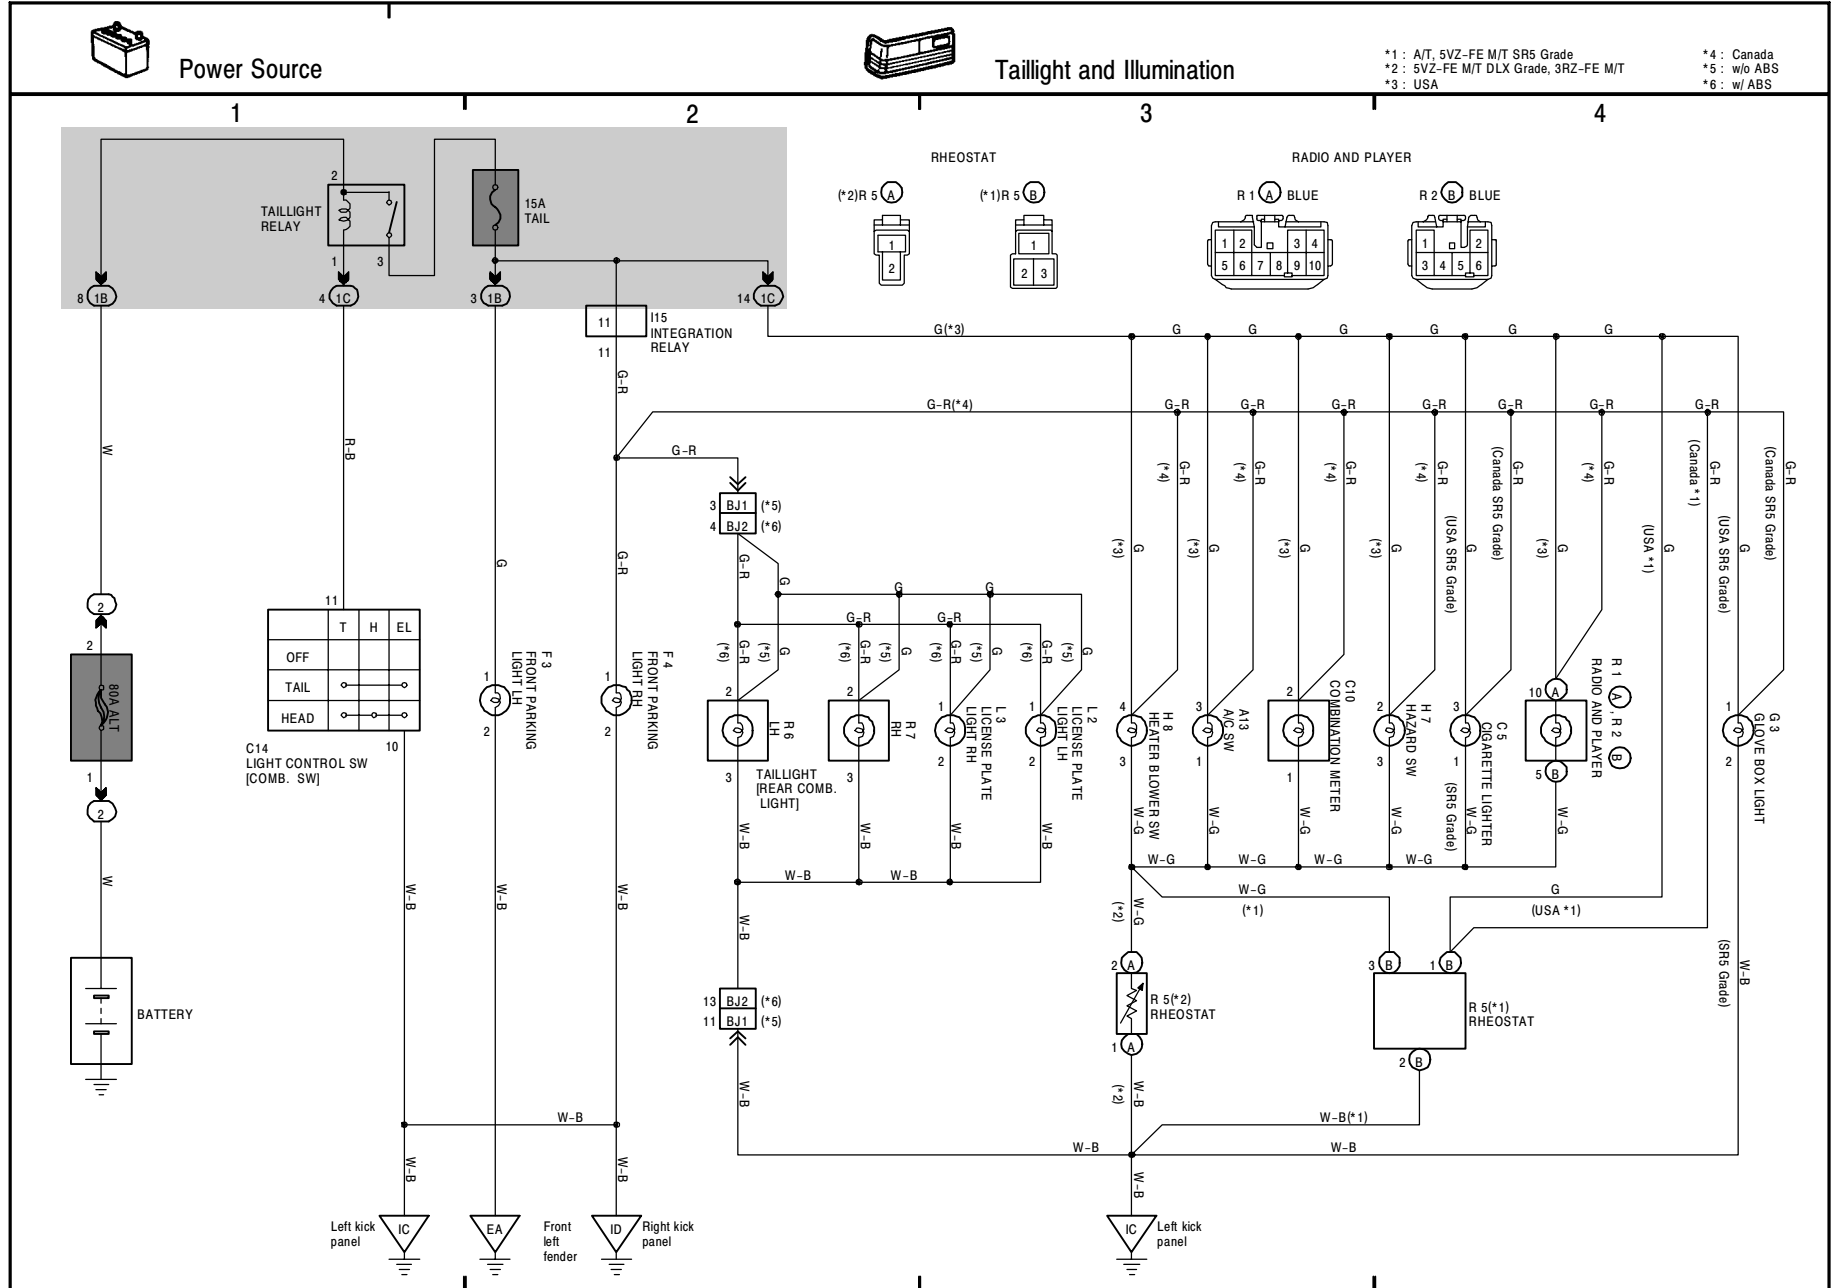

11 TOYOTA T100

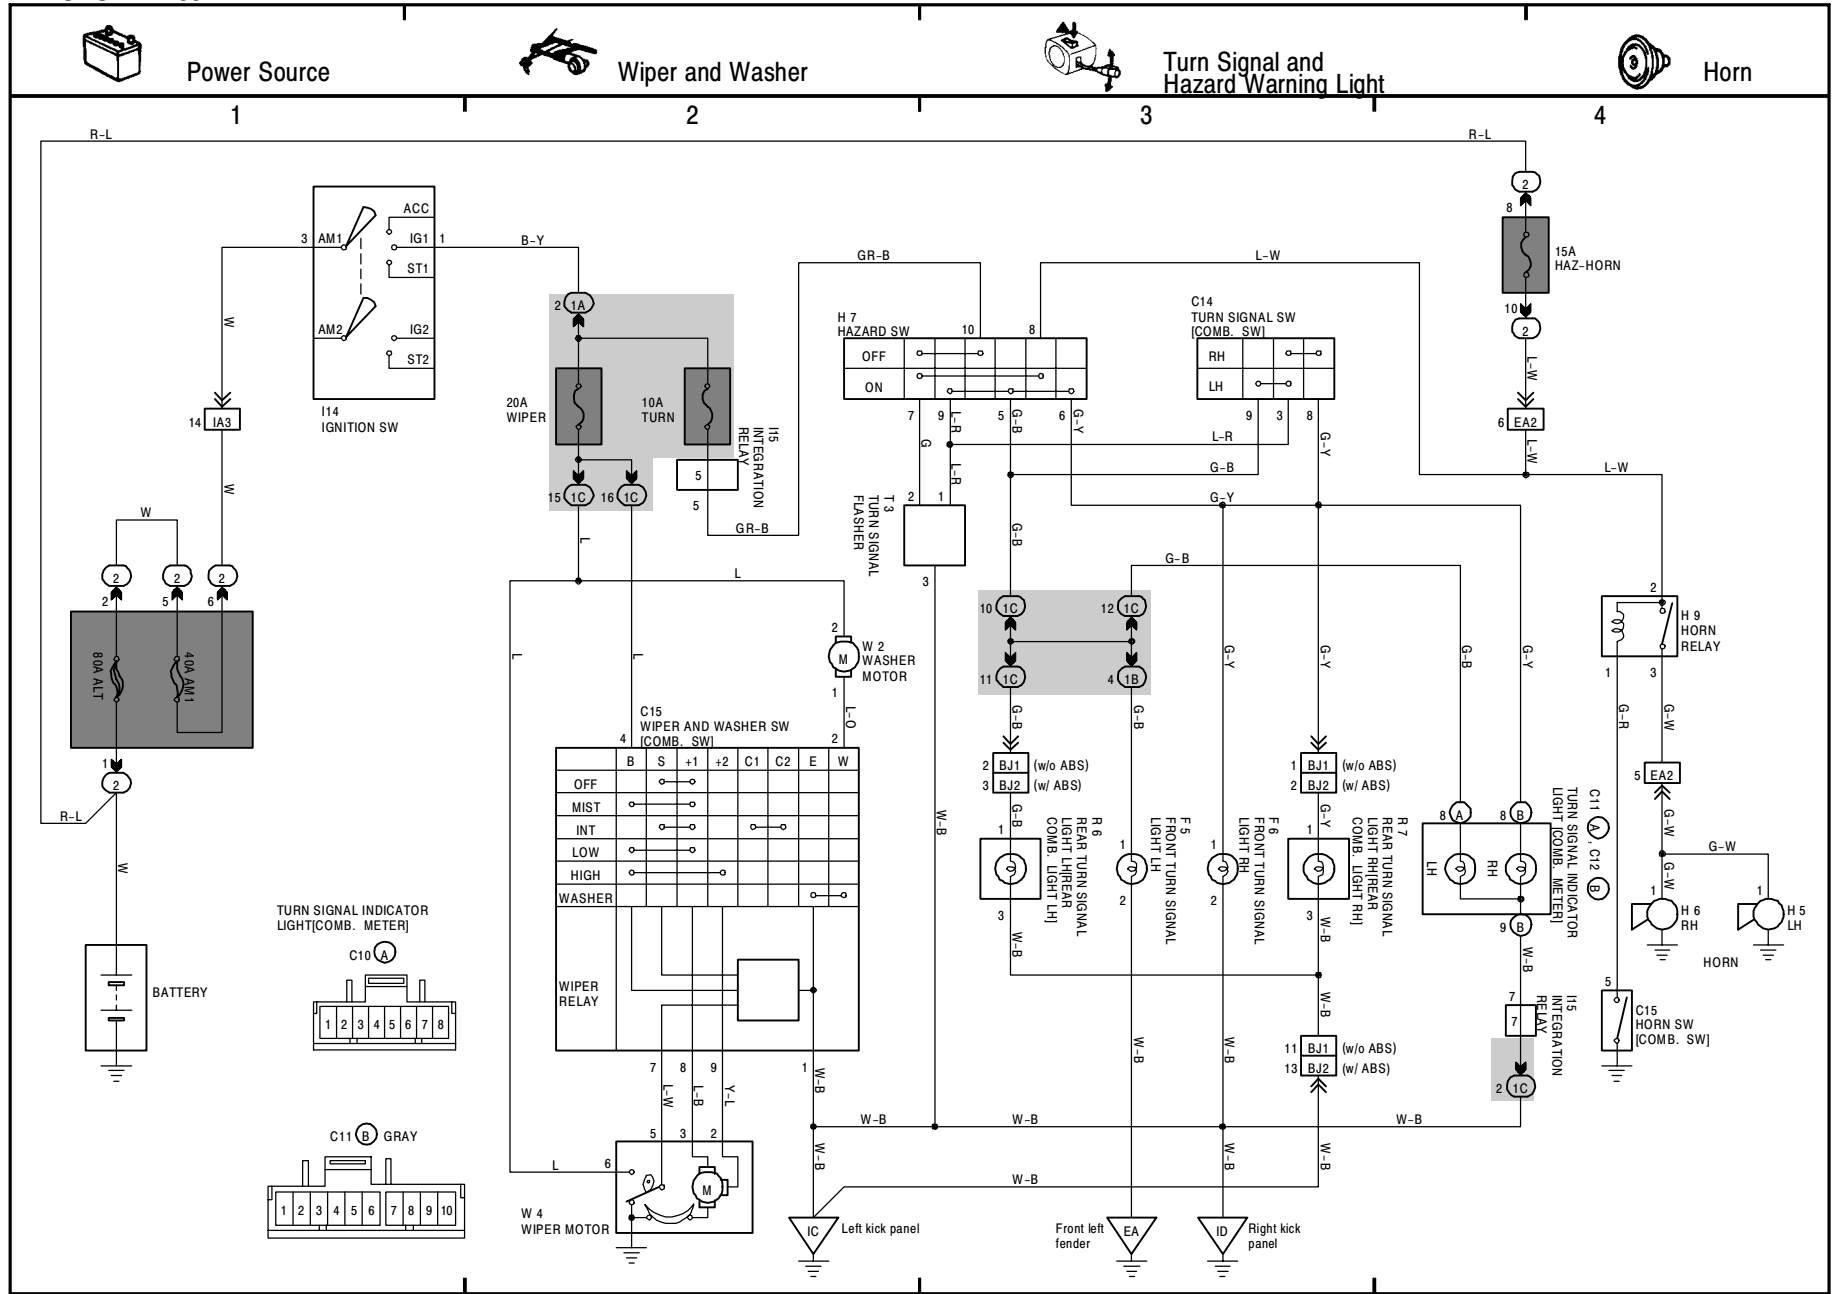




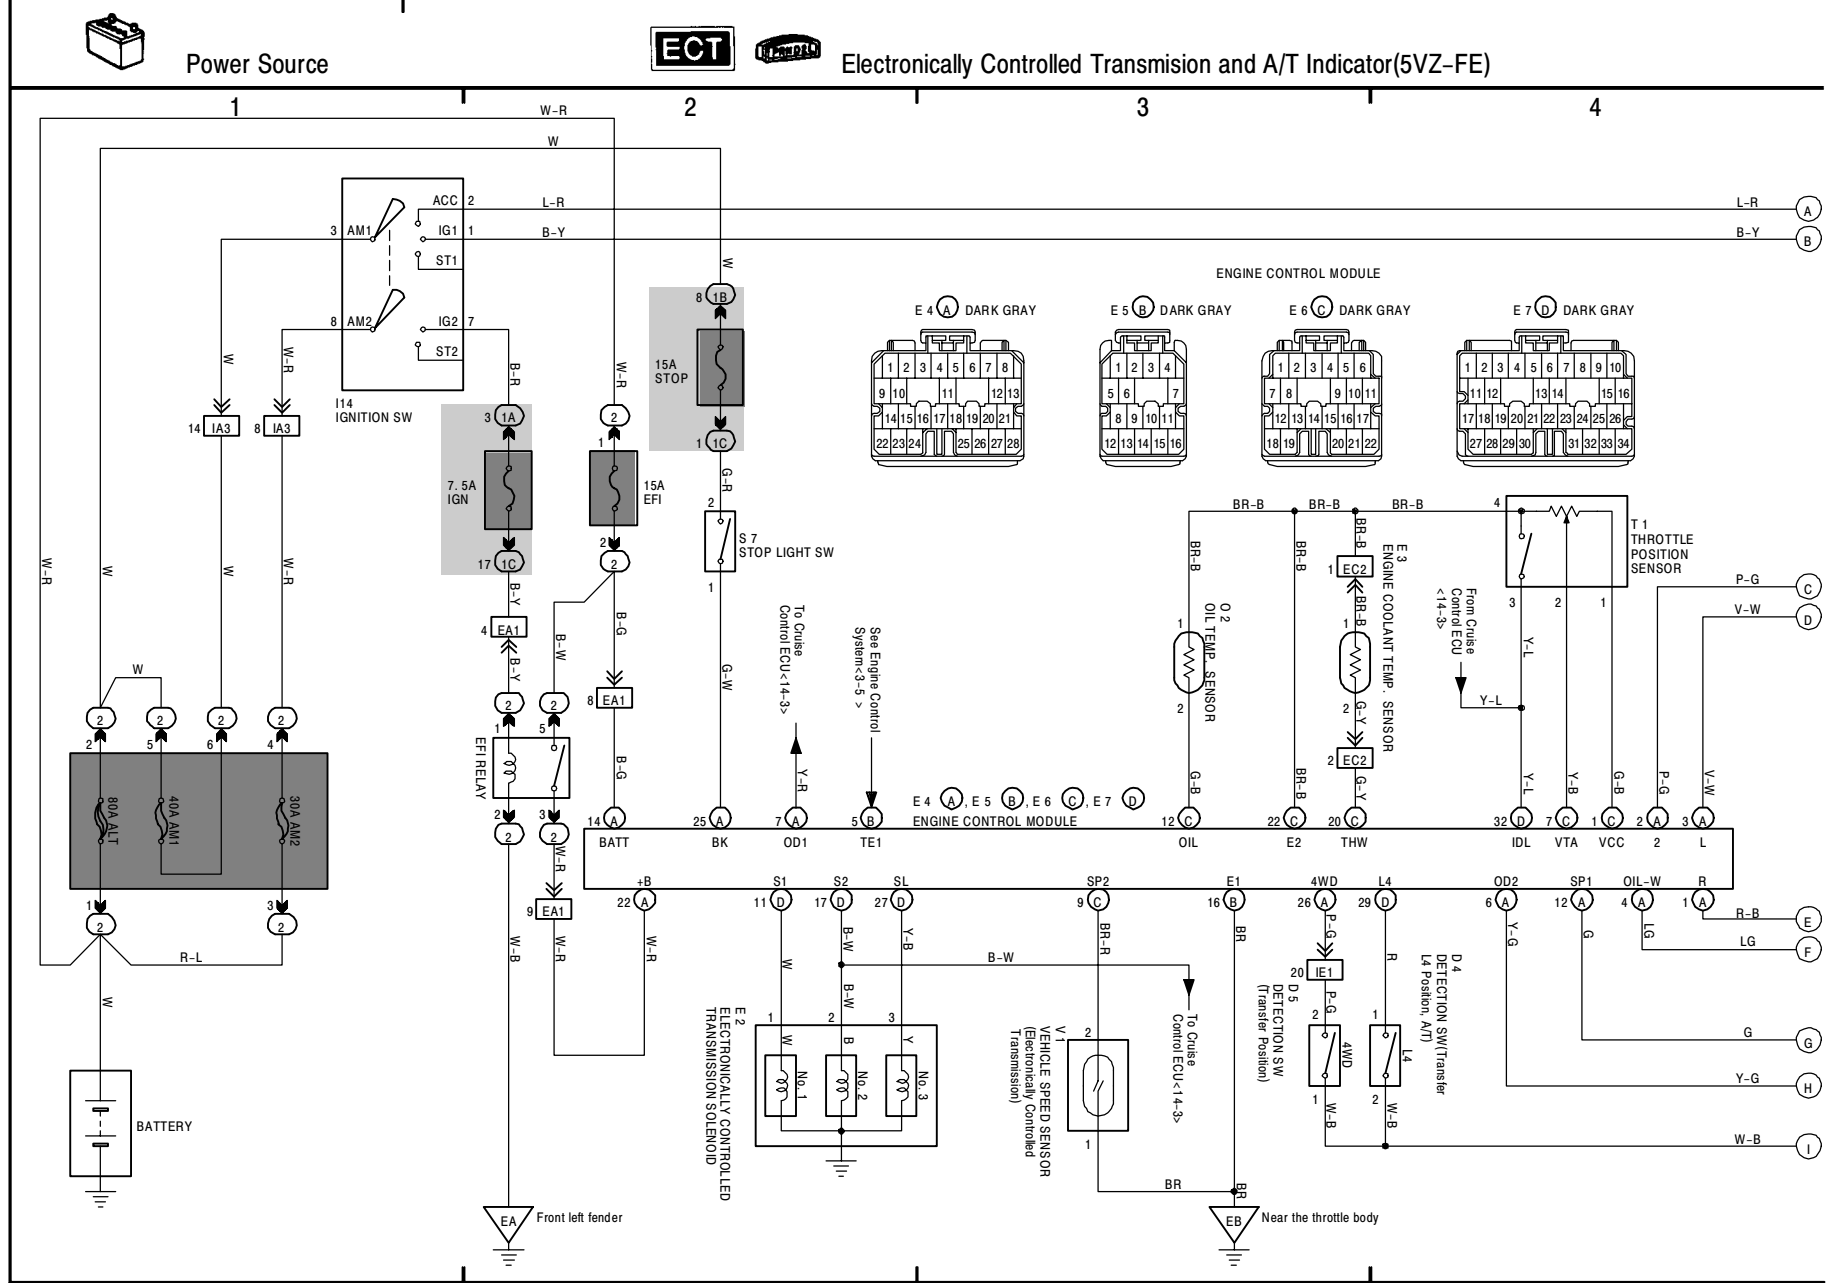




Electronically Controlled Transmission and A/T Indicator(5VZ-FE)

\*1 : w/ Tachometer  
\*2 : w/o Tachometer

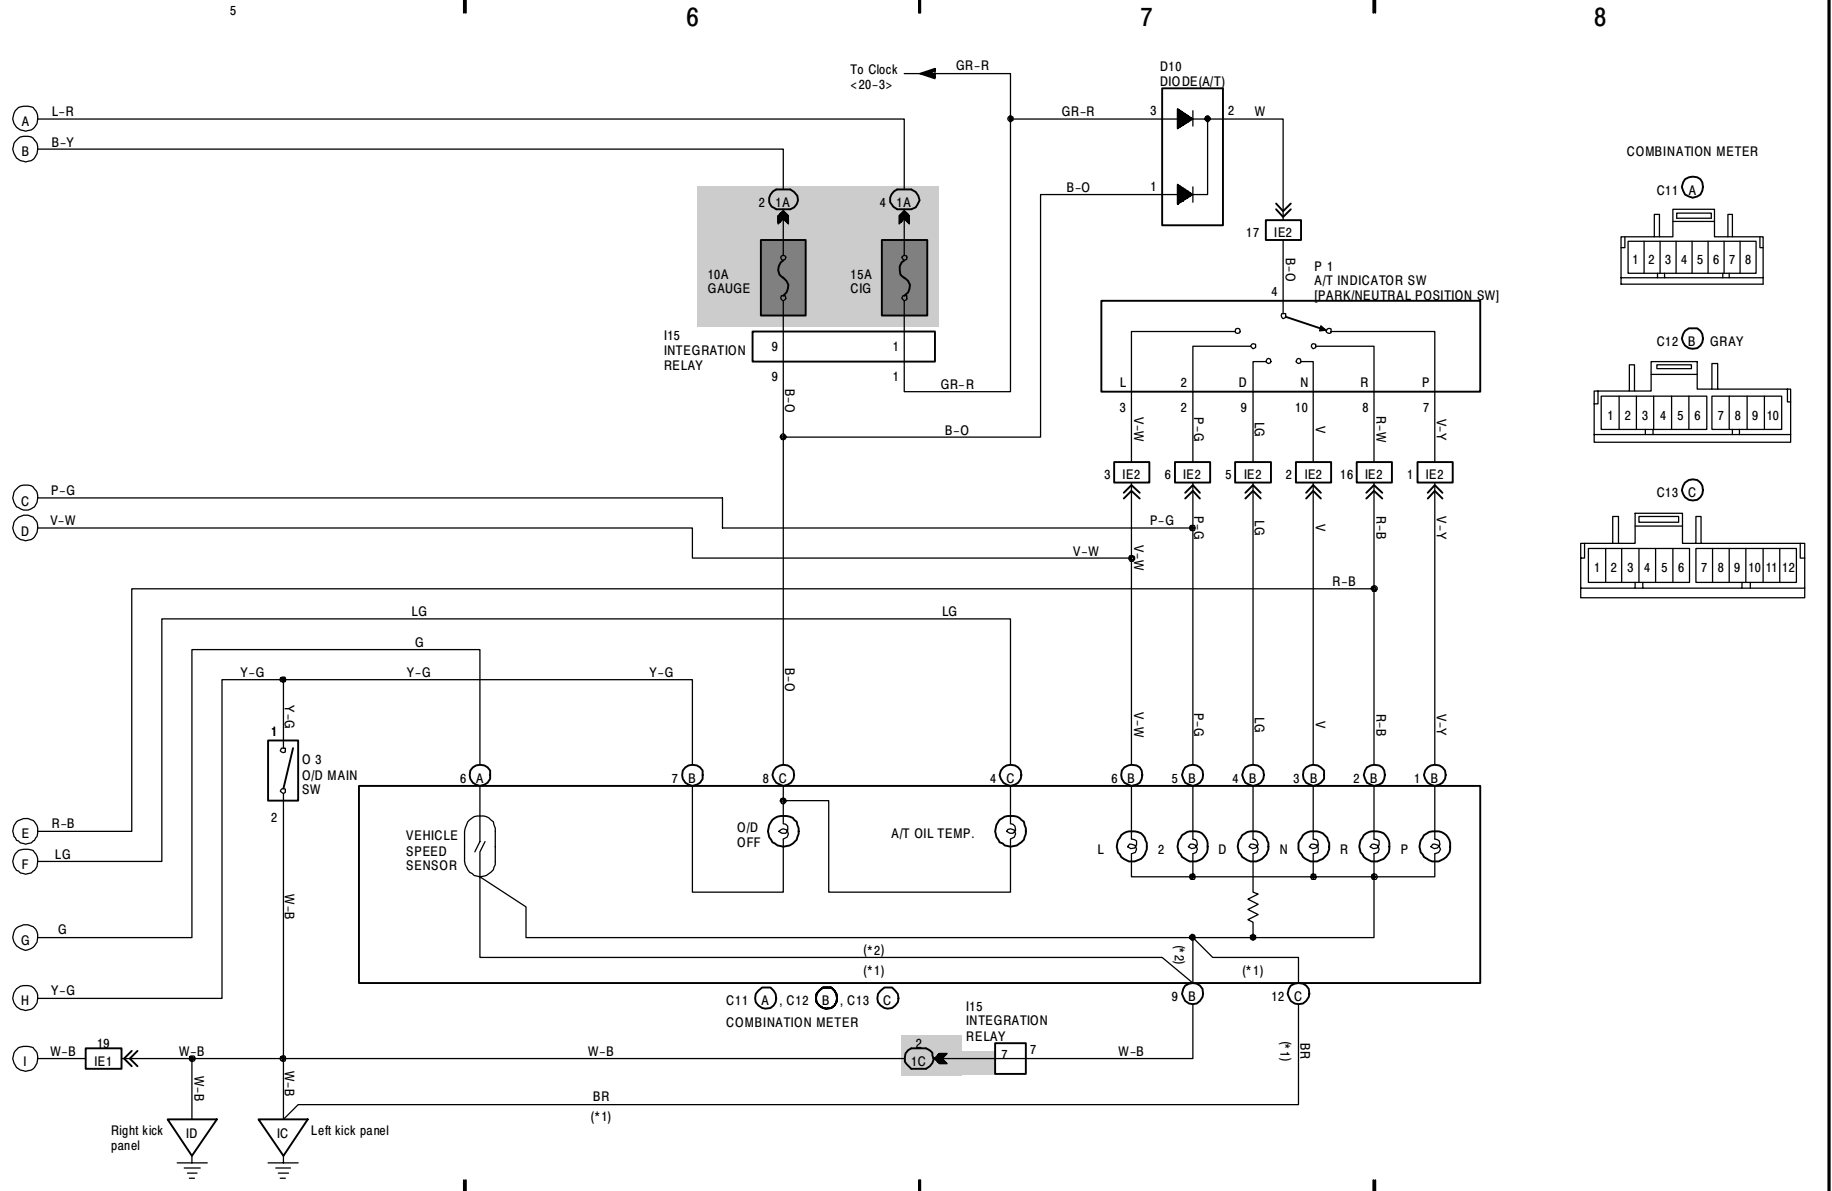


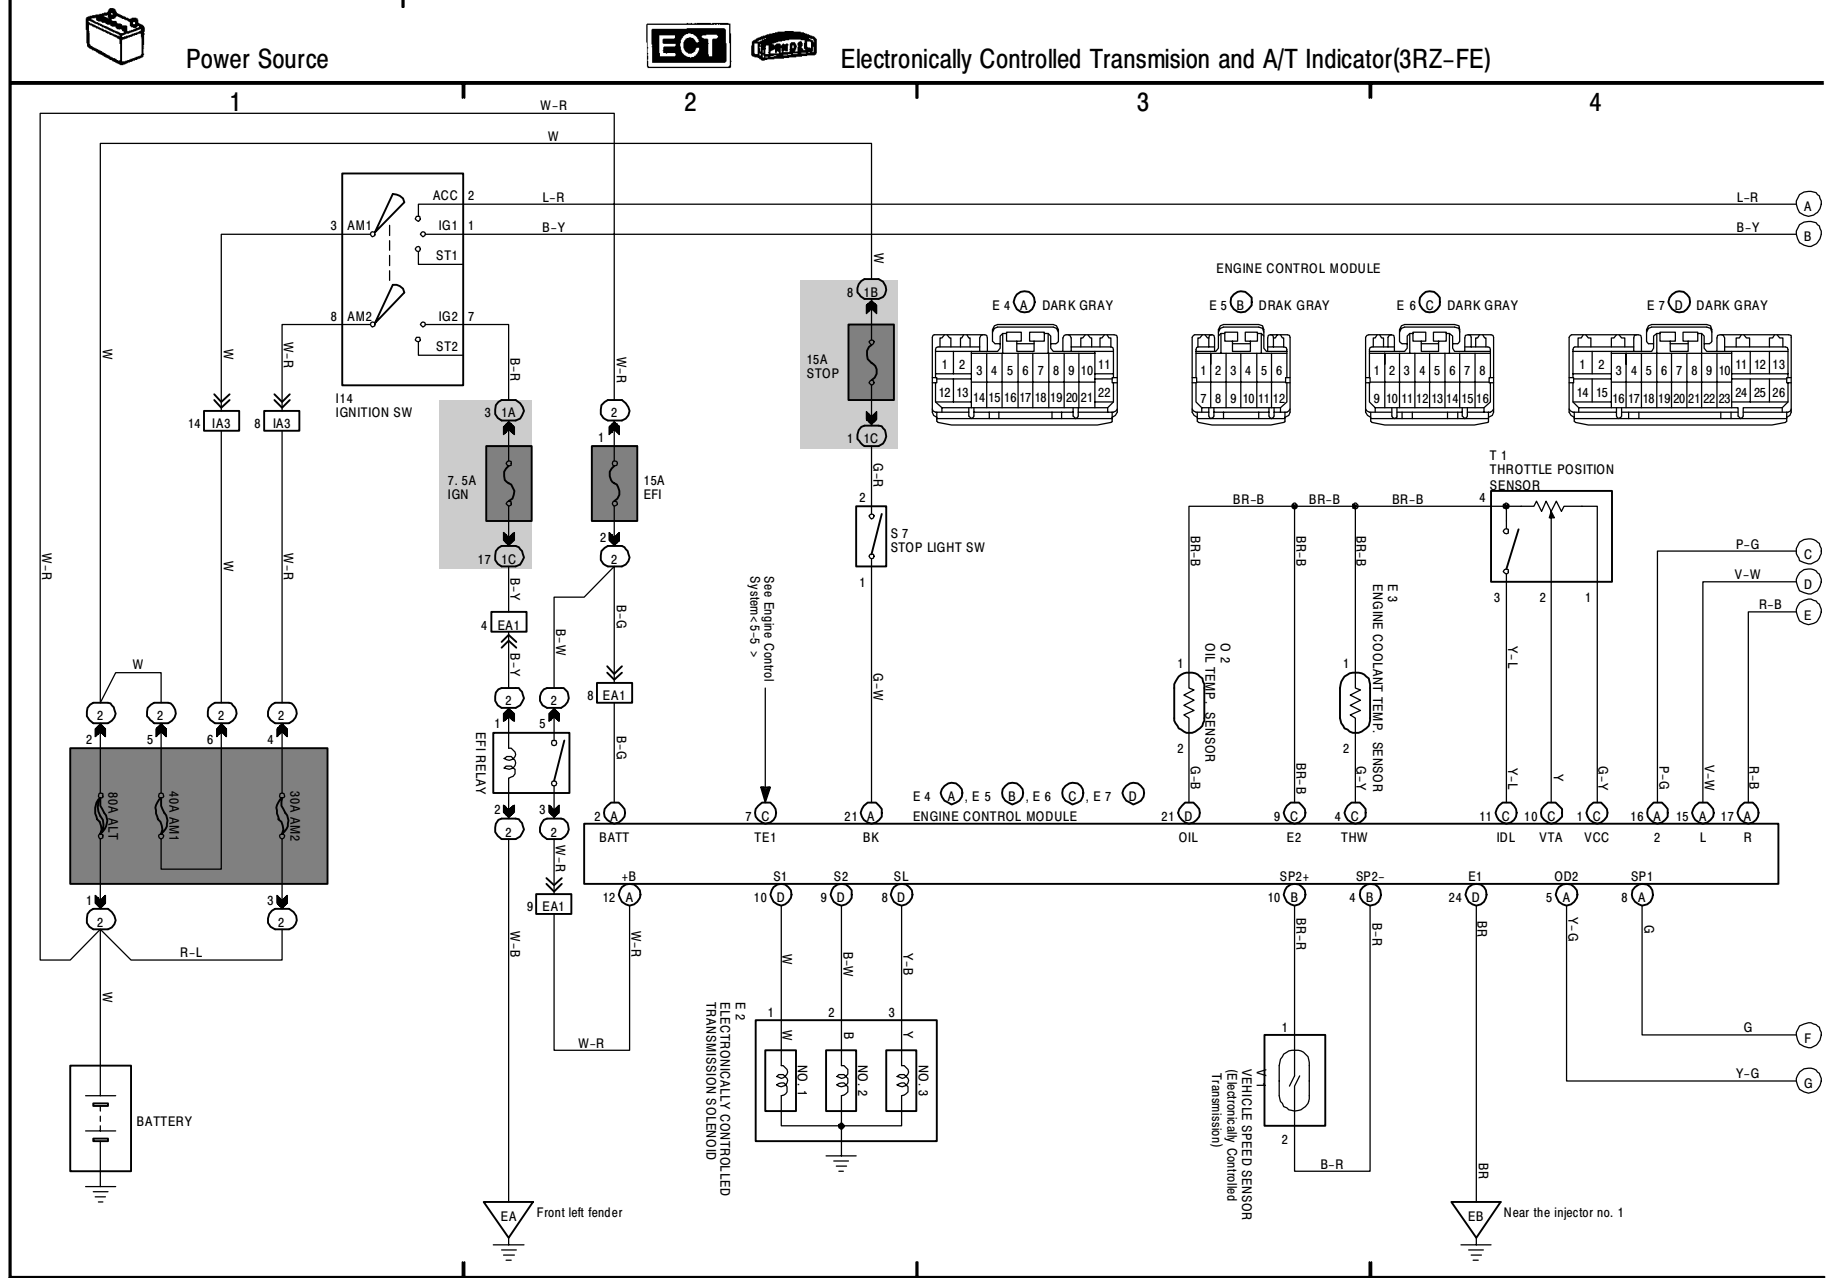



Electronically Controlled Transmission and A/T Indicator(3RZ-FE)


\*1 : w/ Tachometer  
\*2 : w/o Tachometer

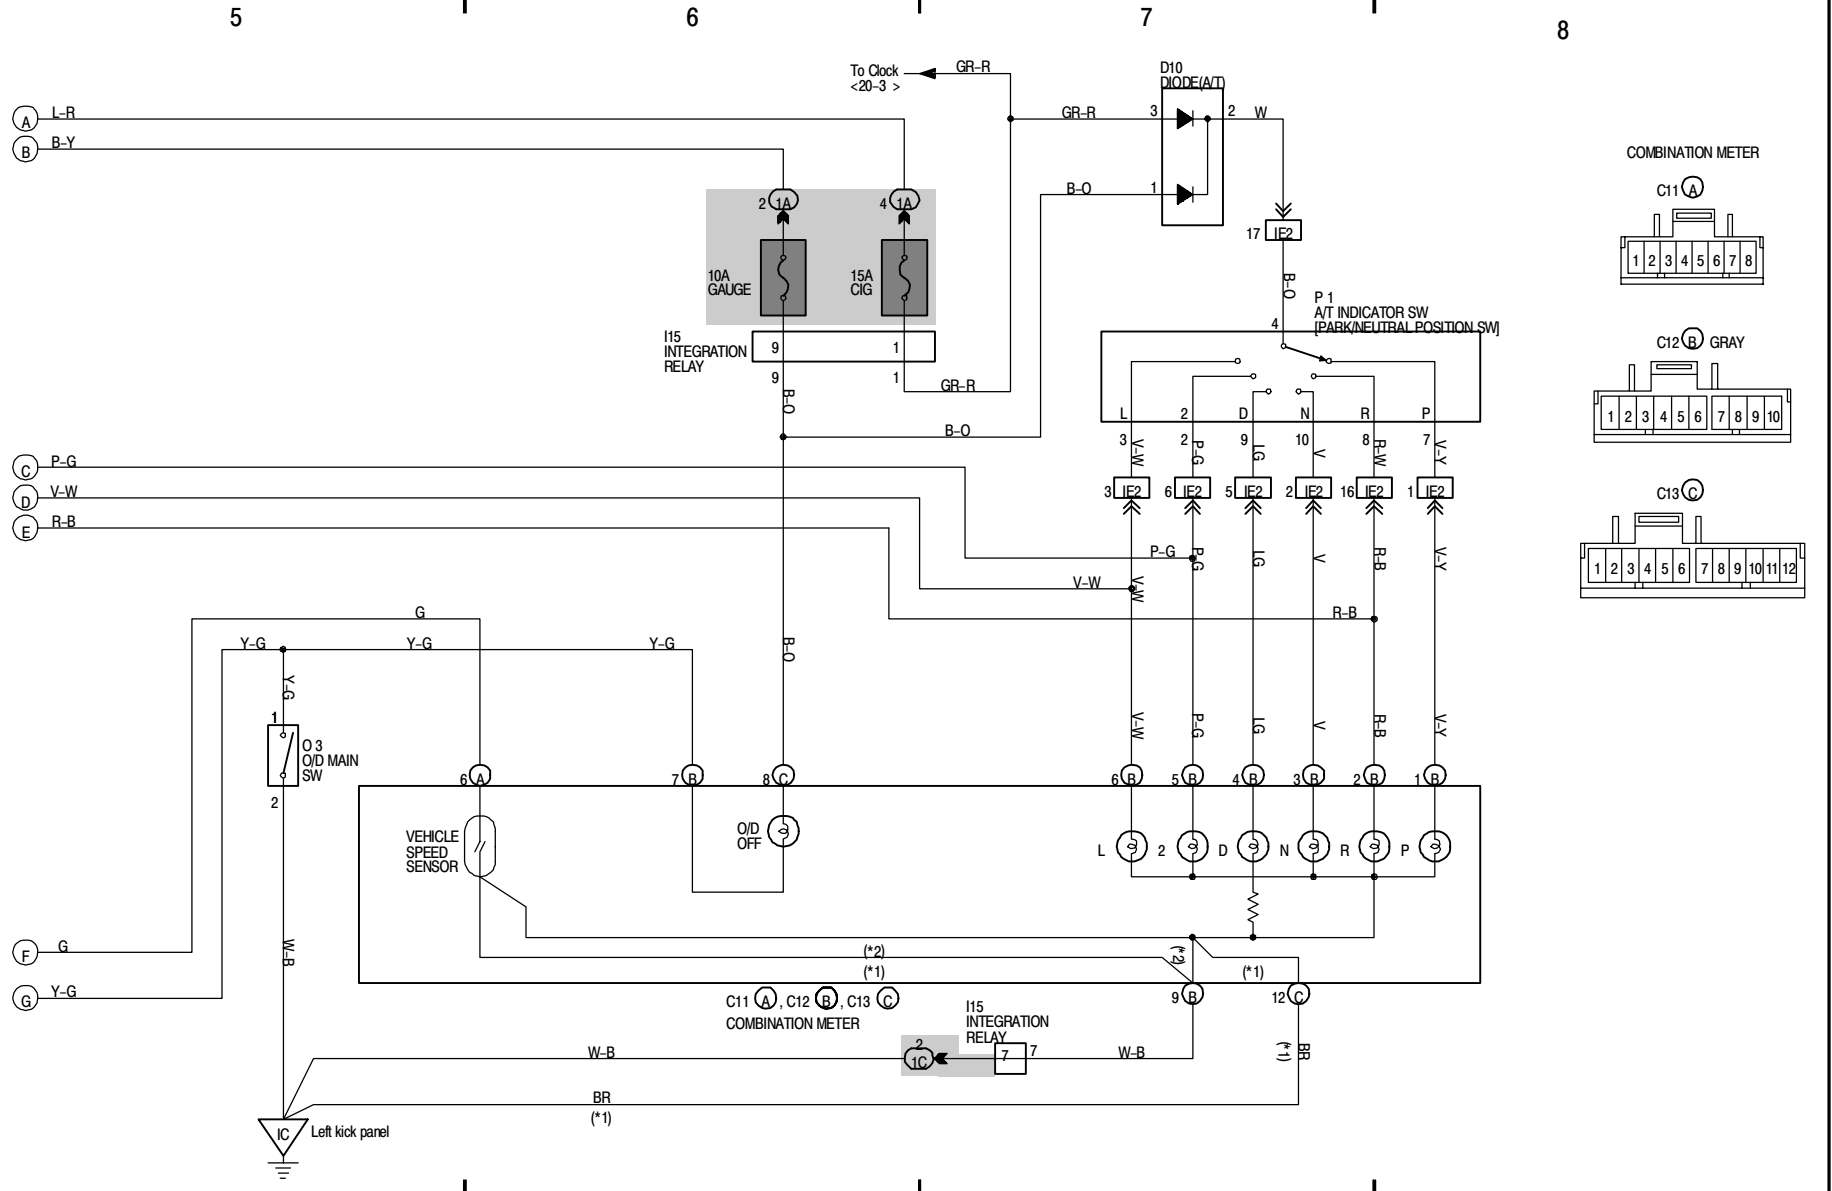




14 TOYOTA T100


K OVERALL ELECTRICAL WIRING DIAGRAM

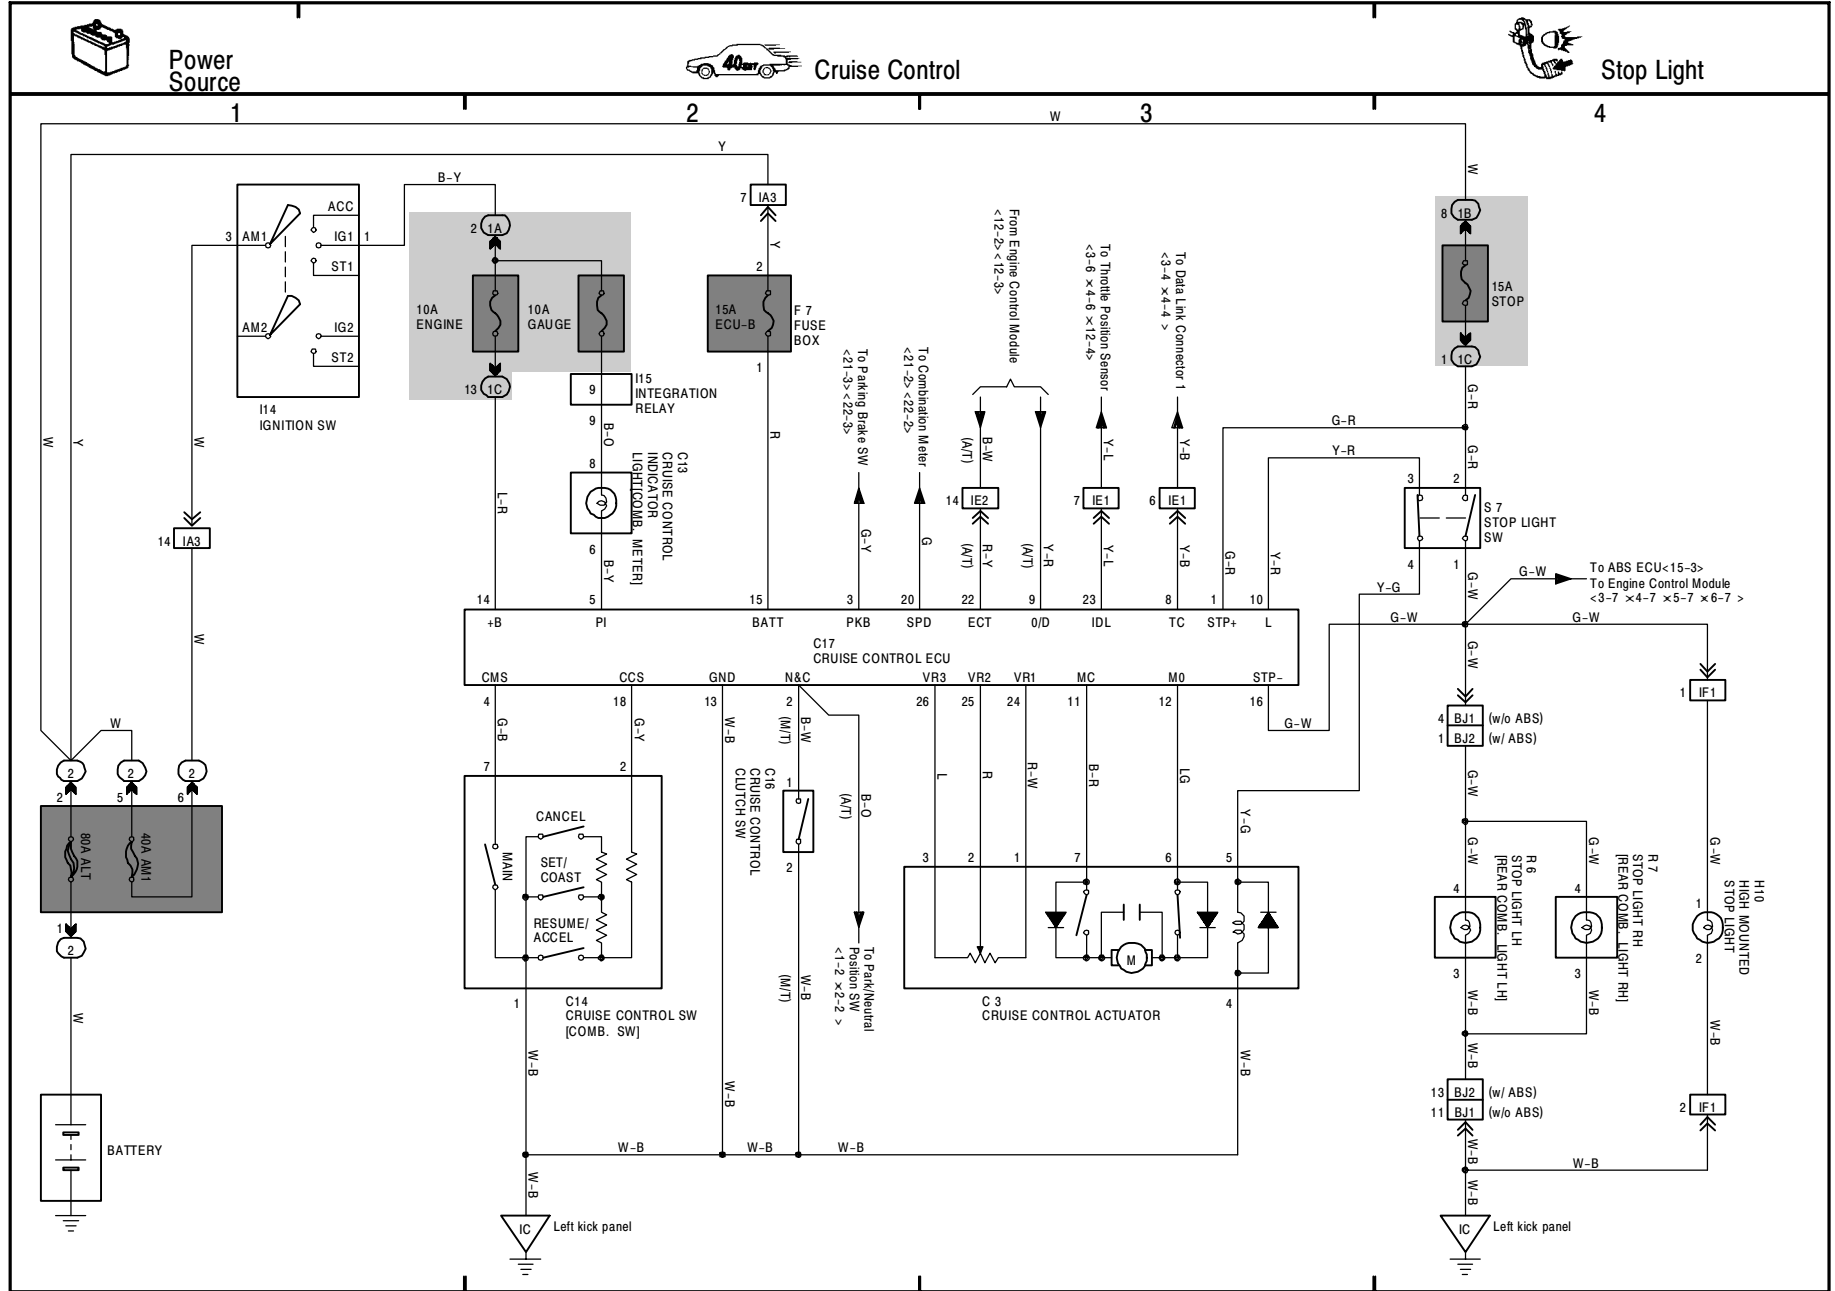


# 15 TOYOTA T100

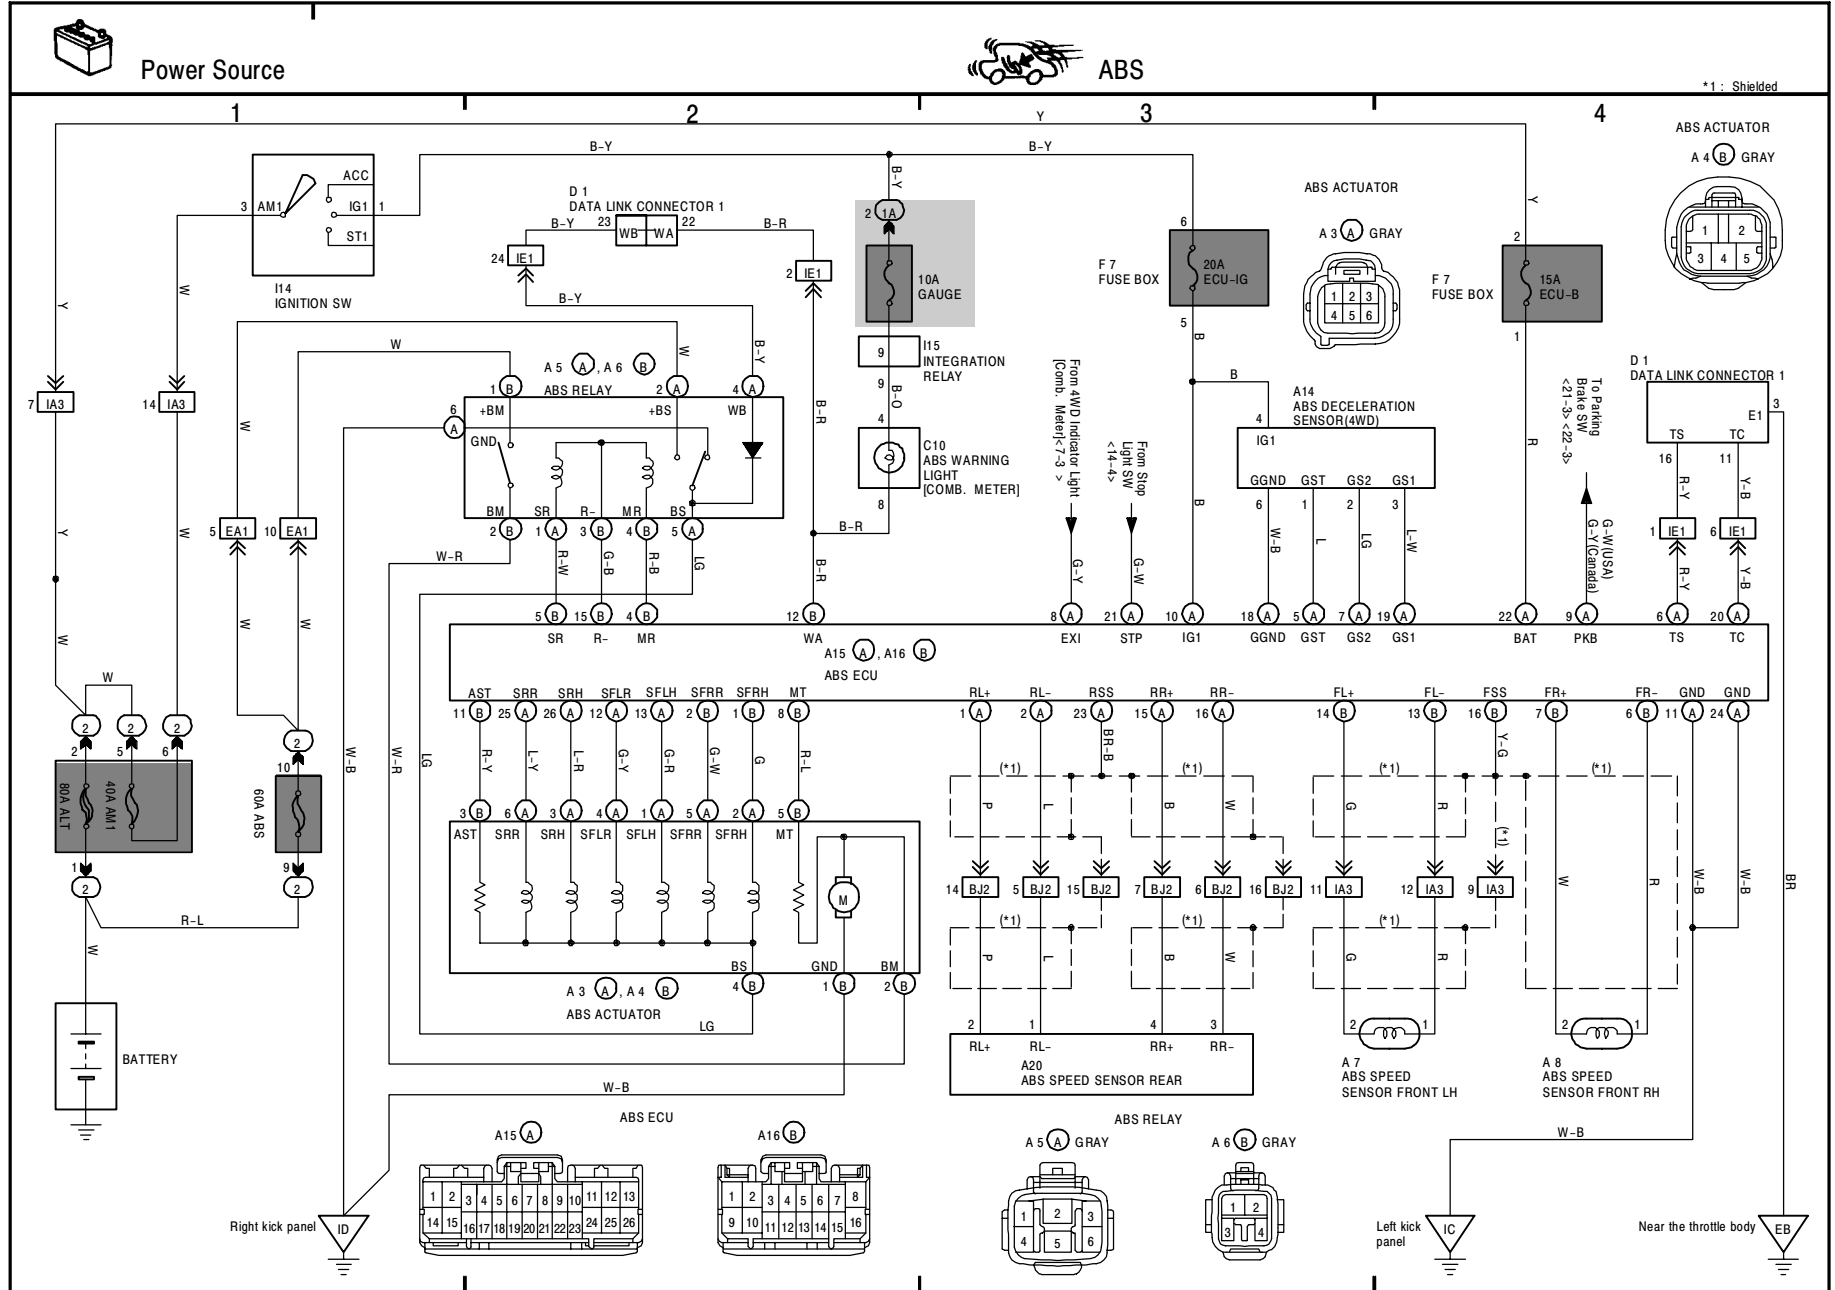


16 TOYOTA T100

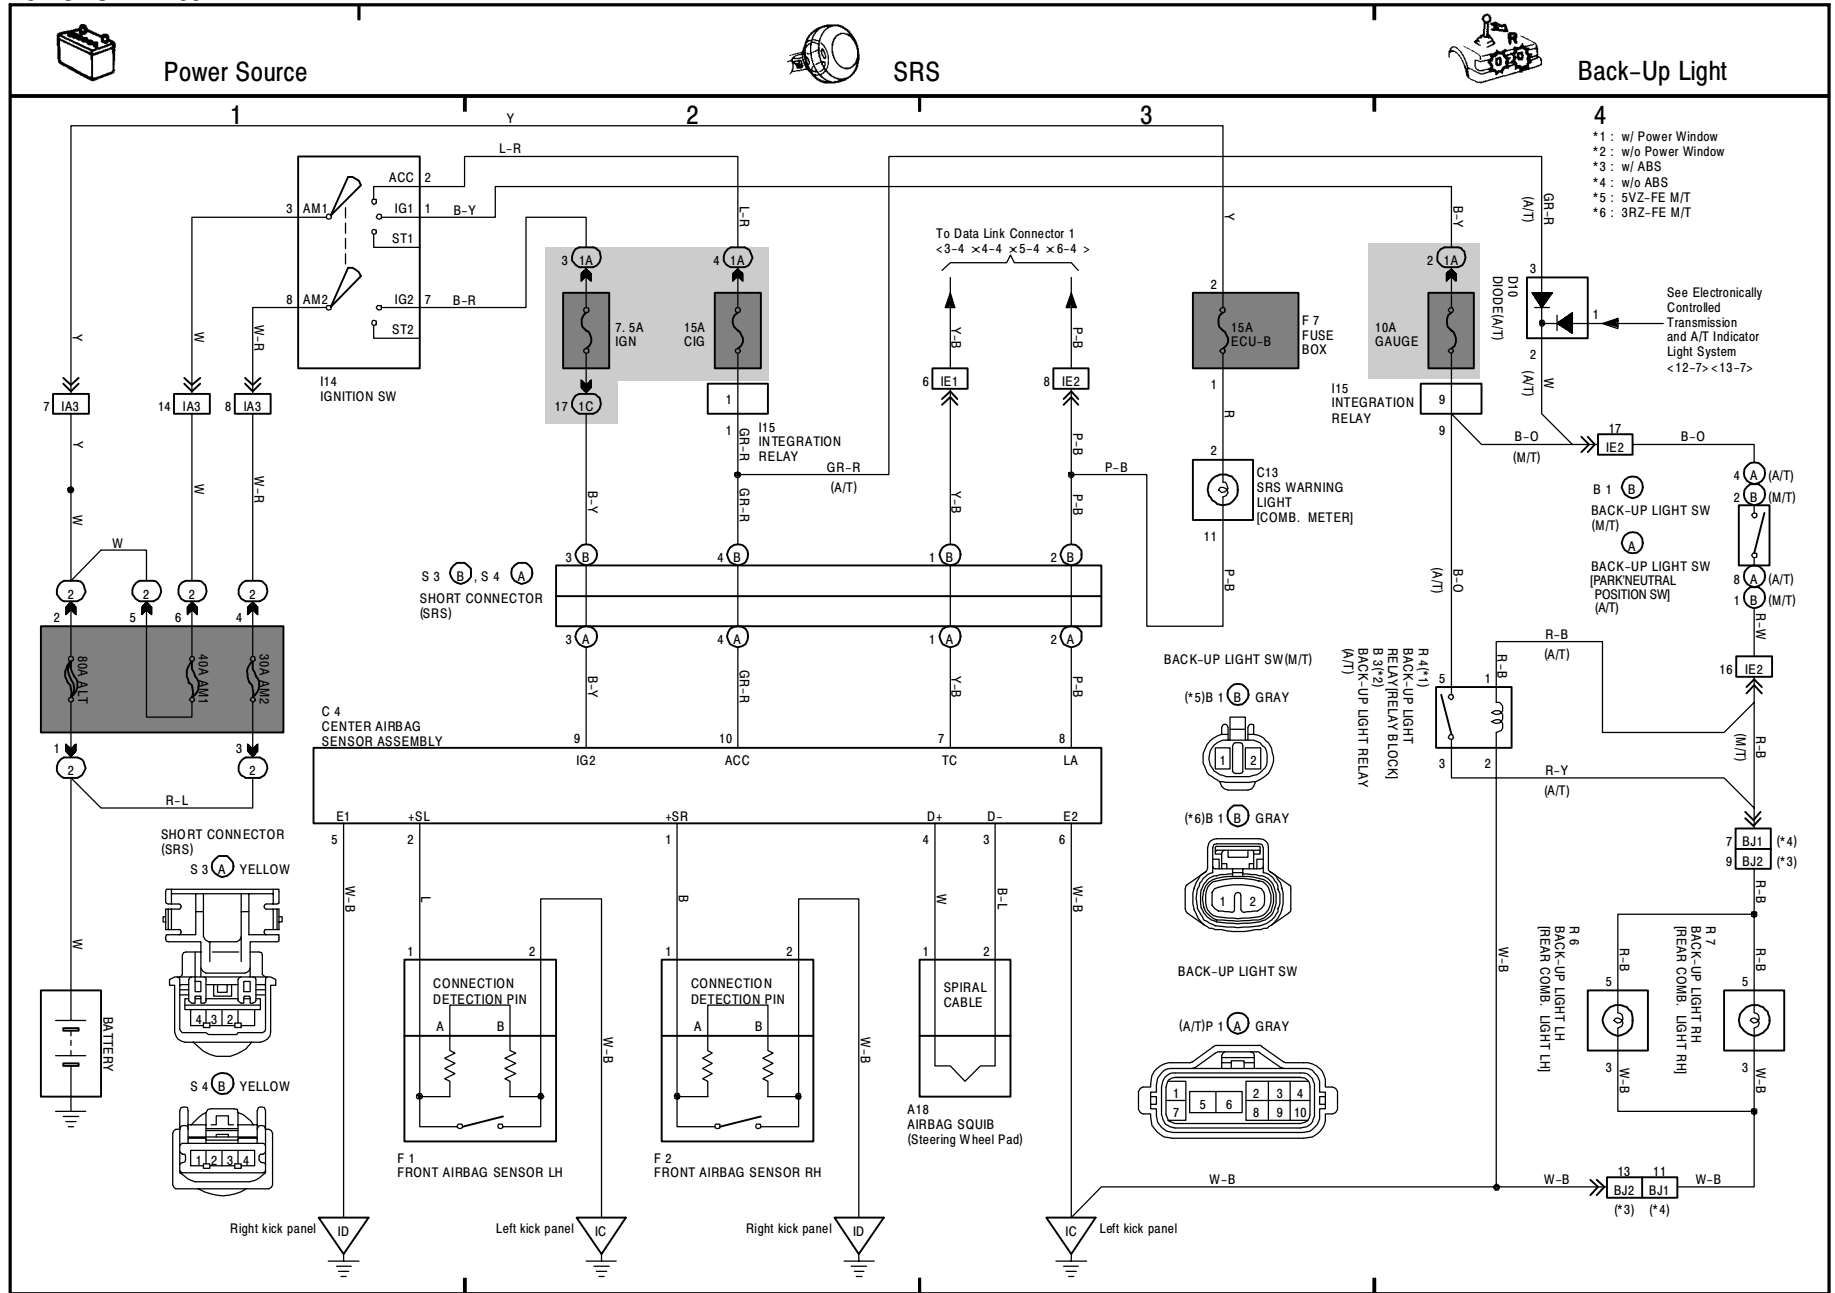


17 TOYOTA T100

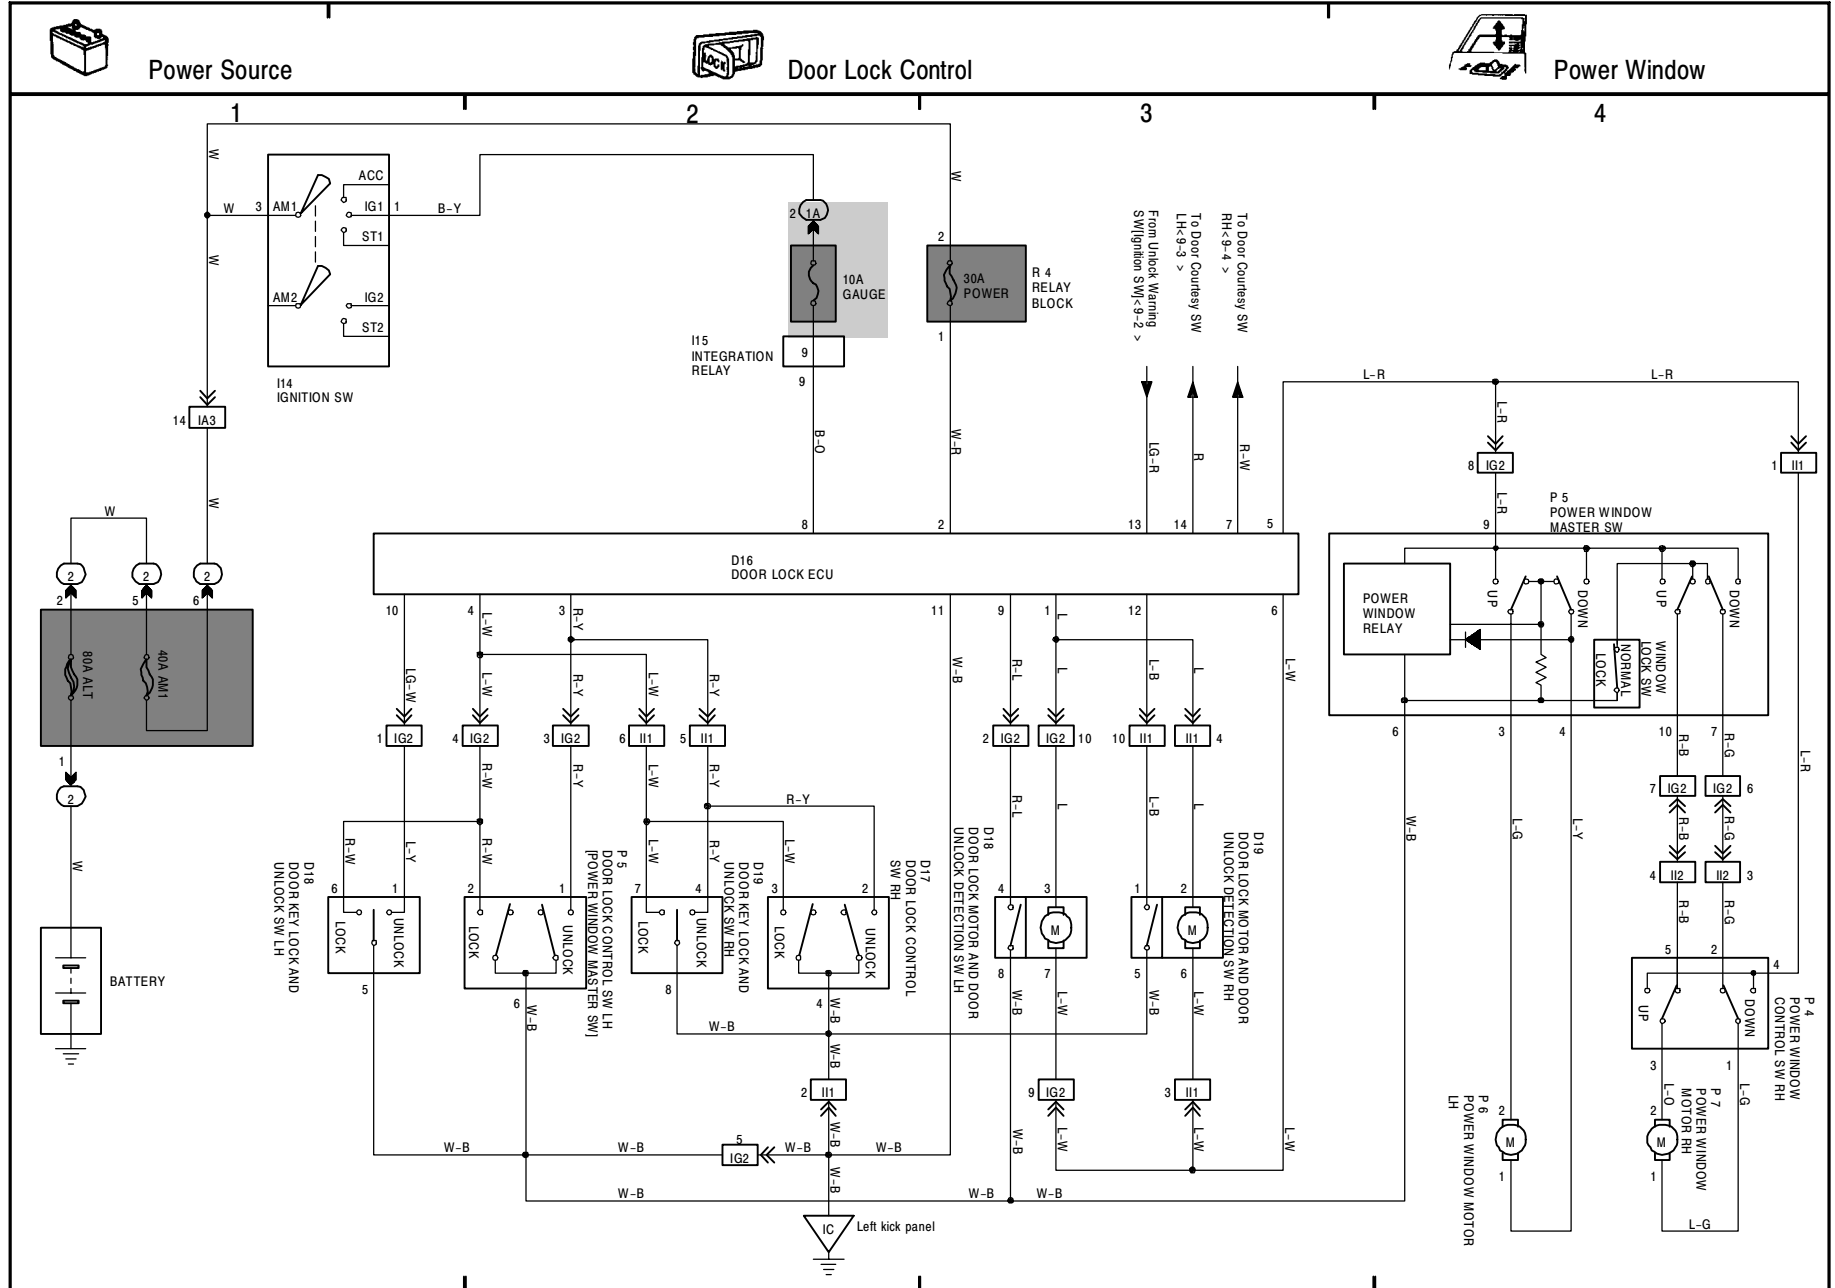

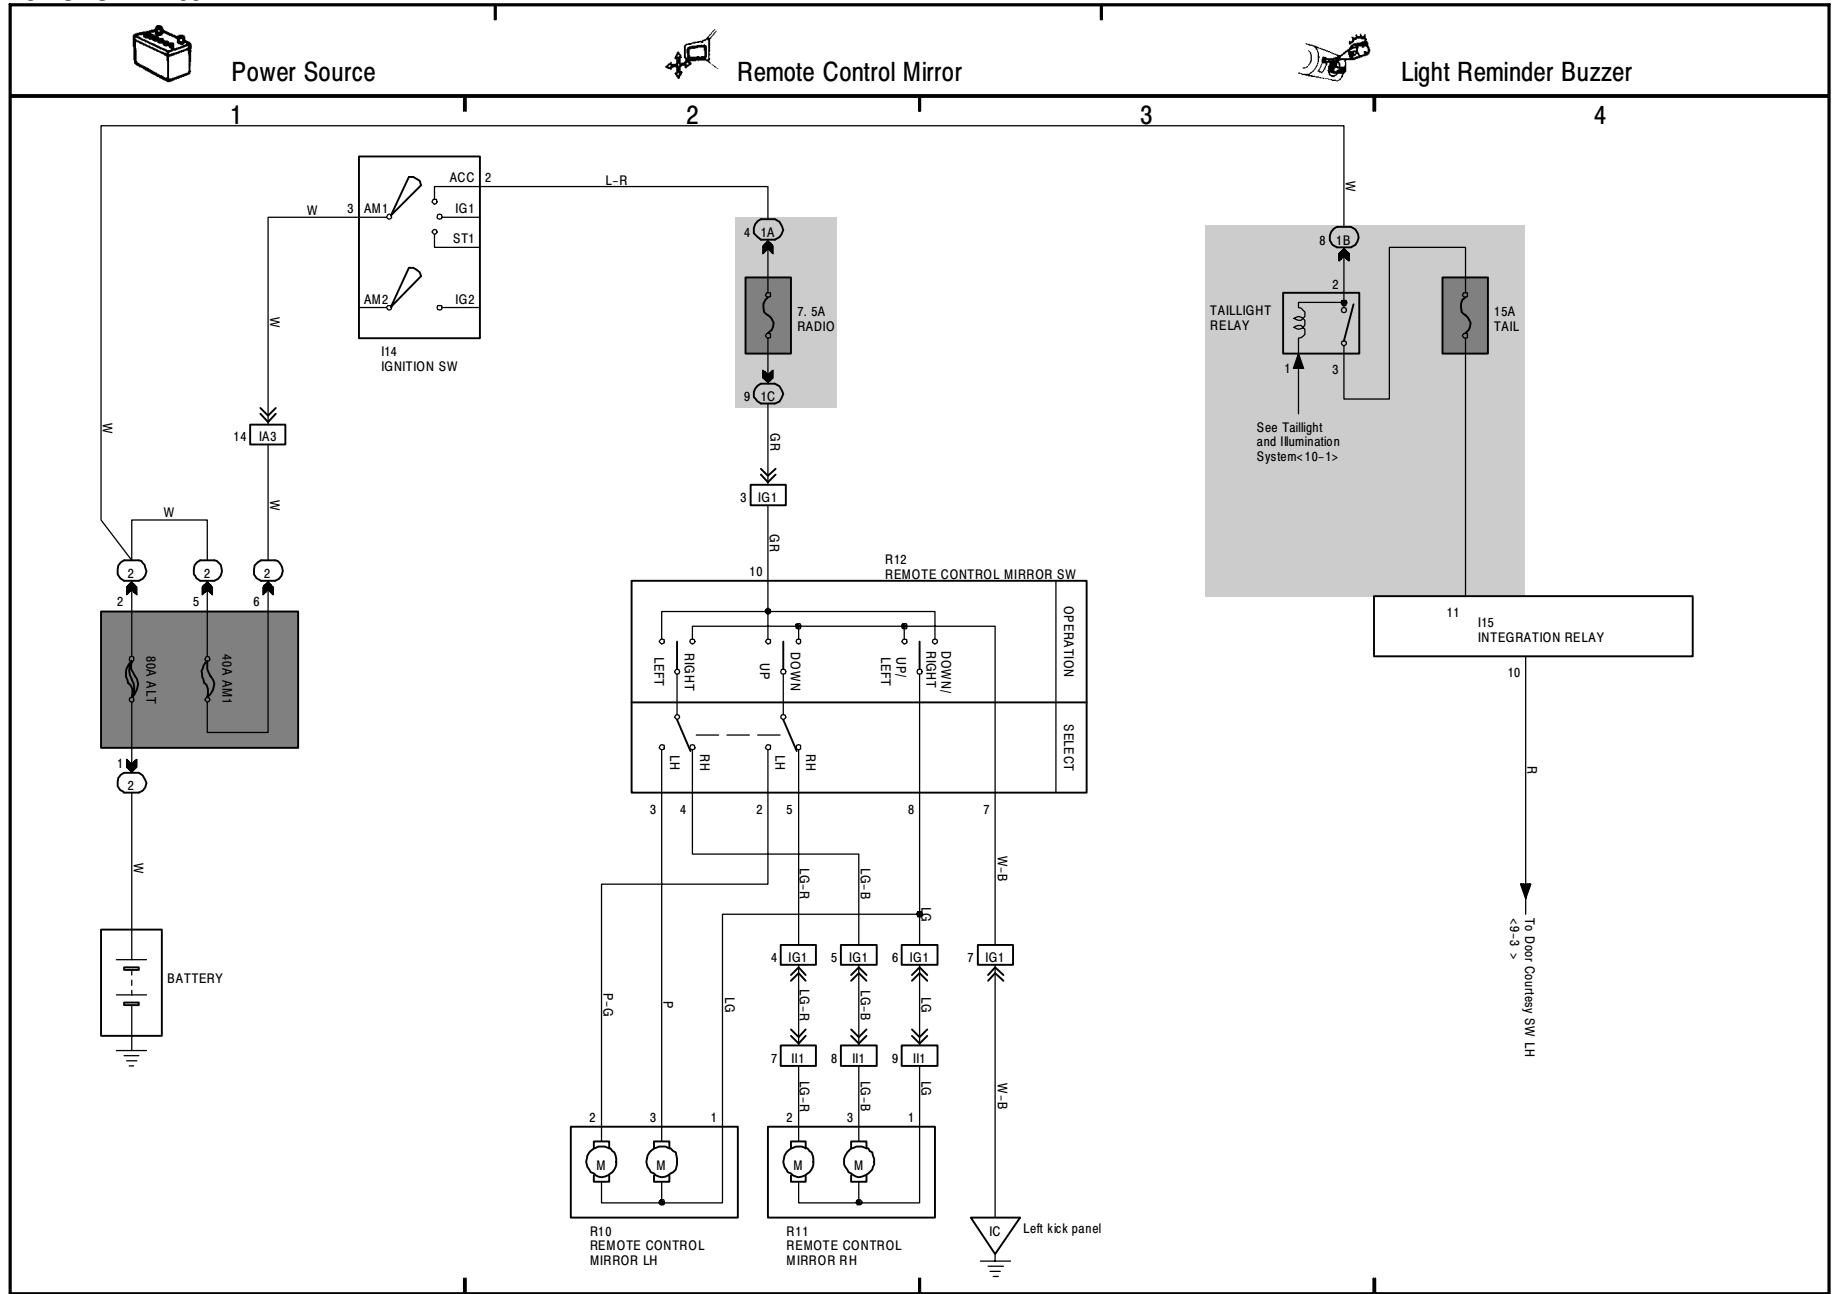


# 19 TOYOTA T100

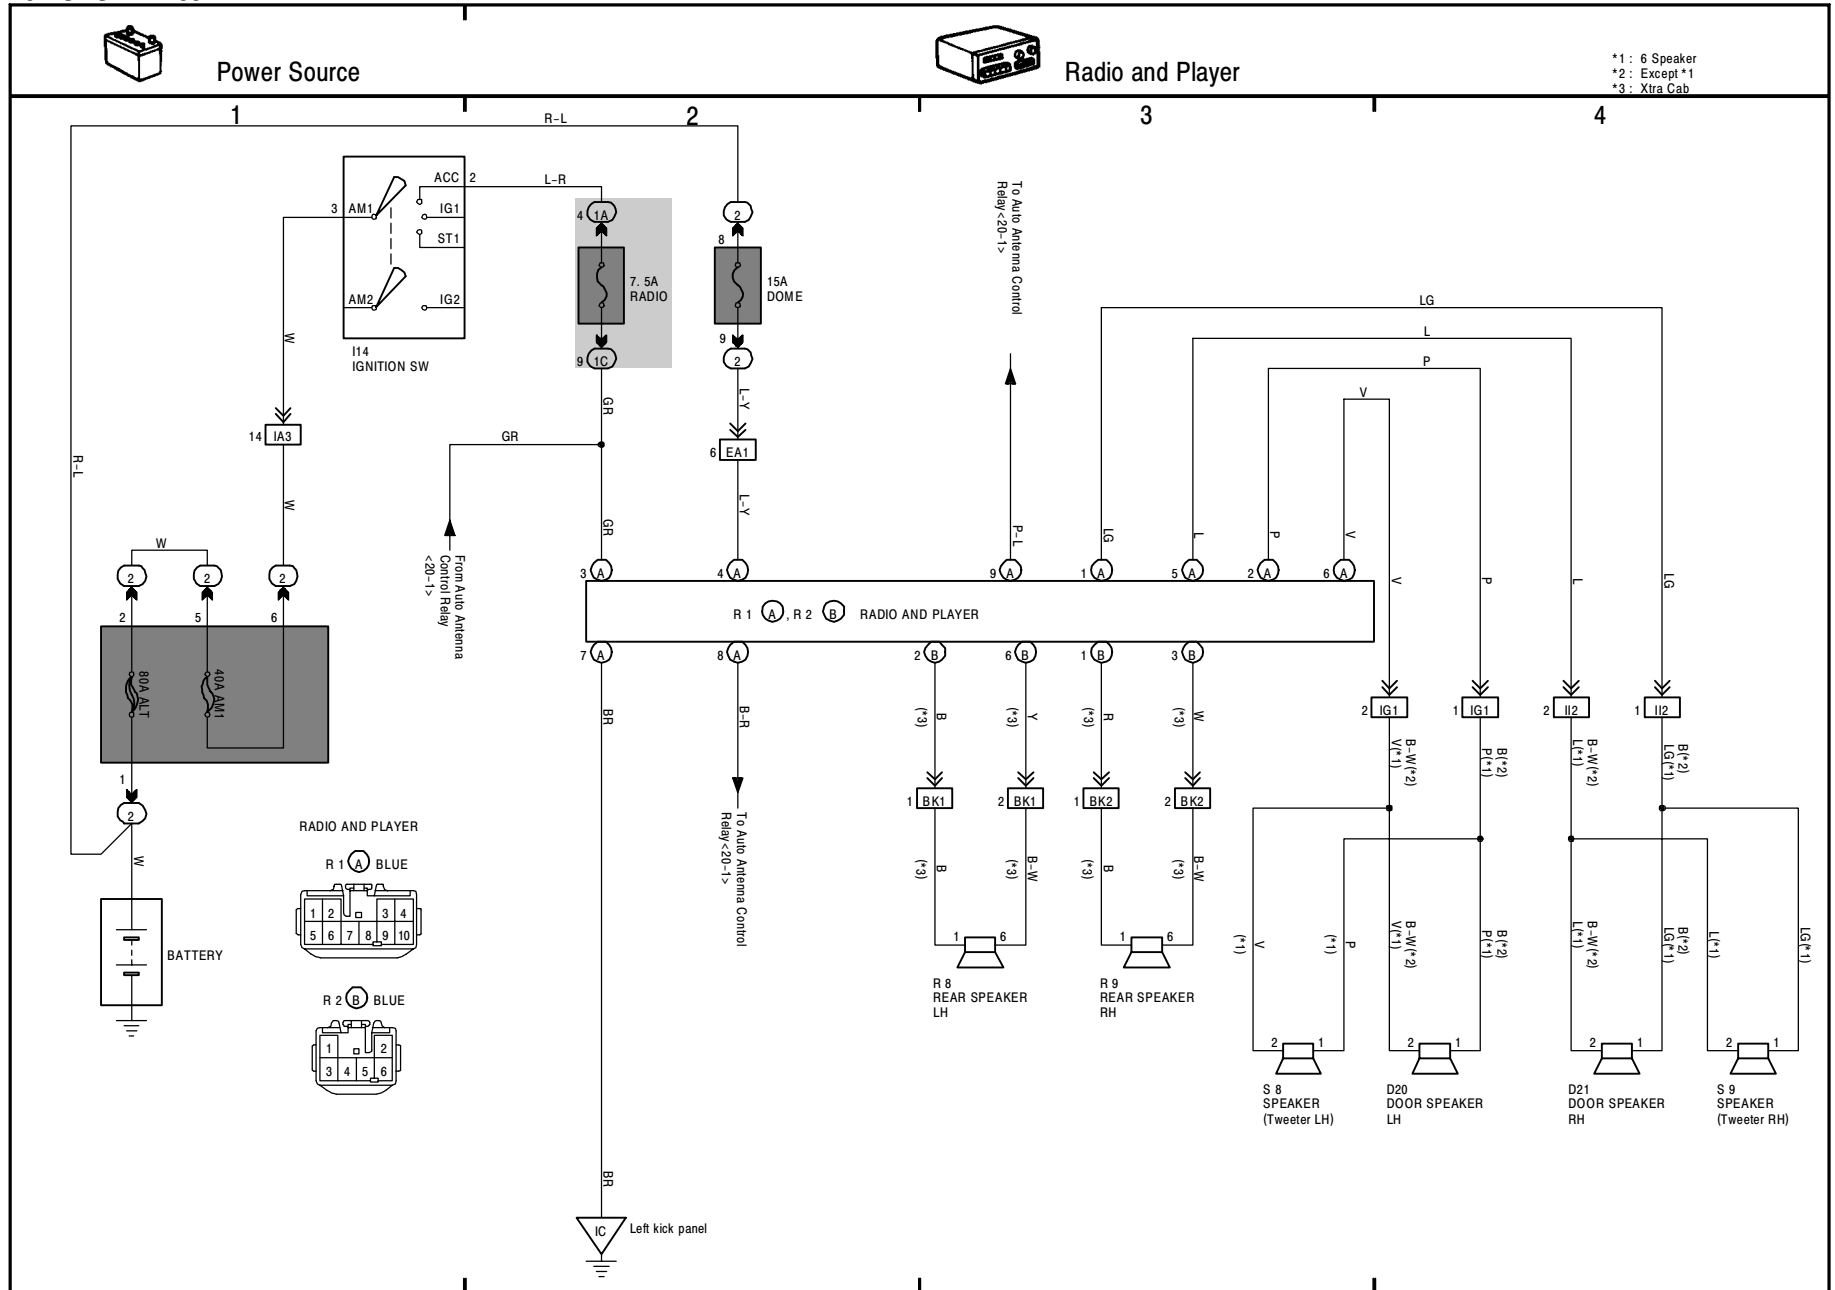


20 TOYOTA T100


K OVERALL ELECTRICAL WIRING DIAGRAM

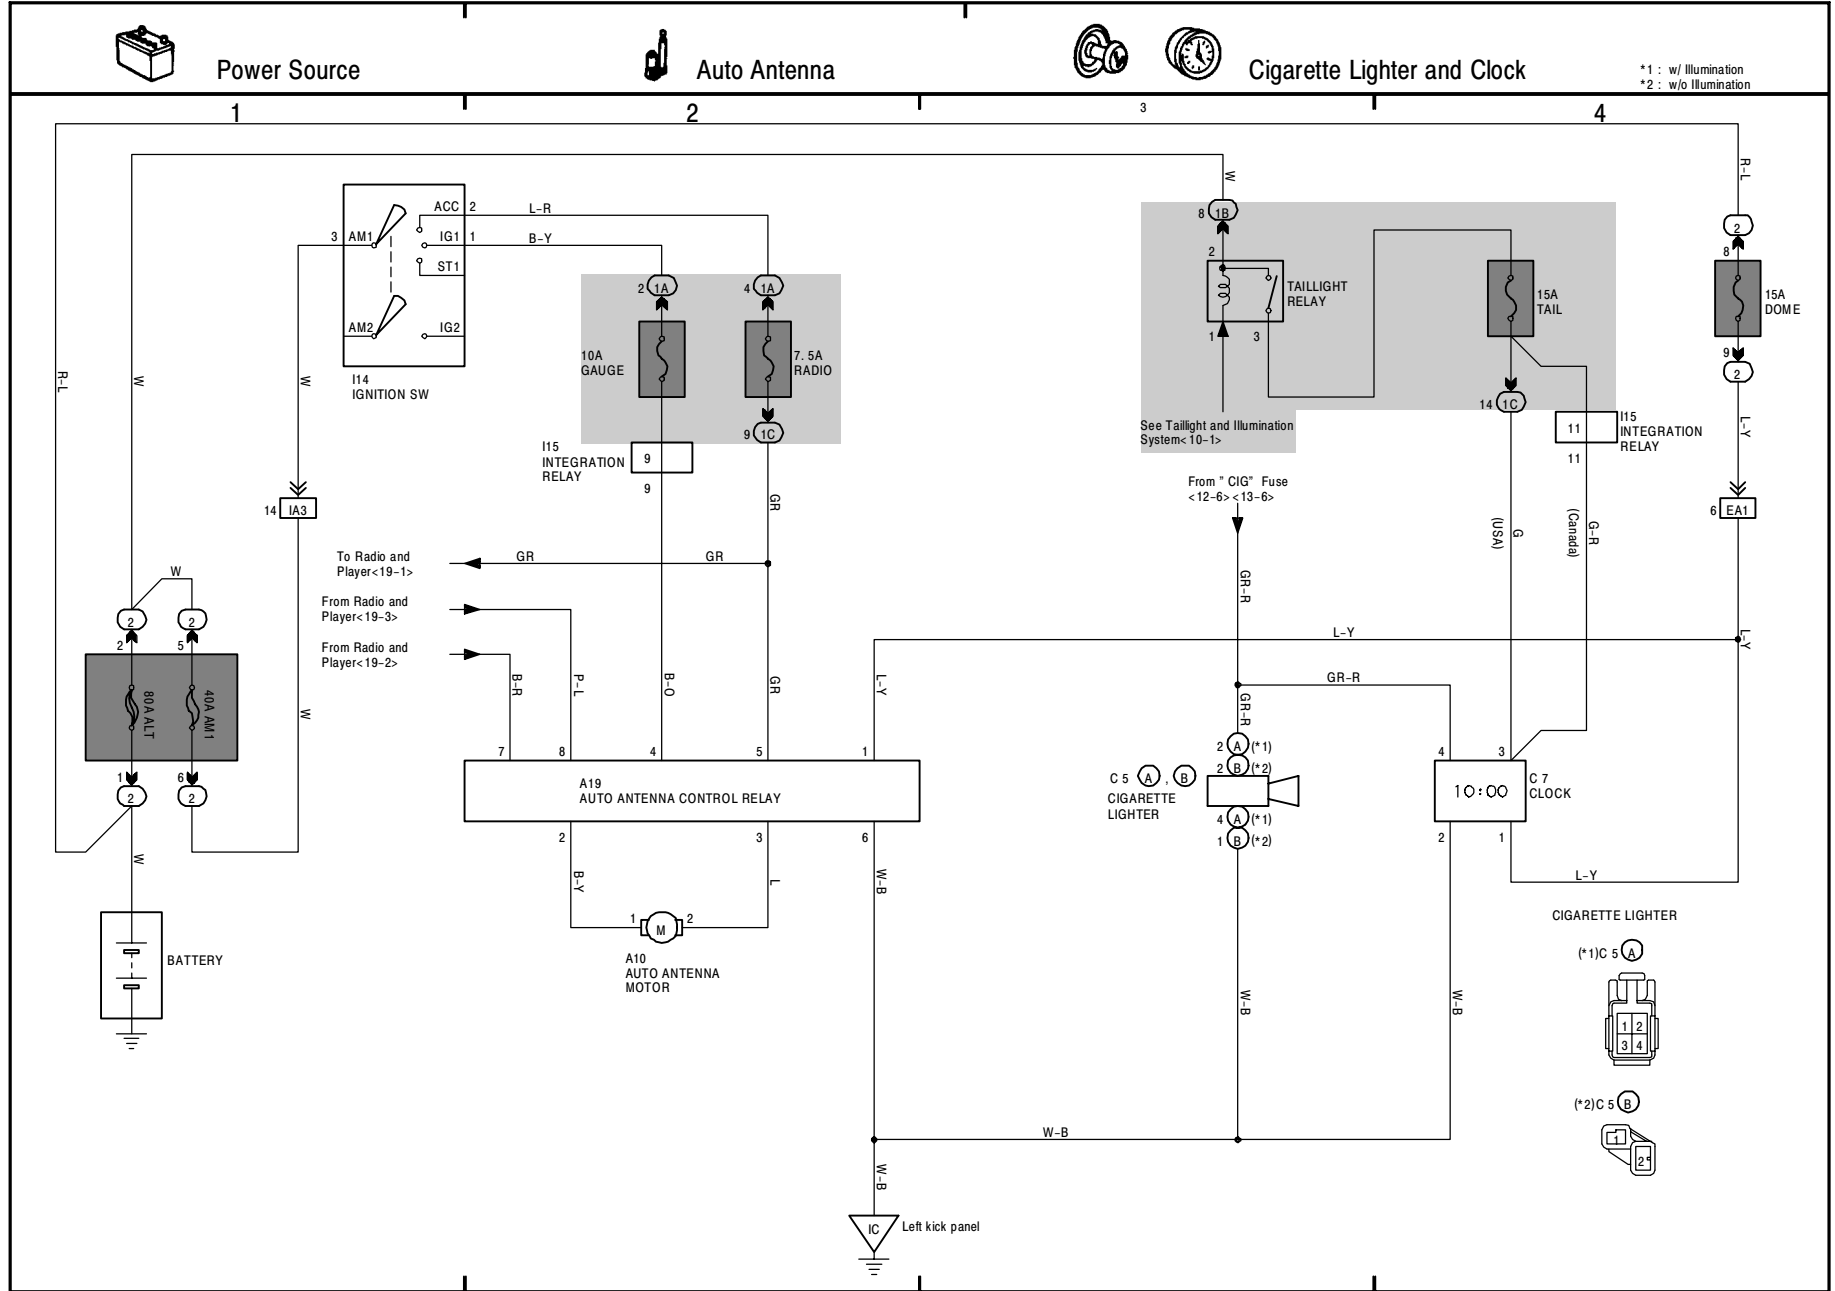

21 TOYOTA T100

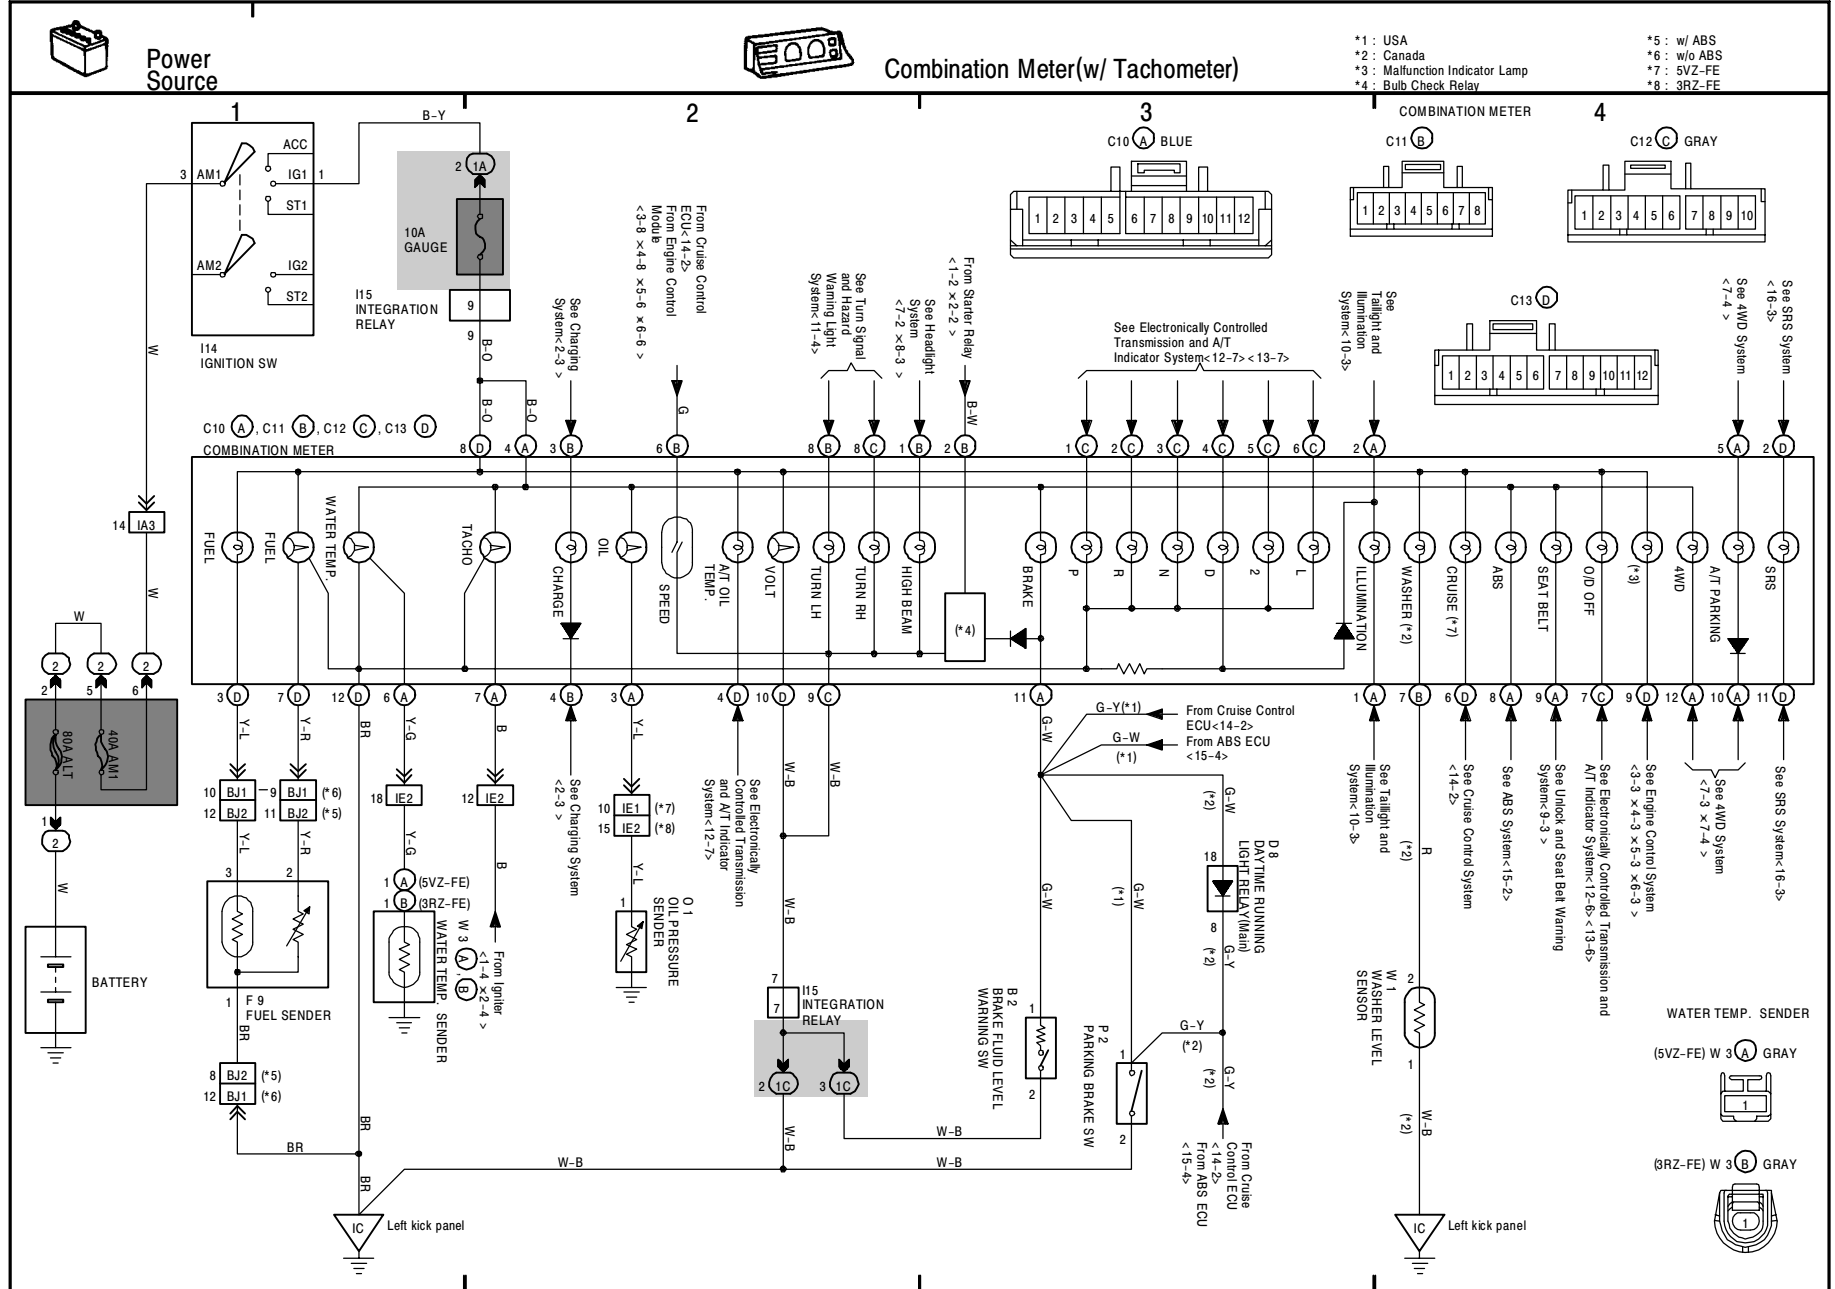



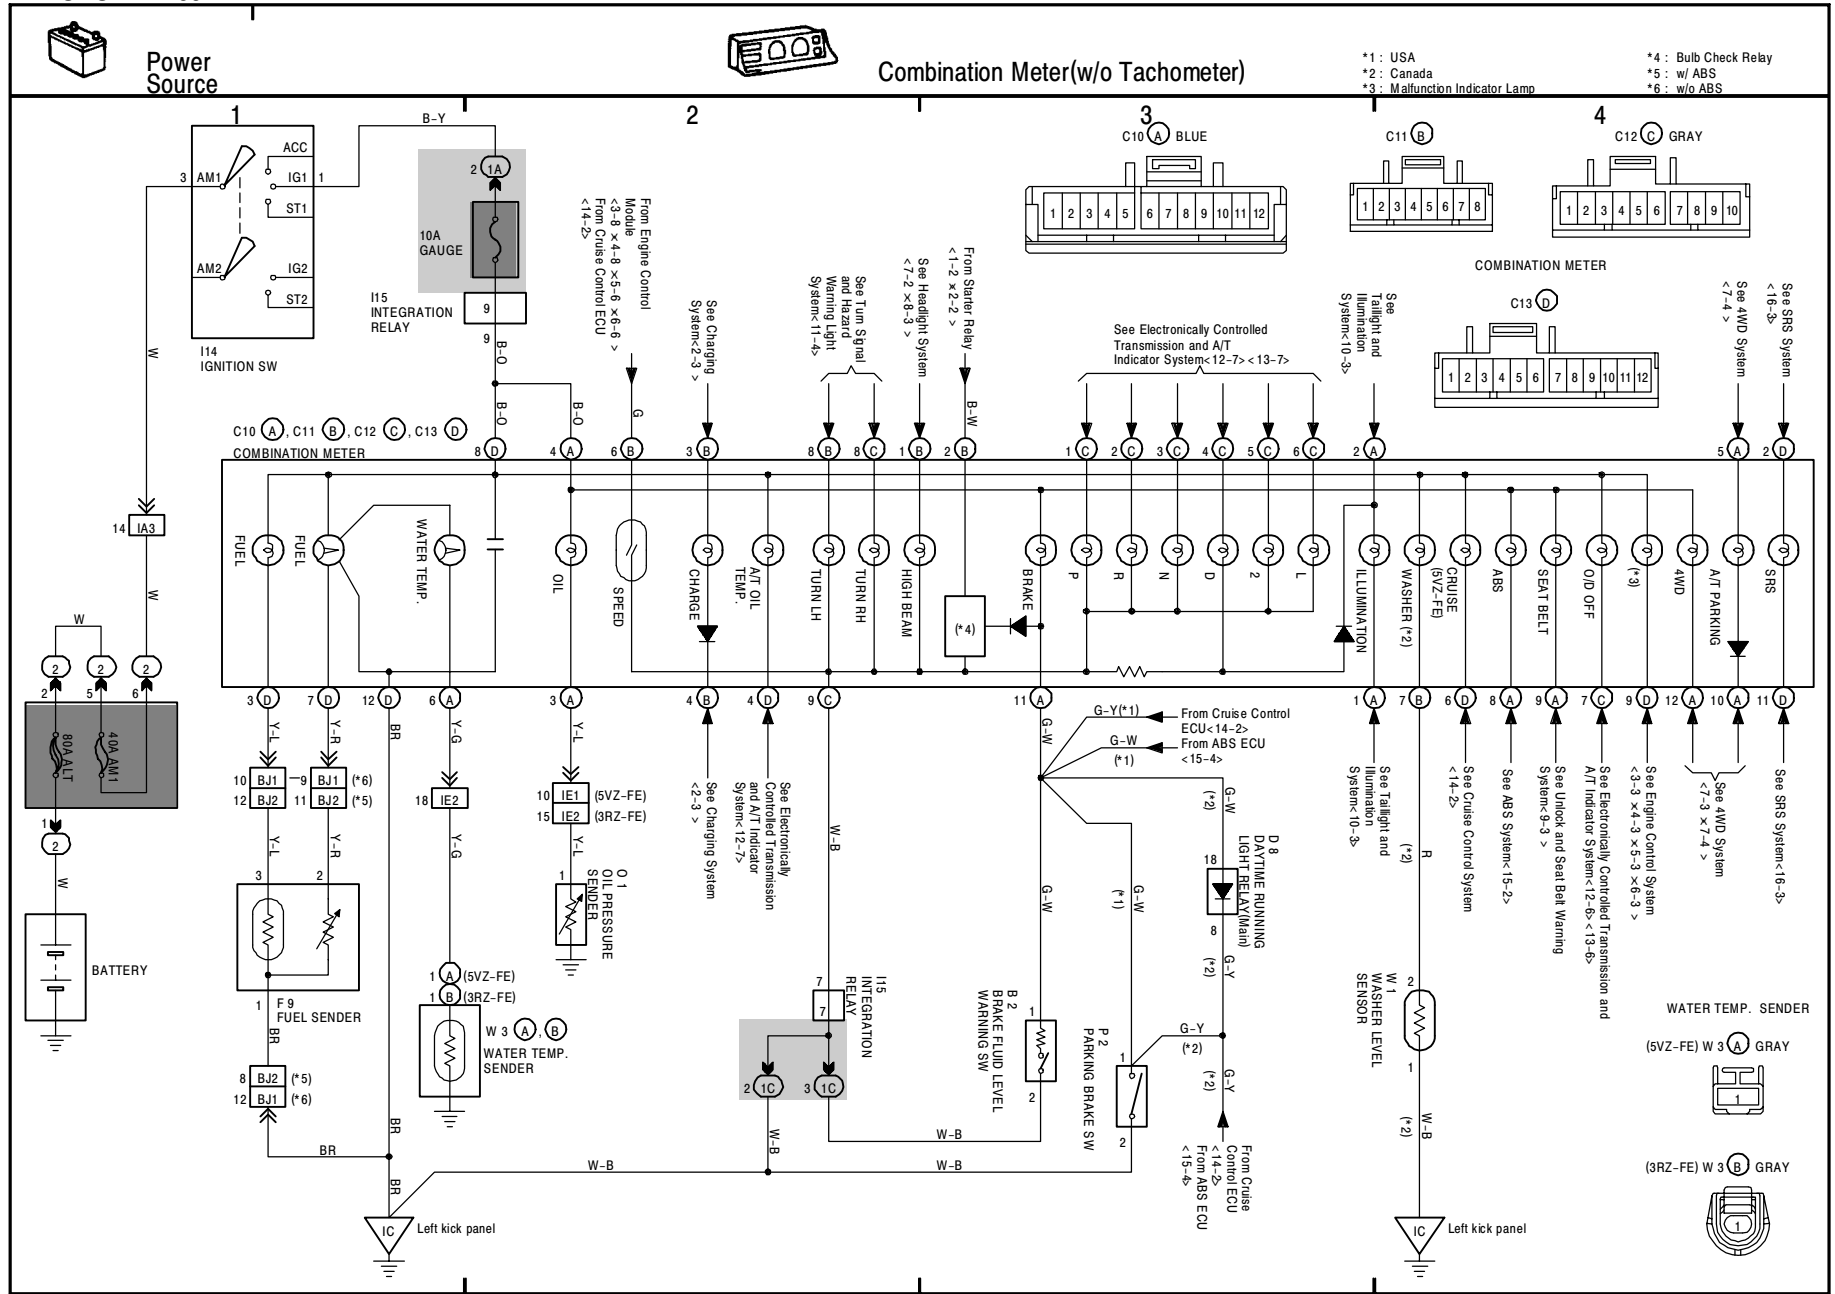

23 TOYOTA T100



Power Source



Air Conditioning(5VZ-FE)

