



STARTING AND IGNITION (5VZ-FE)

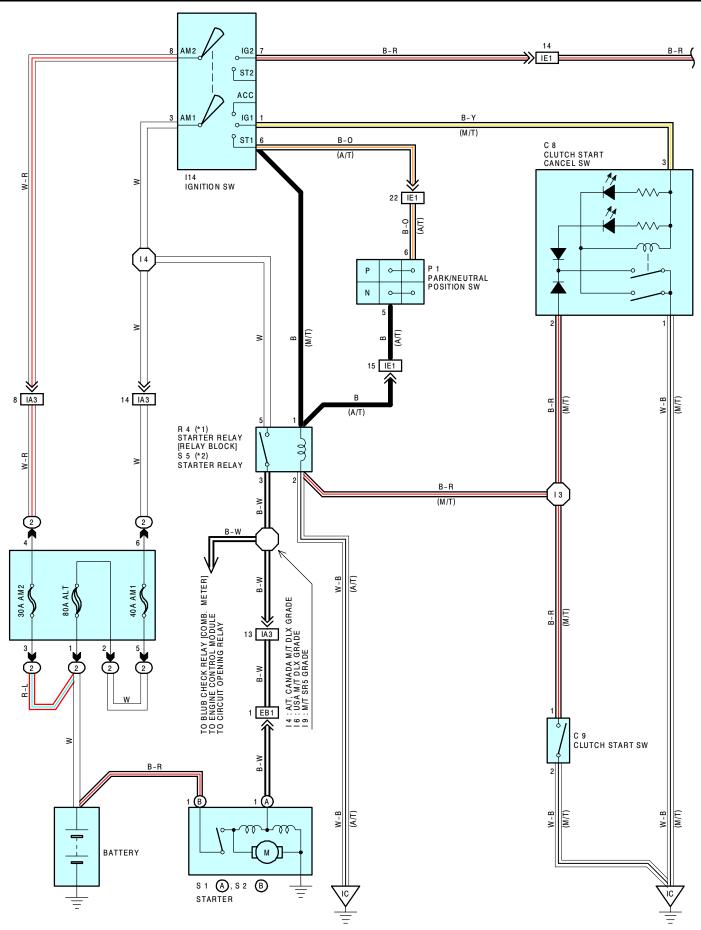

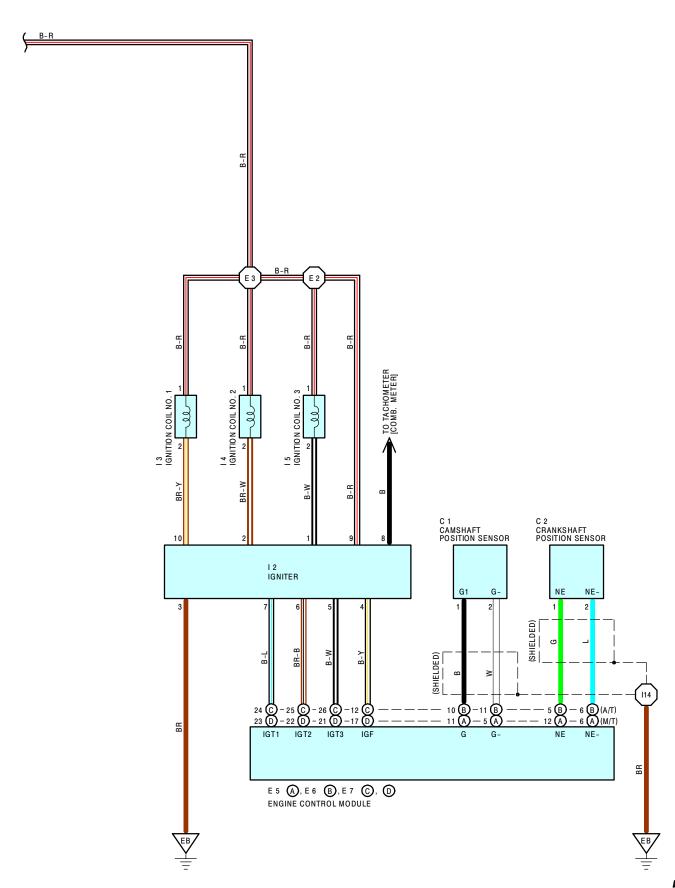



STARTING AND IGNITION (5VZ-FE)

SERVICE HINTS

S1(A), S2(B) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW ON AND IGNITION SW AT **ST** POSITION (A/T)

POINTS CLOSED WITH IGNITION SW AT **ST** POSITION (M/T)

114 IGNITION SW

3-1, 8-7 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

3-6 : CLOSED WITH IGNITION SW AT **ST** POSITION

P1 PARK/NEUTRAL POSITION SW (A/T)

6-5 : CLOSED WITH A/T SHIFT LEVER IN P OR N POSITION

R 4, S 5 STARTER RELAY

5-3 : CLOSED WITH IGNITION SW AT **ST** POSITION AND PARK/NEUTRAL POSITION SW ON (A/T) 5-3 : CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT **ST** POSITION (M/T)

C8 CLUTCH START CANCEL SW (M/T)

1-2 : CLOSED WITH IGNITION SW ON AND CANCEL SW ON

C9 CLUTCH START SW

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

: PARTS LOCATION

CODE C 1		SEE PAGE	CC	DDE	SEE PAGE	CODE		SEE PAGE
		22	E 7	С	27	I14		27
-	C 2	22	_ E/	D	27	P 1		23
	C 8	26	12 2		23	R	4	27
	C 9	26	13		23	S 1	Α	23
E 5	Α	27	I	4	23	S 2	В	23
E6 B		27	I	5	23		5	27

) : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

	CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Ī	EB1	30	ENGINE ROOM MAIN WIRE AND ENGINE NO. 2 WIRE (NEAR THE BATTERY)
Ī	IA3	34	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
Ī	IE1	34	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)

: GROUND POINTS

•		
CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	NEAR THE THROTTLE BODY
IC	34	LEFT KICK PANEL

: SPLICE POINTS

_					
CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	00	ENGINE WIRE	16	0.4	COWL WIRE
E 3	30		19	34	
13	34	COWL WIRE	l14	34	ENGINE WIRE
14	- J-4				

- *1 : USA W/ POWER WINDOW, CANADA A/T AND CANADA M/T W/ POWER WINDOW *2 : USA W/O POWER WINDOW AND CANADA M/T W/O POWER WINDOW















