


H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

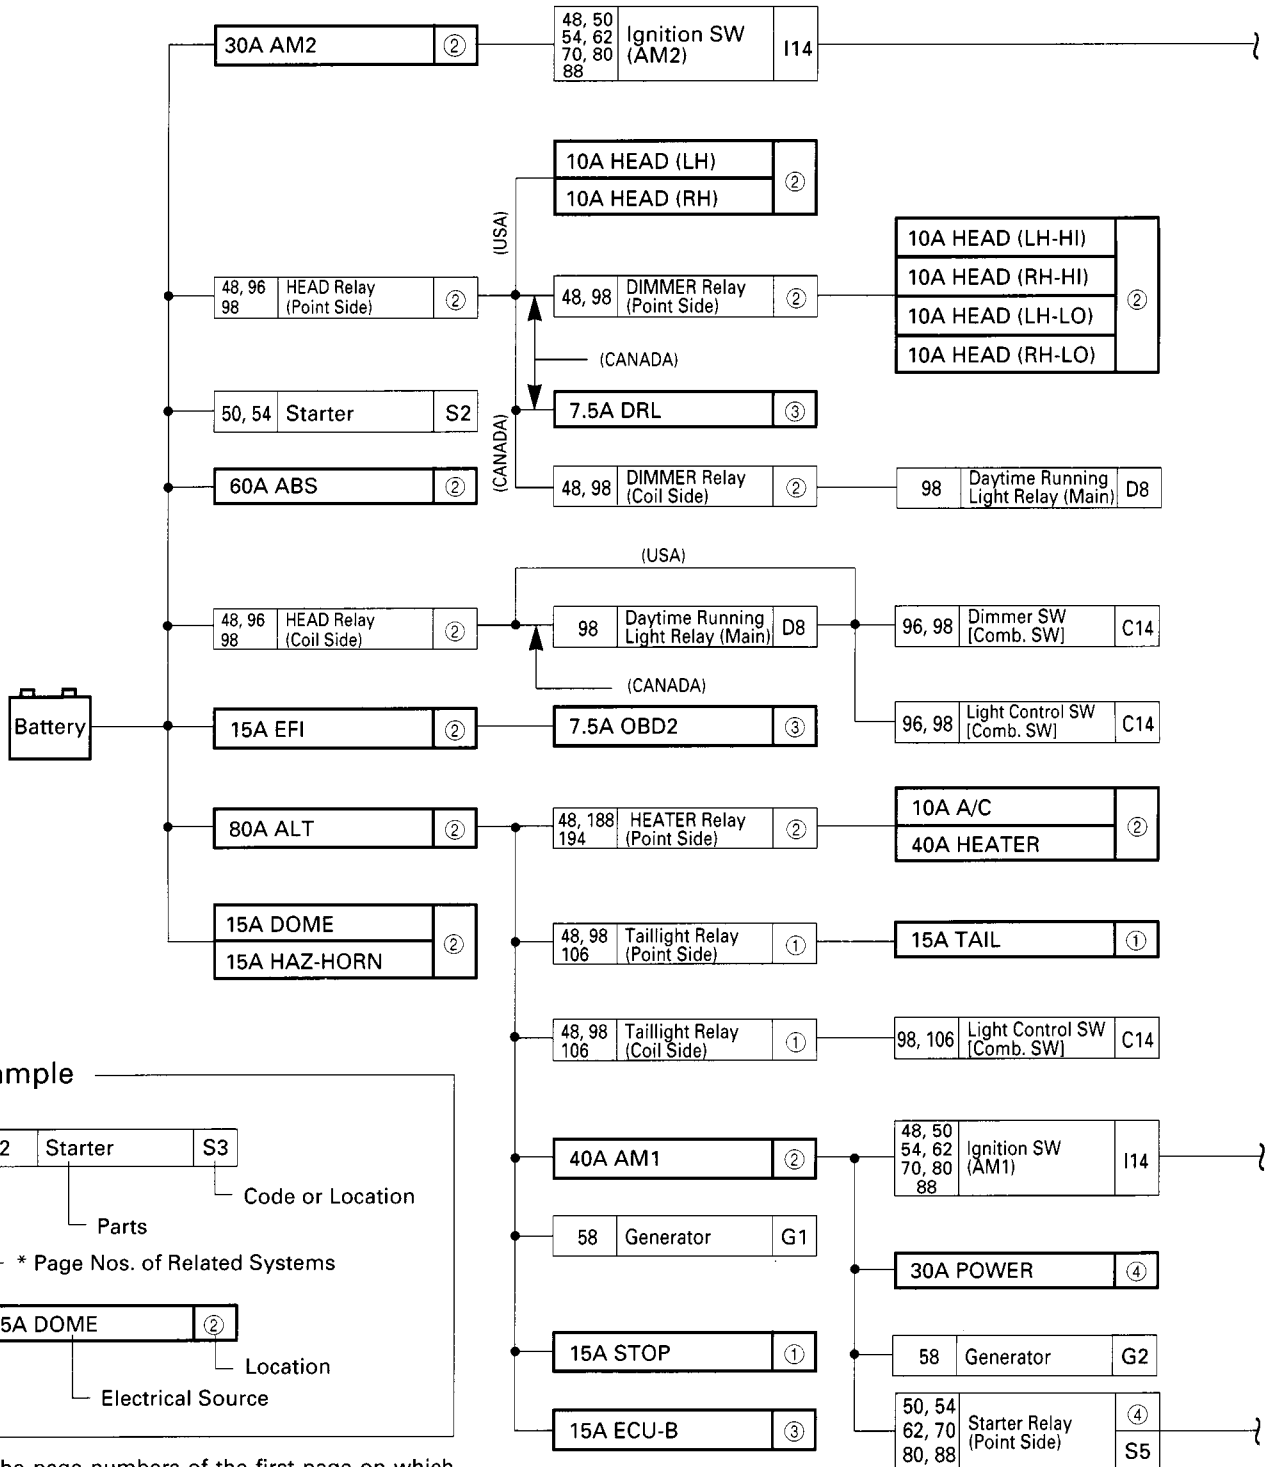

[LOCATION] ① : J/B No. 1 (See page 20)

② : R/B No. 2 (See page 19)

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		62	98	116	104	98	104	104	124	124	62, 70	62	62	62, 70	106			
	Parts		70	180	154							80, 88	80	80	80, 88				
	Code or Location		80	184	162							154, 162	188	88	188				
CB or Fuse		D7	D8	D9	D10	D11	D12	D13	D14	D15	D16	D18	D19	E4	E5	E6	E7	F3	F4
①	7.5A RADIO																		
	15A CIG				●									●					
	10A TURN																		
	20A WIPER																		
	10A GAUGE		●		●						●			●	●	●			
	15A STOP													●					
	10A ENGINE																		
	7.5A IGN																		
	15A TAIL								●										●
②	10A HEAD (LH) (USA)																		
	10A HEAD (RH) (USA)																		
	10A HEAD (LH-LO) (Canada)			●															
	10A HEAD (RH-LO) (Canada)			●															
	10A HEAD (LH-HI) (Canada)			●															
	10A HEAD (RH-HI) (Canada)			●															
	15A HAZ-HORN																		
	15A DOME					●			●	●	●								
	15A EFI													●	●	●	●		
	60A ABS																		
40A HEATER																			
10A A/C																			
③	20A ECU-IG																		
	15A ECU-B		●																
	7.5A OBD2	●																	
	7.5A DRL (Canada)			●			●	●											
④	30A POWER									●	●	●							

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : J/B No. 1 (See page 20)

② : R/B No. 2 (See page 19)

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		127				106 174 176	106	116	110	114	106	116	110	114	106	122			104	62, 70 80, 88 114, 130 144, 154 162			
	Parts	Code or Location	Parking Brake SW	Personal Light	Power Window Control SW RH	Power Window Master SW and Door Lock Control SW LH	Power Window Motor LH	Power Window Motor RH	Radio and Player	Rheostat	Back-Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Remote Control Mirror LH	Remote Control Mirror RH	Remote Control Mirror SW	Step Light	Stop Light SW	
CB or Fuse			P 2	P 3	P 4	P 5	P 6	P 7	R 1	R 5	R 6			R 7			R 10	R 11	R 12	S 6	S 7			
①	7.5A	RADIO							●										●	●	●			
	15A	CIG									●				●									
	10A	TURN										●				●								
	20A	WIPER																						
	10A	GAUGE	●								●				●									
	15A	STOP											●				●						●	
	10A	ENGINE																						
	7.5A	IGN																						
	15A	TAIL							●	●				●				●						
	②	10A	HEAD (LH) (USA)																					
		10A	HEAD (RH) (USA)																					
		10A	HEAD (LH-LO) (Canada)																					
		10A	HEAD (RH-LO) (Canada)																					
		10A	HEAD (LH-HI) (Canada)																					
		10A	HEAD (RH-HI) (Canada)																					
15A		HAZ-HORN										●				●								
15A		DOME		●					●														●	
15A		EFI																						
60A		ABS																						
40A	HEATER																							
10A	A/C																							
③	20A	ECU-IG																						
	15A	ECU-B																						
	7.5A	OBD2																						
	7.5A	DRL (Canada)																						
④	30A	POWER			●	●	●	●																

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : J/B No. 1 (See page 20)

② : R/B No. 2 (See page 19)

