


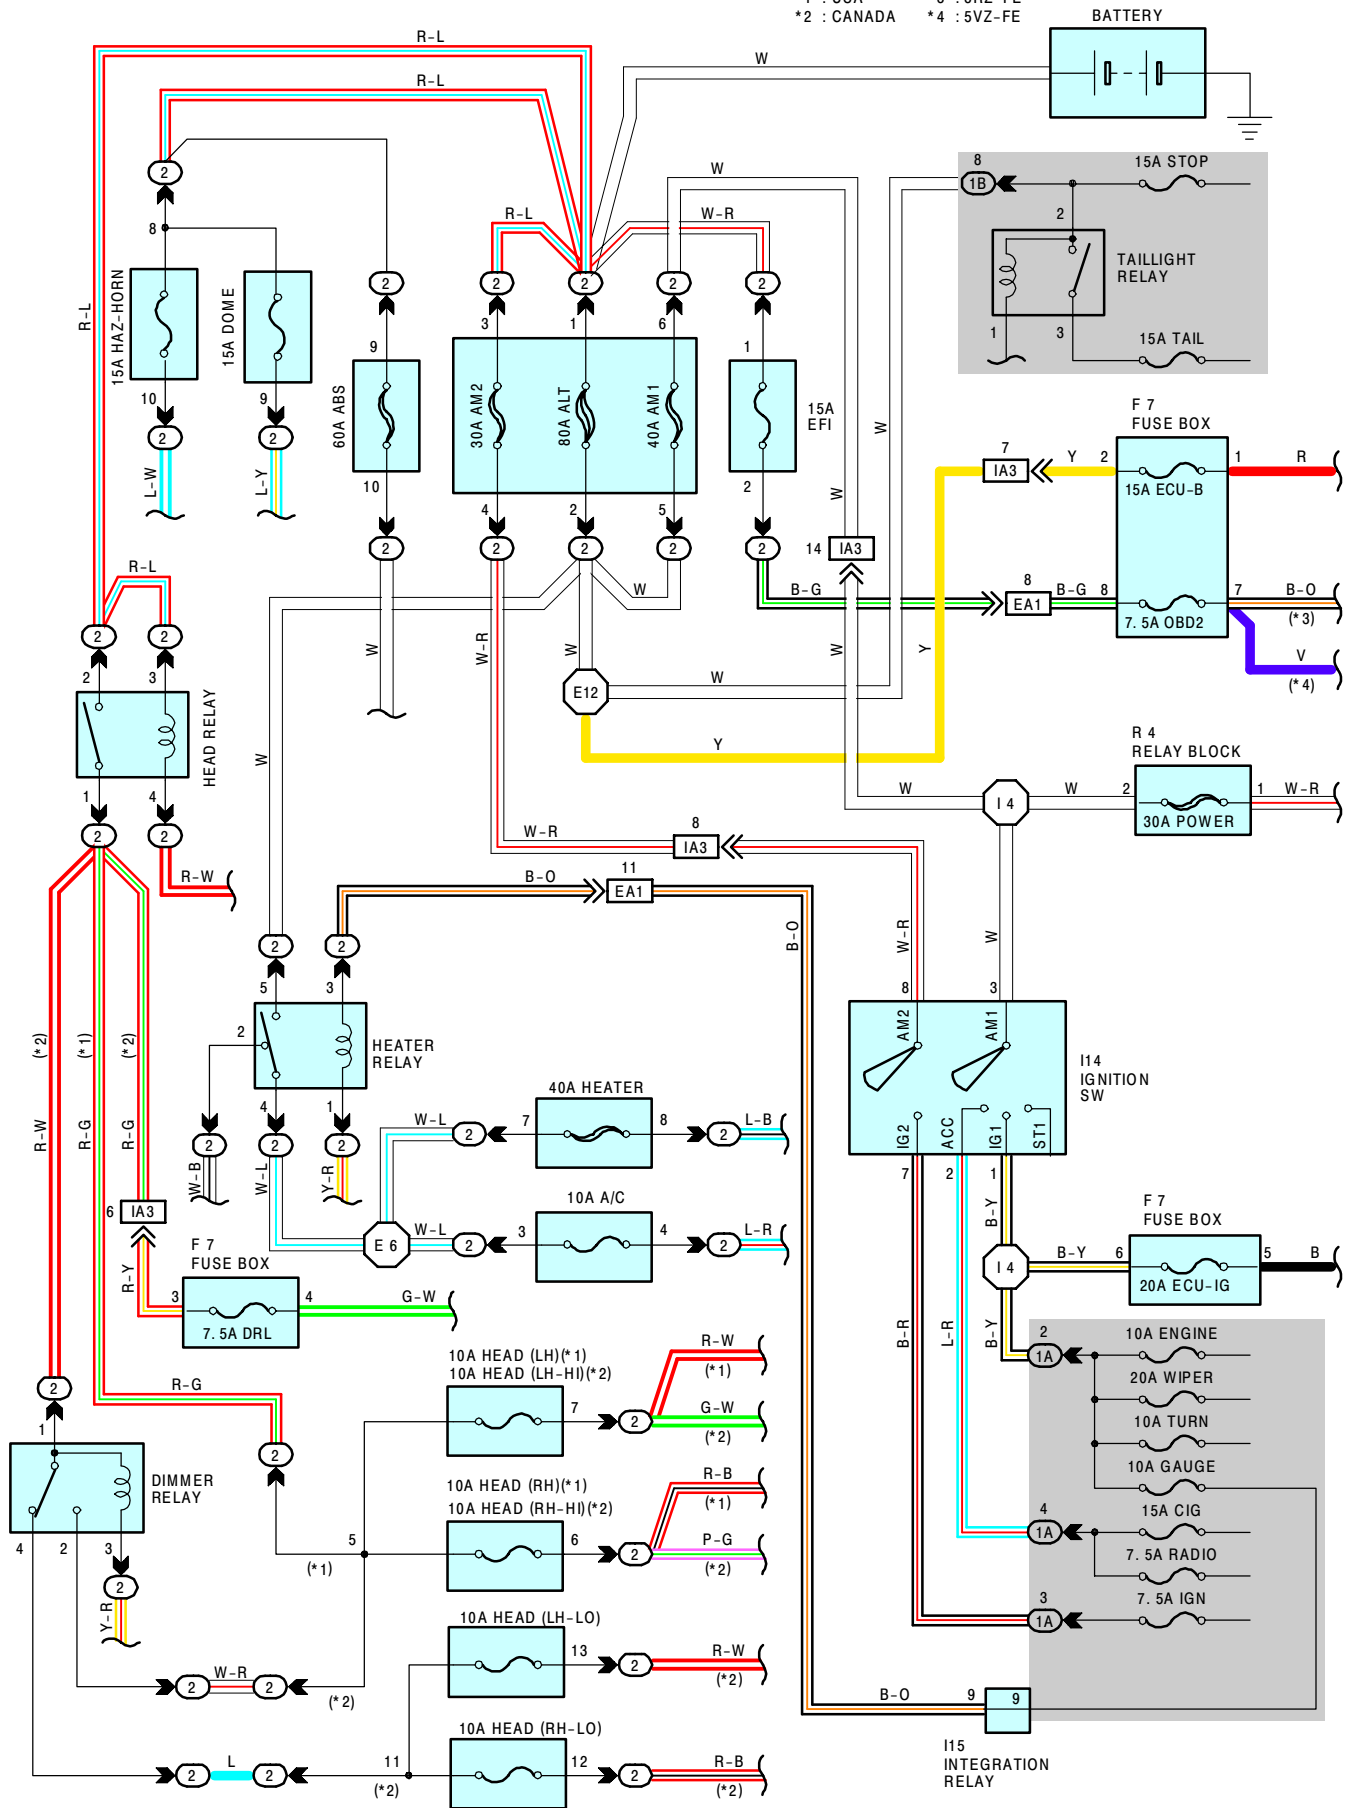

POWER SOURCE

*1 : USA *3 : 3RZ-FE
 *2 : CANADA *4 : 5VZ-FE



SERVICE HINTS

HEATER RELAY

(2) 4 - **(2)** 5 : CLOSED WITH IGNITION SW ON AND BLOWER SW ON

HEAD RELAY

(2) 1- **(2)** 2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

I14 IGNITION SW

3-2 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

3-1 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

8-7 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

2-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

DIMMER RELAY

CHANGED FROM HEAD (LO) TO HEAD (HI) WITH DIMMER SW AT **FLASH** POSITION OR WITH HEAD RELAY ON AND DIMMER SW AT **HIGH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F 7	27	I15	27		
I14	27	R 4	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30 (5VZ-FE)	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)
	32 (3RZ-FE)	
IA3	34	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

○ : SPLICE POINTS





CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	30 (5VZ-FE)	ENGINE ROOM MAIN WIRE	E12	32 (3RZ-FE)	ENGINE ROOM MAIN WIRE
	32 (3RZ-FE)		I 4	34	COWL WIRE
E12	30 (5VZ-FE)				

(USA 5VZ-FE) F 7

(CANADA 5VZ-FE) F 7

(3RZ-FE) F 7

    I14 BLACK



(5VZ-FE SR5 GRADE) I15

(5VZ-FE DLX GRADE, 3RZ-FE) I15

R 4

