
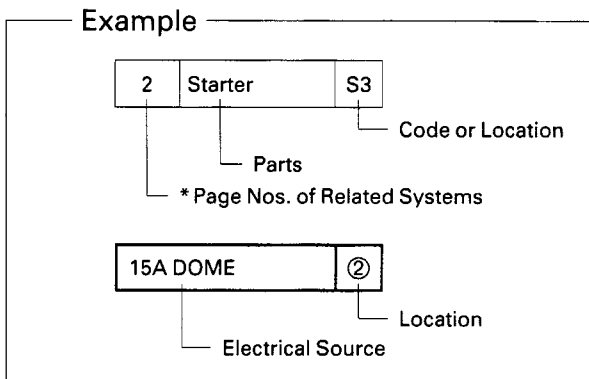


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

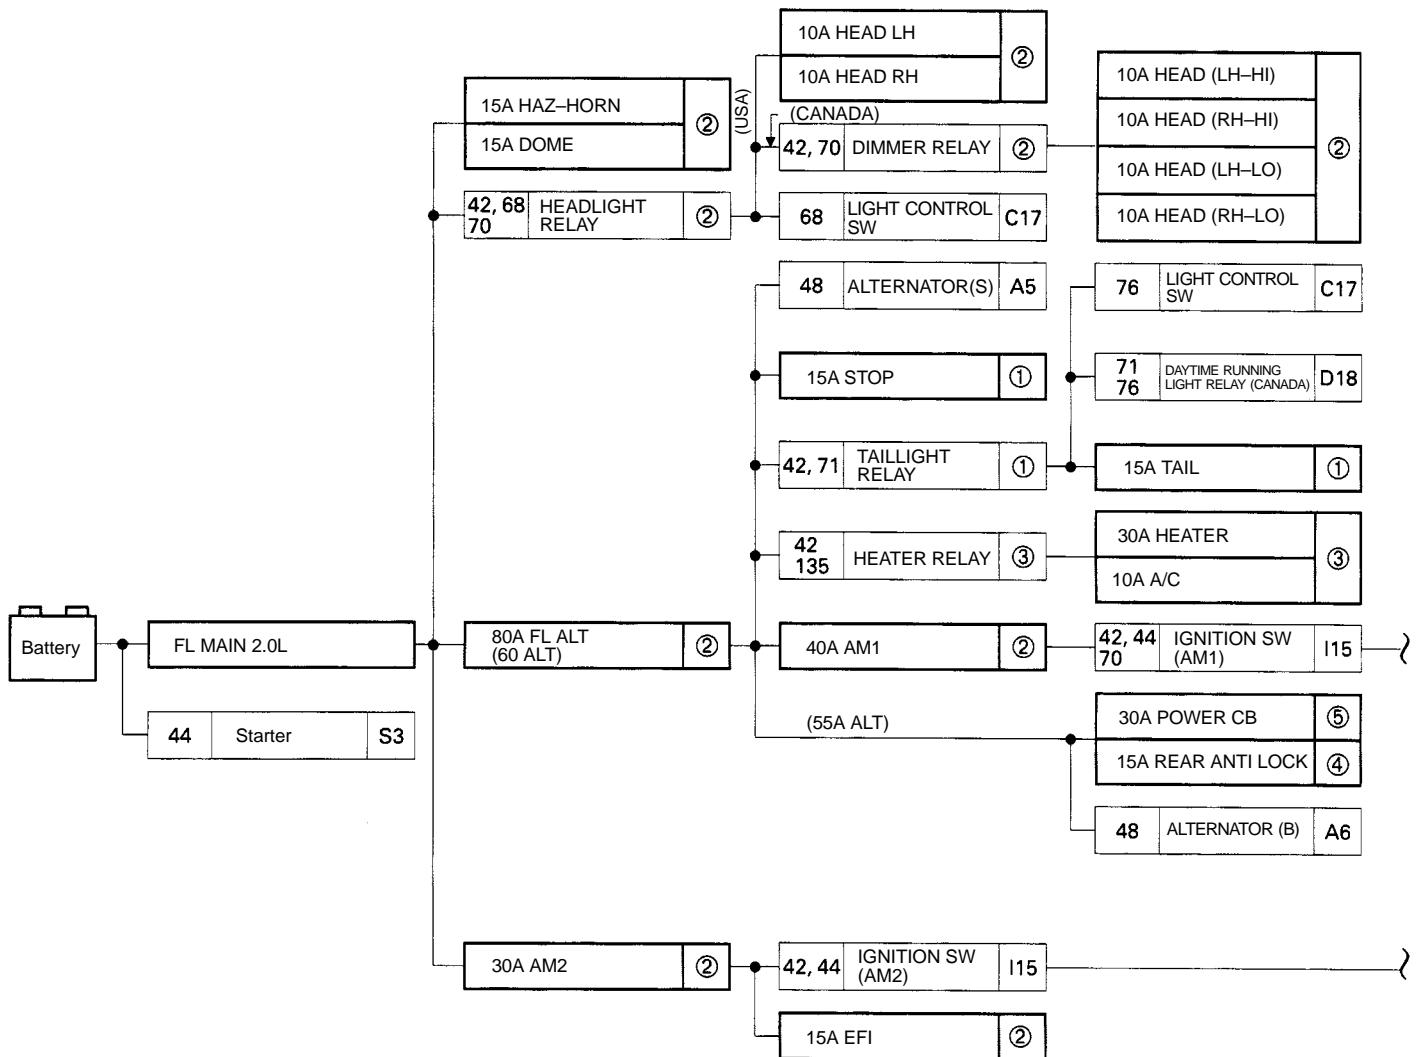

* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : R/B No. 2 (See page 17) (3) R/B No. 3 (See page 20)

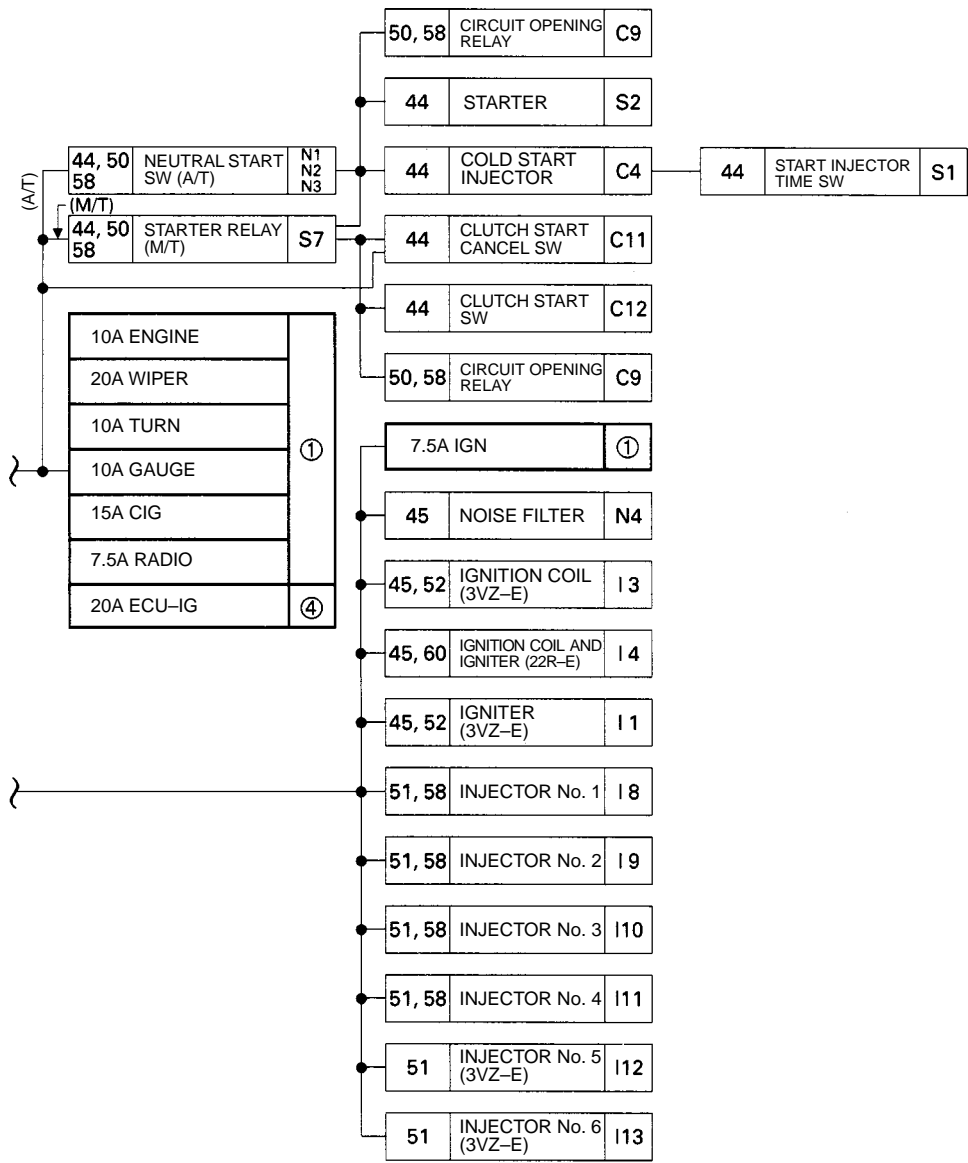

(4) : Fuse Block (See page 18)

(5) : Circuit Breaker (See page 18)

POWER SOURCE (Current Flow Chart)

Location		*Page Nos. of Related Systems																					
		134	120 122	50 58	48	126	134	134	76	134	120 122	126	106	106	106	106	82	130	82	134	52 60		
Parts																							
Code or Location																							
CB or Fuse		A1	A3	A4	A5	A7	A8	A9	A10	A11	A12	A14	A16	A17	A18	A19	B1	B2	B3	B4	B5	C3	
①	10A	ENGINE				●																	
	20A	WIPER																					
	10A	TURN																					
	10A	GAUGE		●						●	●	●	●	●	●		●	●	●				
	15A	CIG																●		●			
	7.5A	RADIO										●											
	7.5A	IGN																					
	15A	STOP														●							
	15A	TAIL								●													
②	10A	HEAD LH *1																					
	10A	HEAD RH *1																					
	10A	HEAD (LH HI) *2																					
	10A	HEAD (RH HI) *2																					
	10A	HEAD (LH LO) *2																					
	10A	HEAD (RH LO) *2																					
	15A	HAZ-HORN																					
	15A	DOMESTIC					●					●											
	15A	EFI	●		●																		●
7.5A	CHARGE				●																		
③	30A	HEATER																			●	●	
	10A	A/C					●	●	●														
④	15A	ANTI LOCK											●		●	●							
	20A	ECU-IG													●	●							
⑤	30A	POWER																					

* These are the page numbers of the first page on which the related system is shown.
 The part indicated is located somewhere in the system, not necessarily on the page indicated here.
 *1: (for USA)
 *2: (for CANADA)

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : R/B No. 2 (See page 17) (3) R/B No. 3 (See page 20)

129	76	50 58	129	58 98 110 130	76	106	118	120 122	48	68 70	80	116	80	50 58	110	104	84	115	110	90 94	74 118	74	90	70	98			
Cigarette Lighter	Cigarette Lighter Light	Circuit Opening Relay	Clock	Combination Meter	Combination Meter Light [Comb. Meter]	Rear Anti Lock Warning Light [Comb. Meter]	Seat Belt Warning Light [Comb. Meter]	4WD Indicator Light [Comb. Meter]	Charge Warning Light [Comb. Meter]	High Beam Indicator Light [Comb. Meter]	Turn Signal and Hazard Indicator Light LH [Comb. Meter]	A/T Indicator [Comb. Meter]	Turn Signal and Hazard Indicator Light RH [Comb. Meter]	Check Engine Warning Light [Comb. Meter]	Cruise Control Indicator [Comb. Meter]	O/D OFF Indicator [Comb. Meter]	Wiper and Washer SW [Comb. SW]	Horn SW [Comb. Meter]	Cruise Control ECU	Cruise Control Main Relay	Door Control Relay	Door Courtesy SW LH	Door Courtesy SW RH	Door Courtesy Light LH	Door Courtesy Light RH	Door Lock Solenoid	Daytime Running Light Relay (CANADA)	ECT Pattern Select SW
C8	C9	C10	C13 C16	C13	C13	C13	C13	C13	C13	C14	C14	C15	C15	C16	C16	C16	C18	C20	C21	D6	D7	D8	D10	D11	D15 D16	D18	E6	

(4) : Fuse Block (See page 18)

(5) : Circuit Breaker (See page 18)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems			76	80	50 58	130	78	68 70	115	80	76	134	76	120	122	90 118	74	86					
			Parts	Code or Location	CB or Fuse	ECT Pattern Select SW Light	Front Clearance Light LH	Front Clearance Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Fuel Pump	Fuel Sender	Glove Box Light	Glove Box Light SW	Headlight LH	Headlight RH	Horn	Hazard SW	Hazard SW Light	Heater Blower SW	Heater Control Light	Indicator SW (A/T)	Transfer Pressure SW	Indicator SW (M/T)	Unlock Warning SW	Interior Light
			E7	F1	F2	F3	F4	F6	F7	G1	G2	H1	H2	H3	H4	H5	15 16	I6	I7	I15	I16	L1				
①	10A	ENGINE																								
	20A	WIPER																								
	10A	TURN				●	●								●											
	10A	GAUGE							●							●		●	●	●						●
	15A	CIG																								
	7.5A	RADIO																								●
	7.5A	IGN																								
	15A	STOP																								
	15A	TAIL	●	●	●						●	●					●		●							●
②	10A	HEAD LH *1										●														
	10A	HEAD RH *1											●													
	10A	HEAD (LH HI) *2										●														
	10A	HEAD (RH HI) *2											●													
	10A	HEAD (LH LO) *2										●														
	10A	HEAD (RH LO) *2											●													
	15A	HAZ-HORN				●	●								●	●										
	15A	DOME																					●		●	
	15A	EFI							●																	
	7.5A	CHARGE																								
③	30A	HEATER															●									
	10A	A/C																								
④	15A	ANTI LOCK																								
	20A	ECU-IG																								
⑤	30A	POWER																								

* These are the page numbers of the first page on which the related system is shown.
 The part indicated is located somewhere in the system, not necessarily on the page indicated here.
 *1: (for USA)
 *2: (for CANADA)

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : R/B No. 2 (See page 17) (3) R/B No. 3 (See page 20)

		76	82 98 116	104	50	58	130	98 104	76	104	96	130	94				78 126 128	78	82	80	66	76	82	80	66	76		
L2	L3	Z1 Z2	O1	O2	O4	O5	O6	O8 O9	O9	O10	P1	P2	P3	P4	P5	P6	P7	R1	R4	R5				R6				R7
			●					●		●																		
		●					●	●					●															
		●																●										
																		●										
●	●									●								●	●							●		
					●	●	●																					
											●	●																
														●	●	●	●											

(4) : Fuse Block (See page 18)

(5) : Circuit Breaker (See page 18)

POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		76	88			124	50 58 66 98 110 124	74	44 98 50	104 58 134	80	120 122	50 58		84	130	84	58 70 98 118	120 122 129	50 58 98	134		
	Parts	Code or Location	Rear Side Marker Light RH	Remote Control Mirror LH	Remote Control Mirror RH	Remote Control Mirror SW	Shift Lock ECU	Stop Light SW	Spot Light	TCCS ECU			Turn Signal Flasher	VSV (for 2WD, ADD)	VSV (for 4WD, ADD)	VSV (AS)	VSV (EGR, CALIFORNIA)	VSV (FUEL PRESSURE-UP)	Washer Motor	Washer Temp. Sender	Wiper Motor	Integration Relay	EFI Main Relay	Heater Relay
	CB or Fuse		R8	R11	R12	R13	S4	S8	S9	T2	T3	T4	T5	V1	V2	V4	V5	V7	W1	W3	W5	①	②	③
①	10A	ENGINE																						
	20A	WIPER																	●		●			
	10A	TURN									●	●										●		
	10A	GAUGE					●				●		●	●						●		●		●
	15A	CIG					●															●		
	7.5A	RADIO		●	●	●																		
	7.5A	IGN									●												●	
	15A	STOP					●	●			●													
	15A	TAIL	●																					
②	10A	HEAD LH *1																						
	10A	HEAD RH *1																						
	10A	HEAD (LH HI) *2																						
	10A	HEAD (RH HI) *2																						
	10A	HEAD (LH LO) *2																						
	10A	HEAD (RH LO) *2																						
	15A	HAZ-HORN										●												
	15A	DOME							●															
	15A	EFI									●				●	●	●						●	
7.5A	CHARGE																							
③	30A	HEATER																						
	10A	A/C																						
④	15A	ANTI LOCK																						
	20A	ECU-IG																						
⑤	30A	POWER																						

* These are the page numbers of the first page on which the related system is shown.
 The part indicated is located somewhere in the system, not necessarily on the page indicated here.
 *1: (for USA)
 *2: (for Canada)

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : R/B No. 2 (See page 17) (3) R/B No. 3 (See page 20)
 (4) : Fuse Block (See page 18) (5) : Circuit Breaker (See page 18)