


POWER SOURCE

○ USA
 ⊕ CANADA

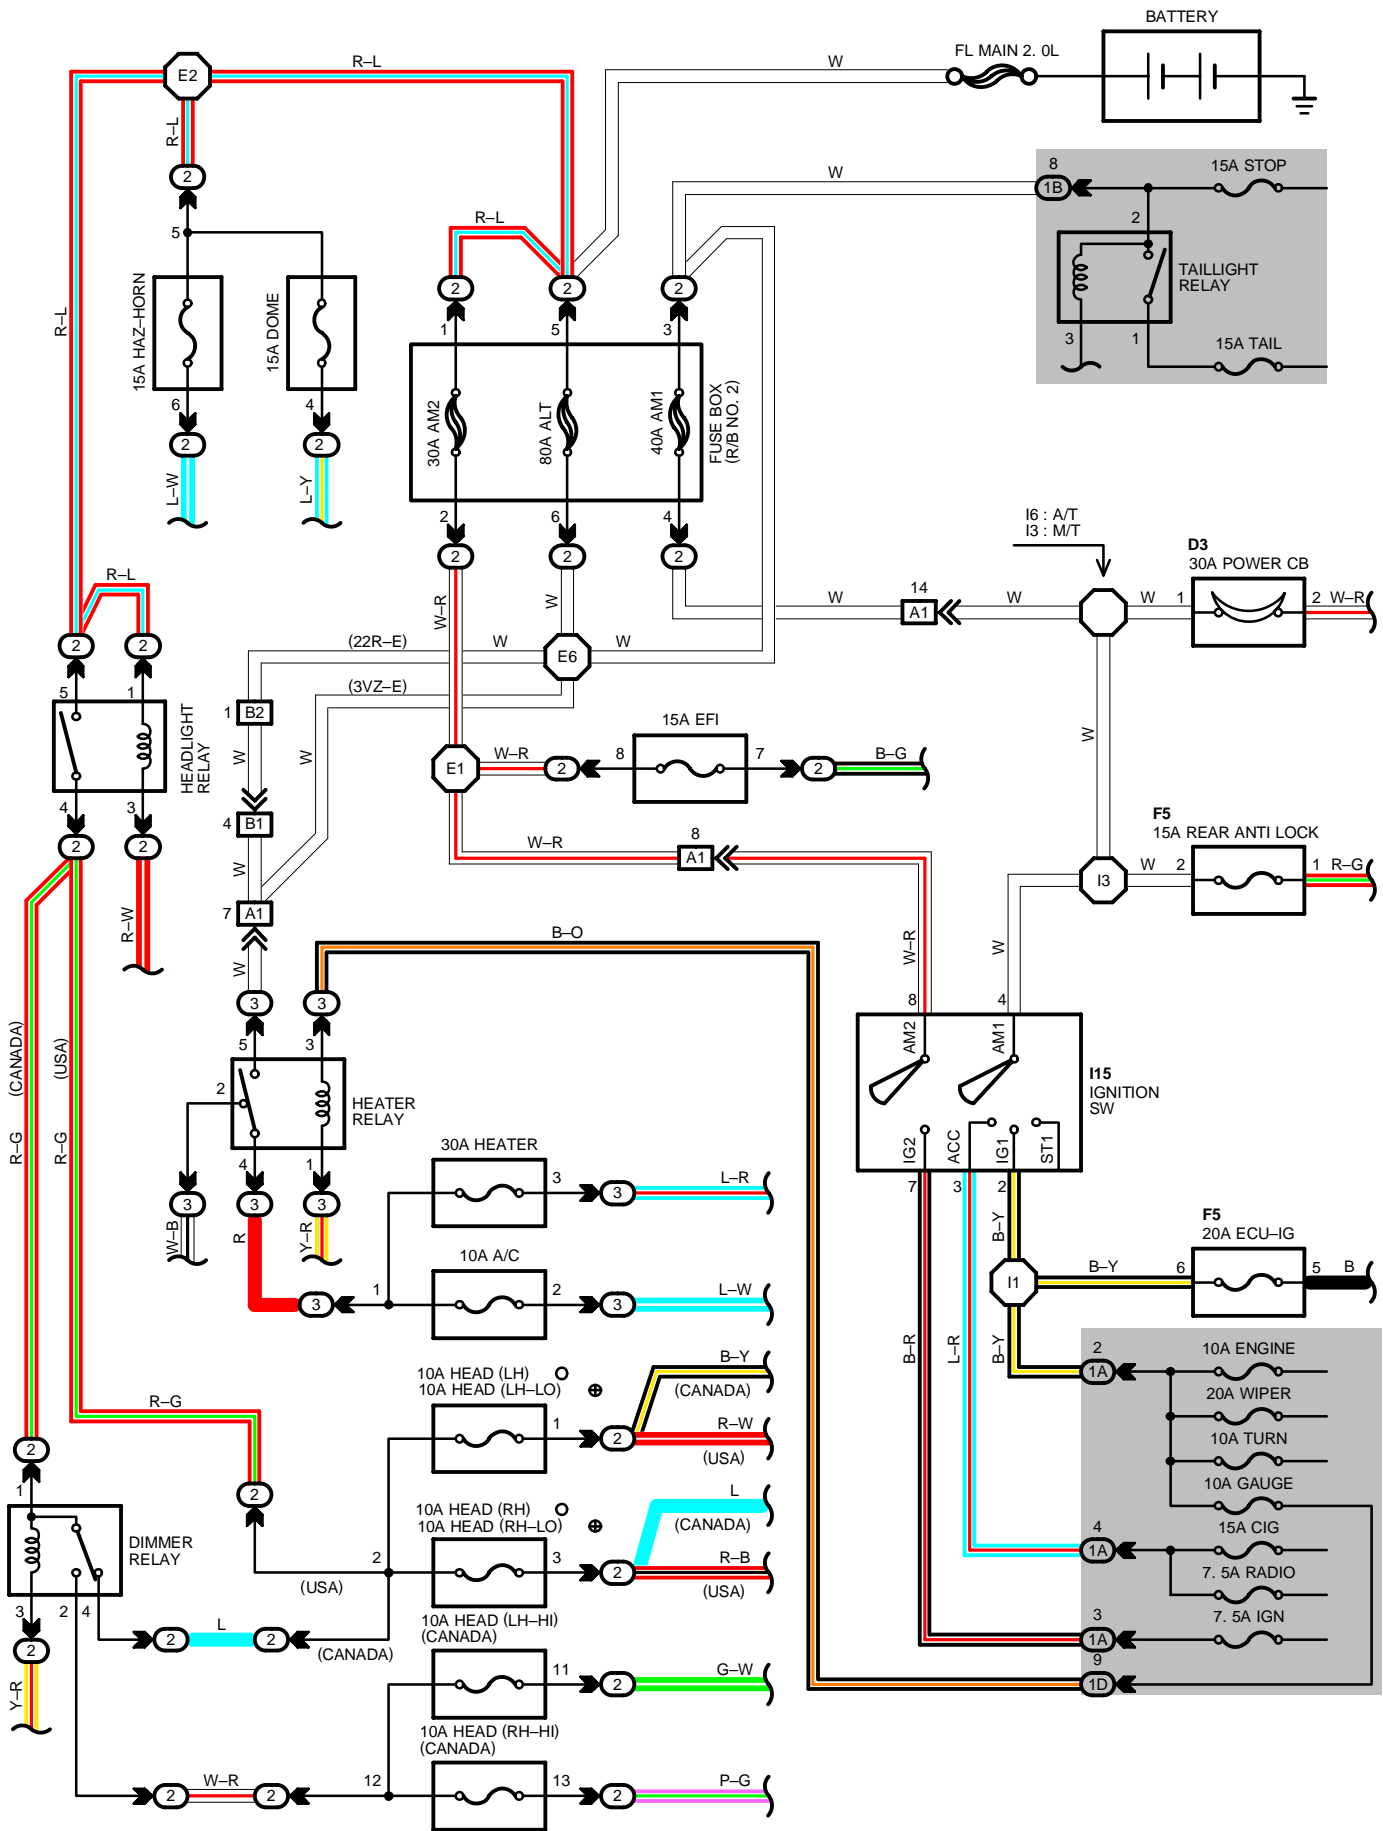

SERVICE HINTS

HEATER RELAY

(3) 4- (3) 5: CLOSED WITH IGNITION SW ON AND BLOWER SW ON

HEADLIGHT RELAY

(2) 4- (2) 5 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

I15 IGNITION SW

4-3 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

4-2 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

8-7 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

2-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

DIMMER RELAY

CHANGED FROM HEAD (LO) TO HEAD (HI) WITH DIMMER SW AT **FLASH** POSITION OR WITH HEADLIGHT RELAY ON AND DIMMER SW AT **HIGH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D3	24	F5	24	I15	24

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	17	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)
3	20	R/B NO. 3 (GLOVE BOX RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1B	18	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1D	18	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
A1	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
B1	28 (22R-E)	ENGINE ROOM MAIN WIRE AND ALTERNATOR WIRE (FRONT OF LEFT FENDER)
B2	28 (22R-E)	

○ : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E1	26 (3VZ-E)	ENGINE ROOM MAIN WIRE	E6	28 (3VZ-E)	ENGINE ROOM MAIN WIRE
	28 (22R-E)		I1	30	COWL WIRE
E2	26 (3VZ-E)	COWL WIRE	I3		
	28 (22R-E)	I6			
E6	26 (3VZ-E)	ENGINE ROOM MAIN WIRE			

D3

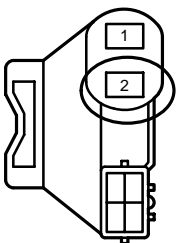

(W/ POWER WINDOW)

 F5



I15 BLACK

