



a - Located near regulator  
 b - Located instrument panel on right side bracket  
 c - Located in frame of flat cross member