


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

[3VZ-E]

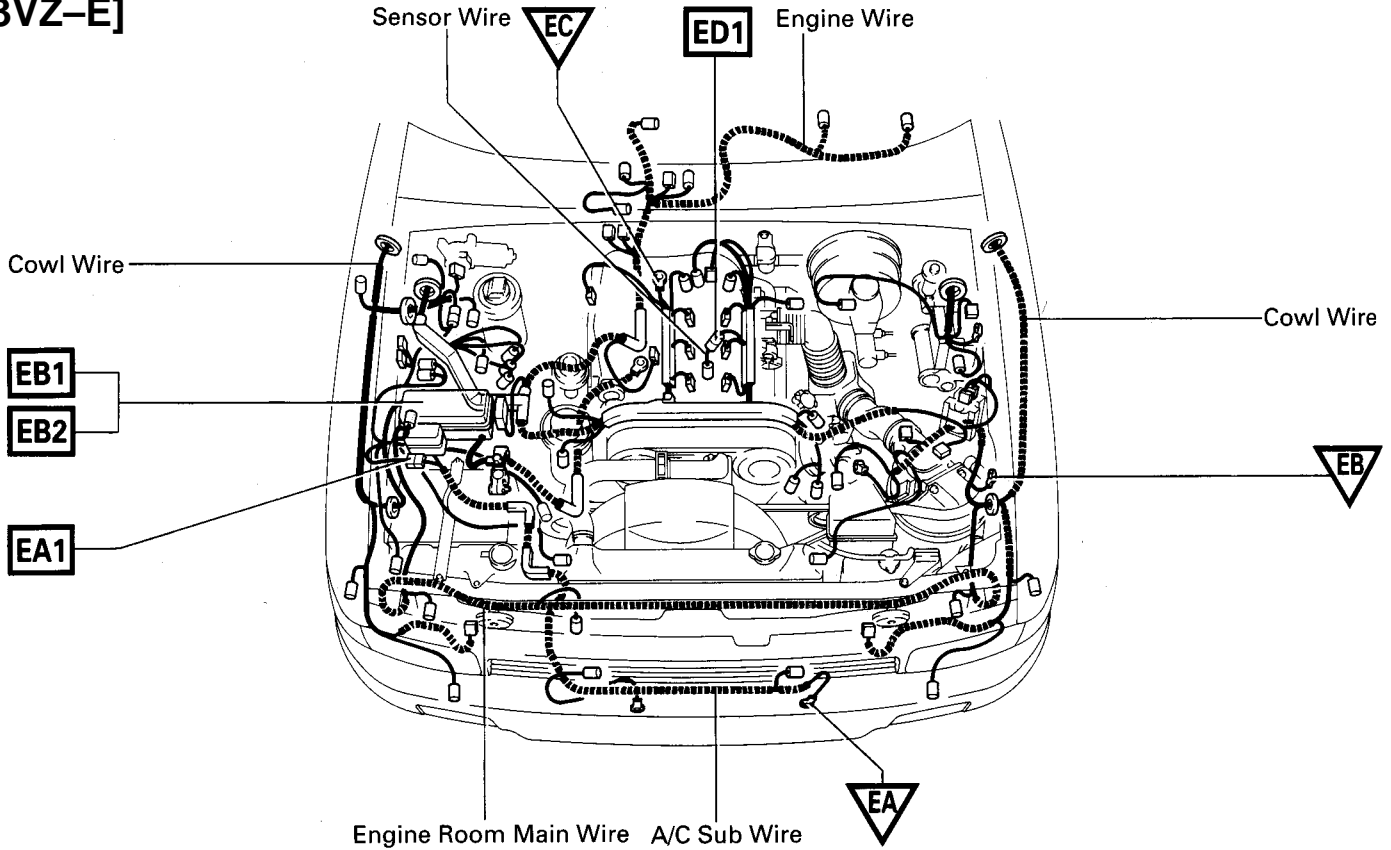


○ : Location of Splice Points

[3VZ-E]

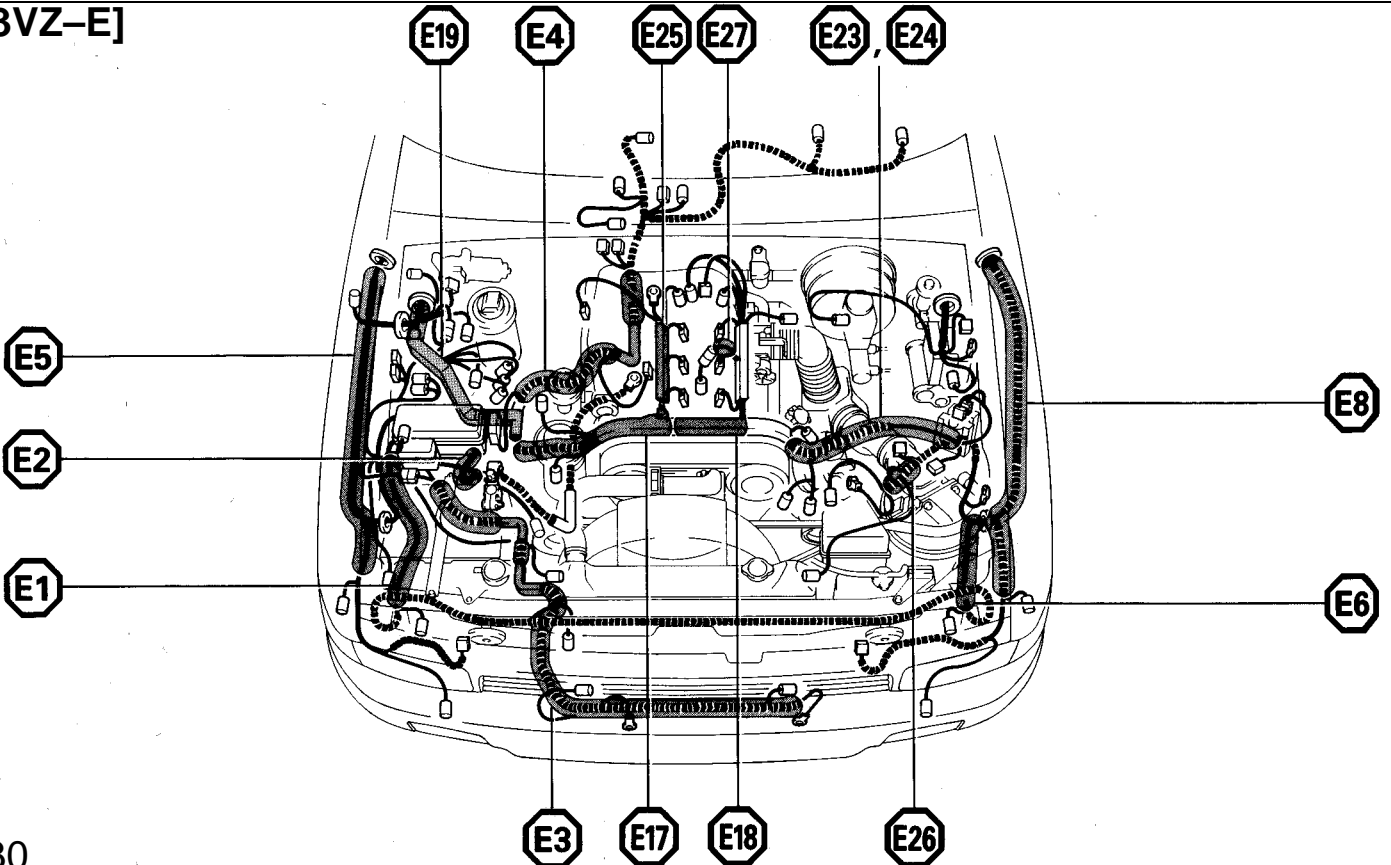

Connector Joining Wire Harness and Wire Harness

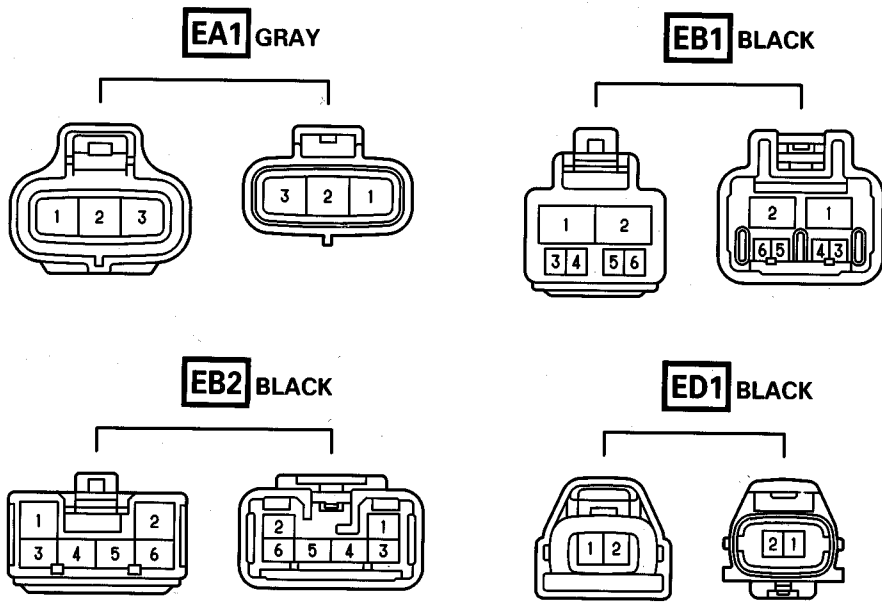


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND A/C SUB WIRE (NEAR THE BATTERY)
EB1	ENGINE ROOM MAIN WIRE AND ALTERNATOR WIRE (FRONT OF LEFT FENDER)
EB2	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
ED1	SENSOR WIRE AND ENGINE WIRE (ON THE HEAD COVER)

ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

[22R-E]

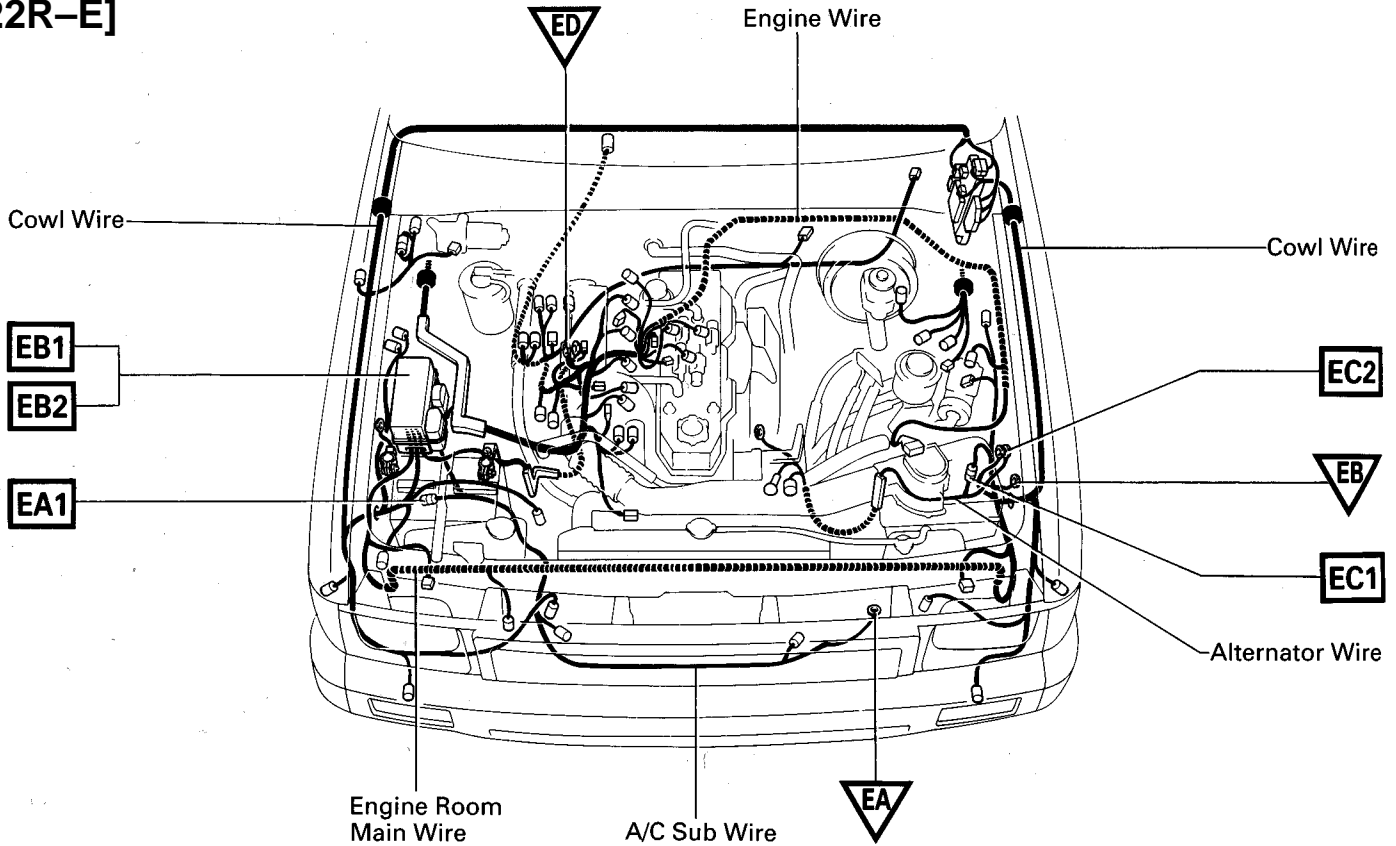


- : Location of Splice Points

[22R-E]

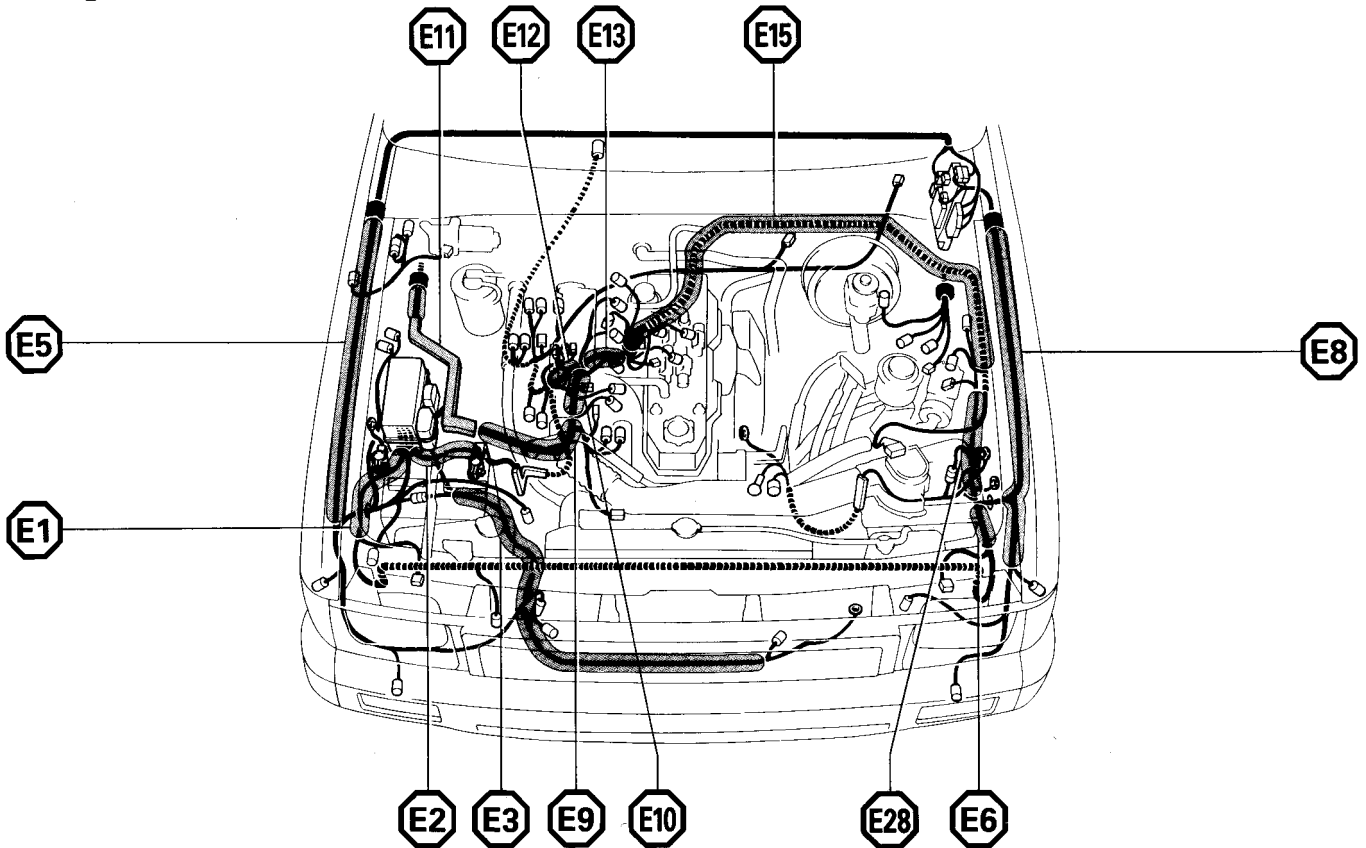


Connector Joining Wire Harness and Wire Harness

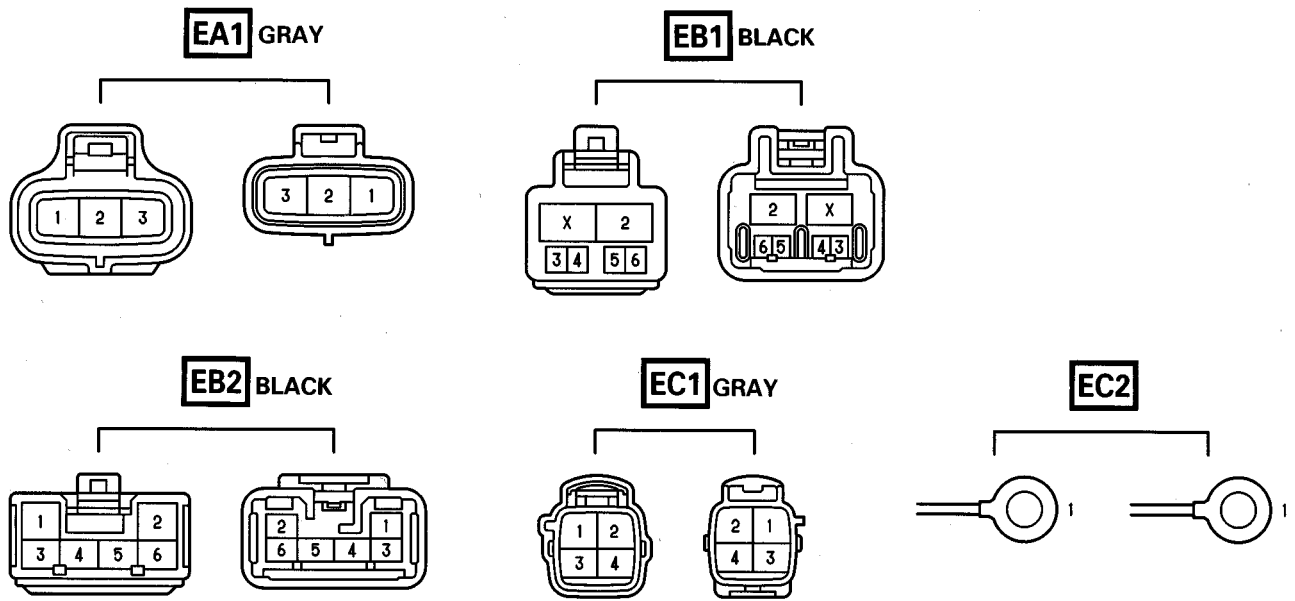


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND A/C SUB WIRE (NEAR THE BATTERY)
EB1	ENGINE ROOM MAIN WIRE AND ALTERNATOR WIRE (FRONT OF LEFT FENDER)
EB2	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
EC1	ENGINE ROOM MAIN WIRE AND ALTERNATOR WIRE (FRONT OF LEFT FENDER)
EC2	

ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

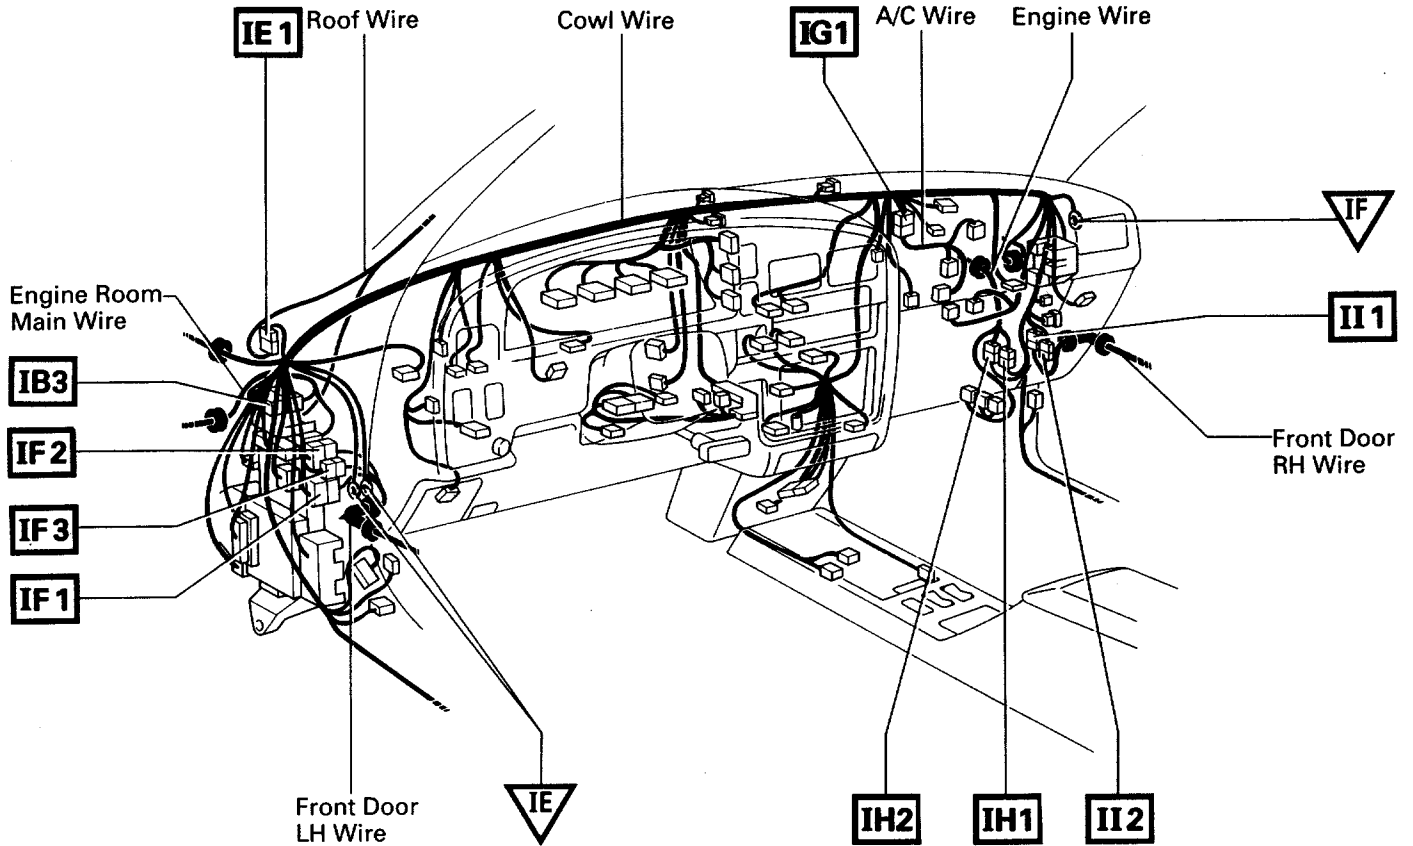

- : Location of Splice Points

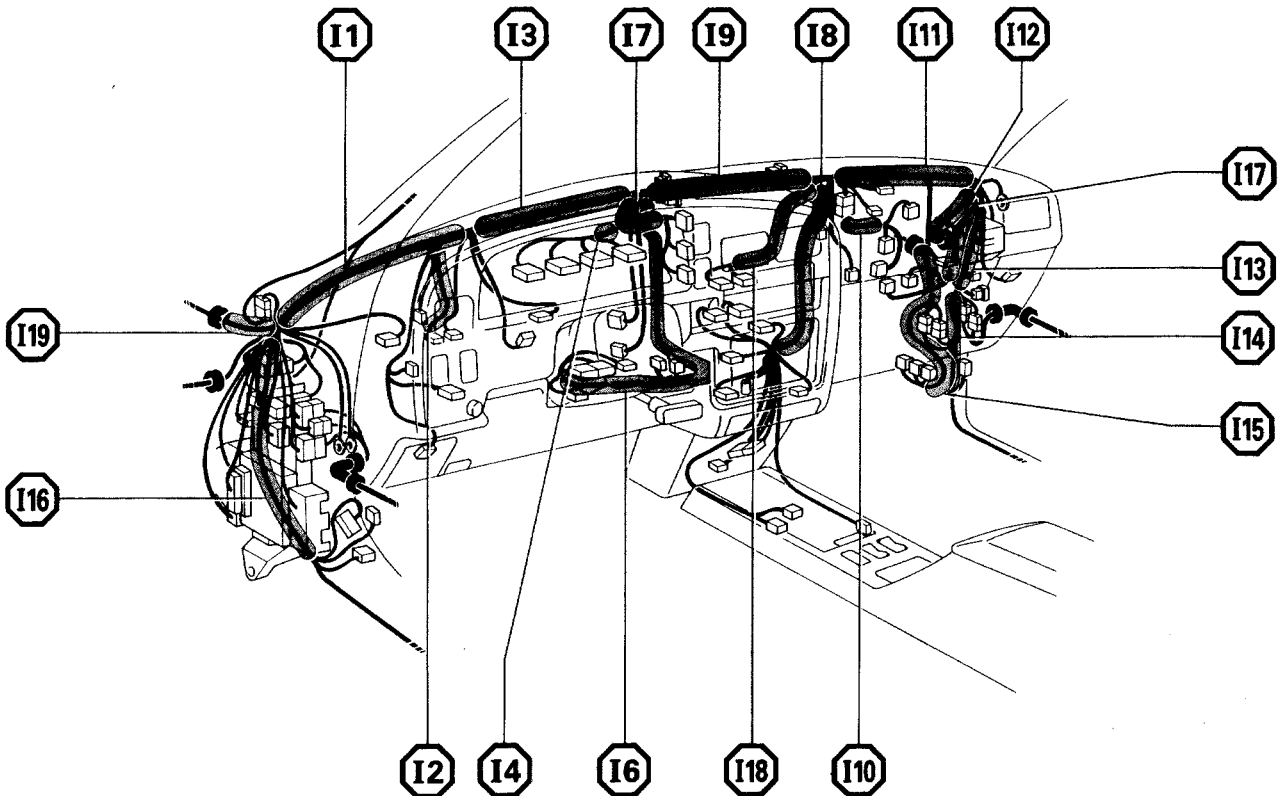


Connector Joining Wire Harness and Wire Harness

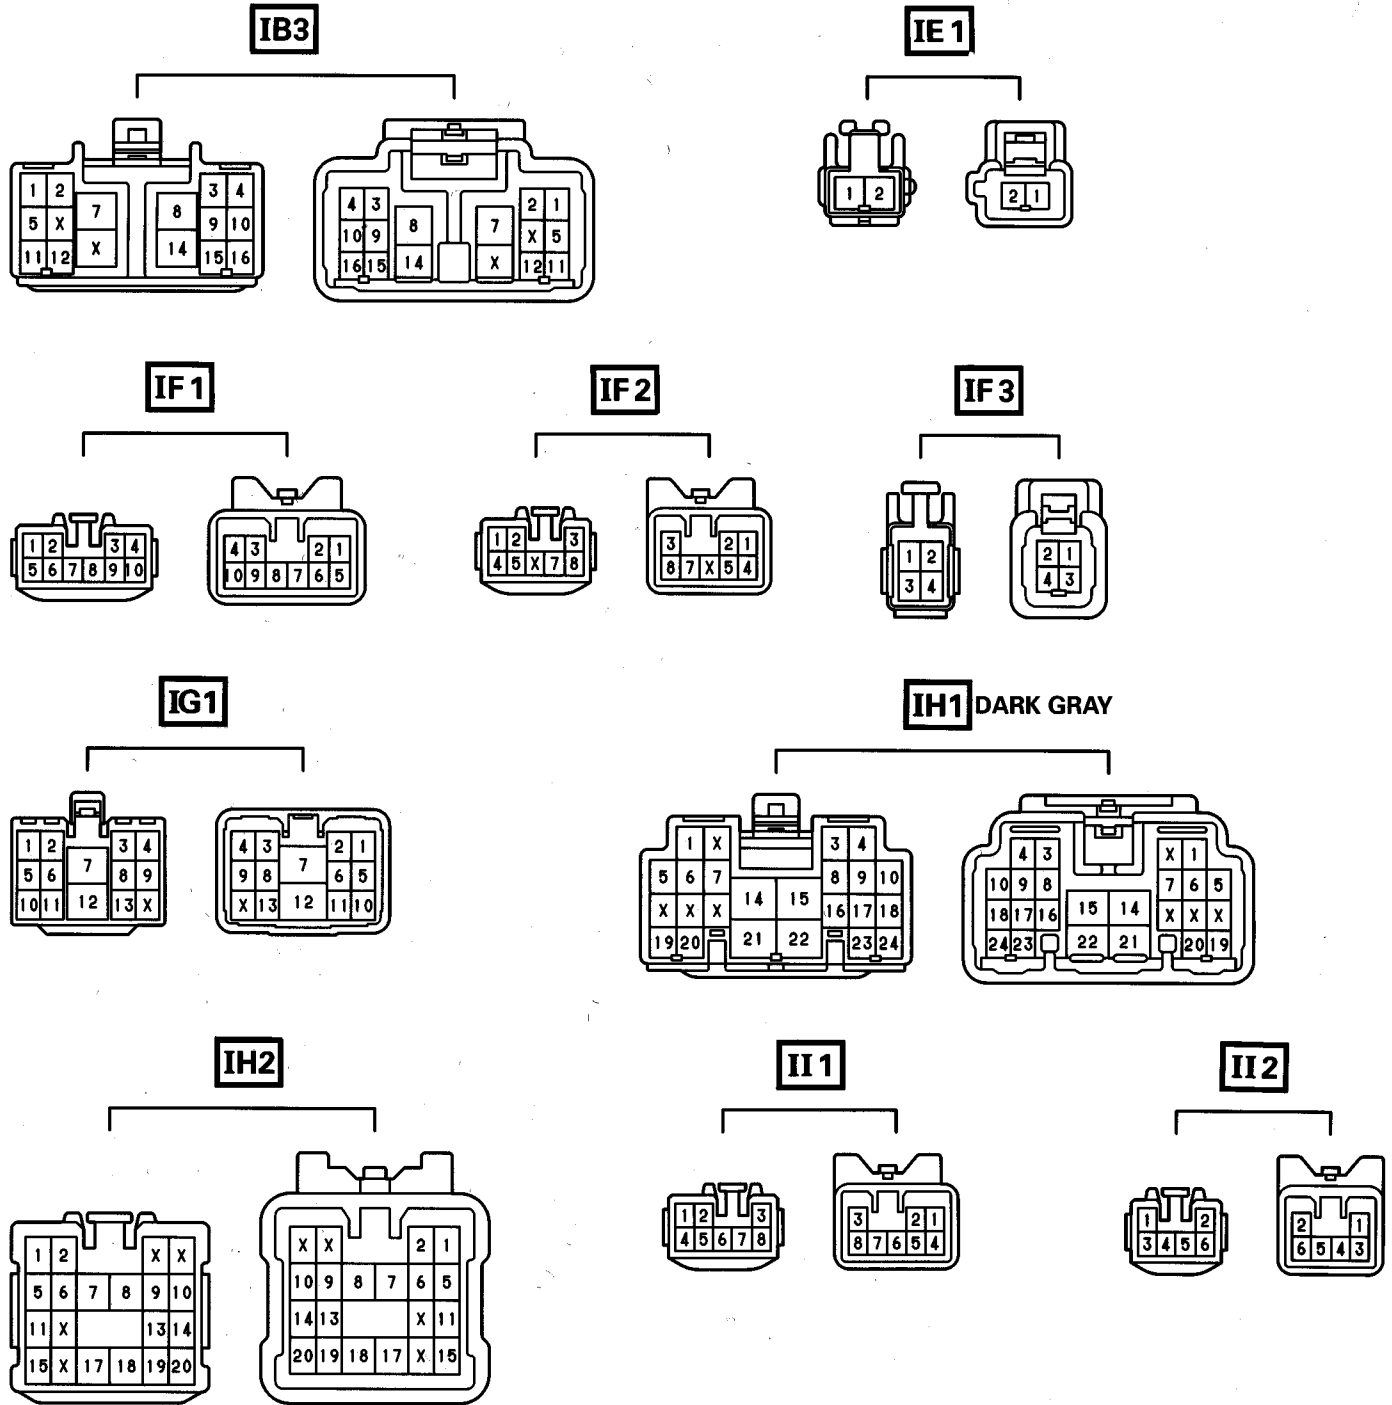


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB3	ENGINE ROOM MAIN WIRE AND COWL WIRE
IE1	COWL WIRE AND ROOF WIRE (INSTRUMENT PANEL LEFT)
IF1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	
IF3	
IG1	COWL WIRE AND A/C WIRE (BEHIND GLOVE BOX)
IH1	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IH2	
II1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
II2	

ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

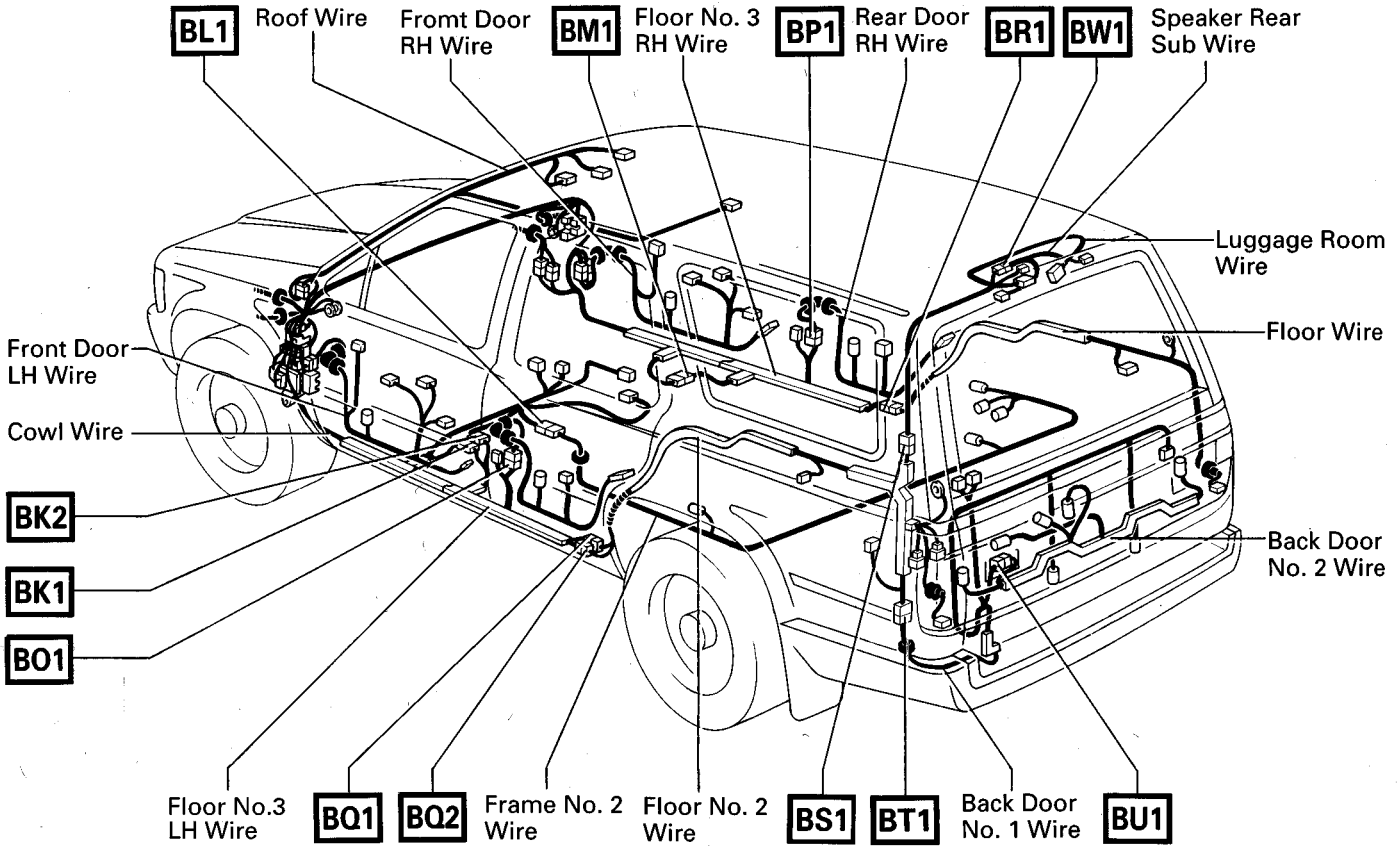

- : Location of Splice Points

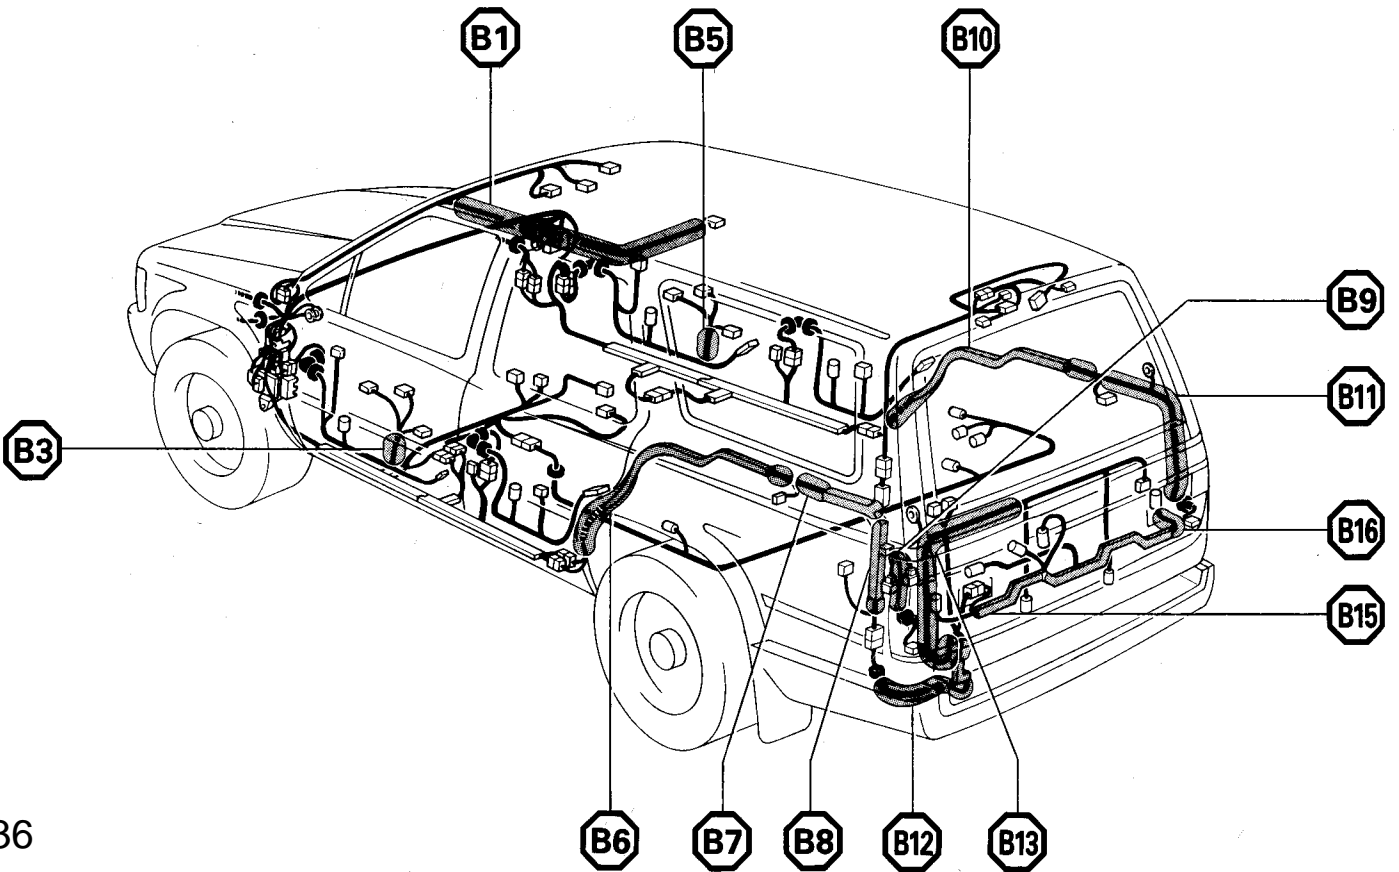

Connector Joining Wire Harness and Wire Harness

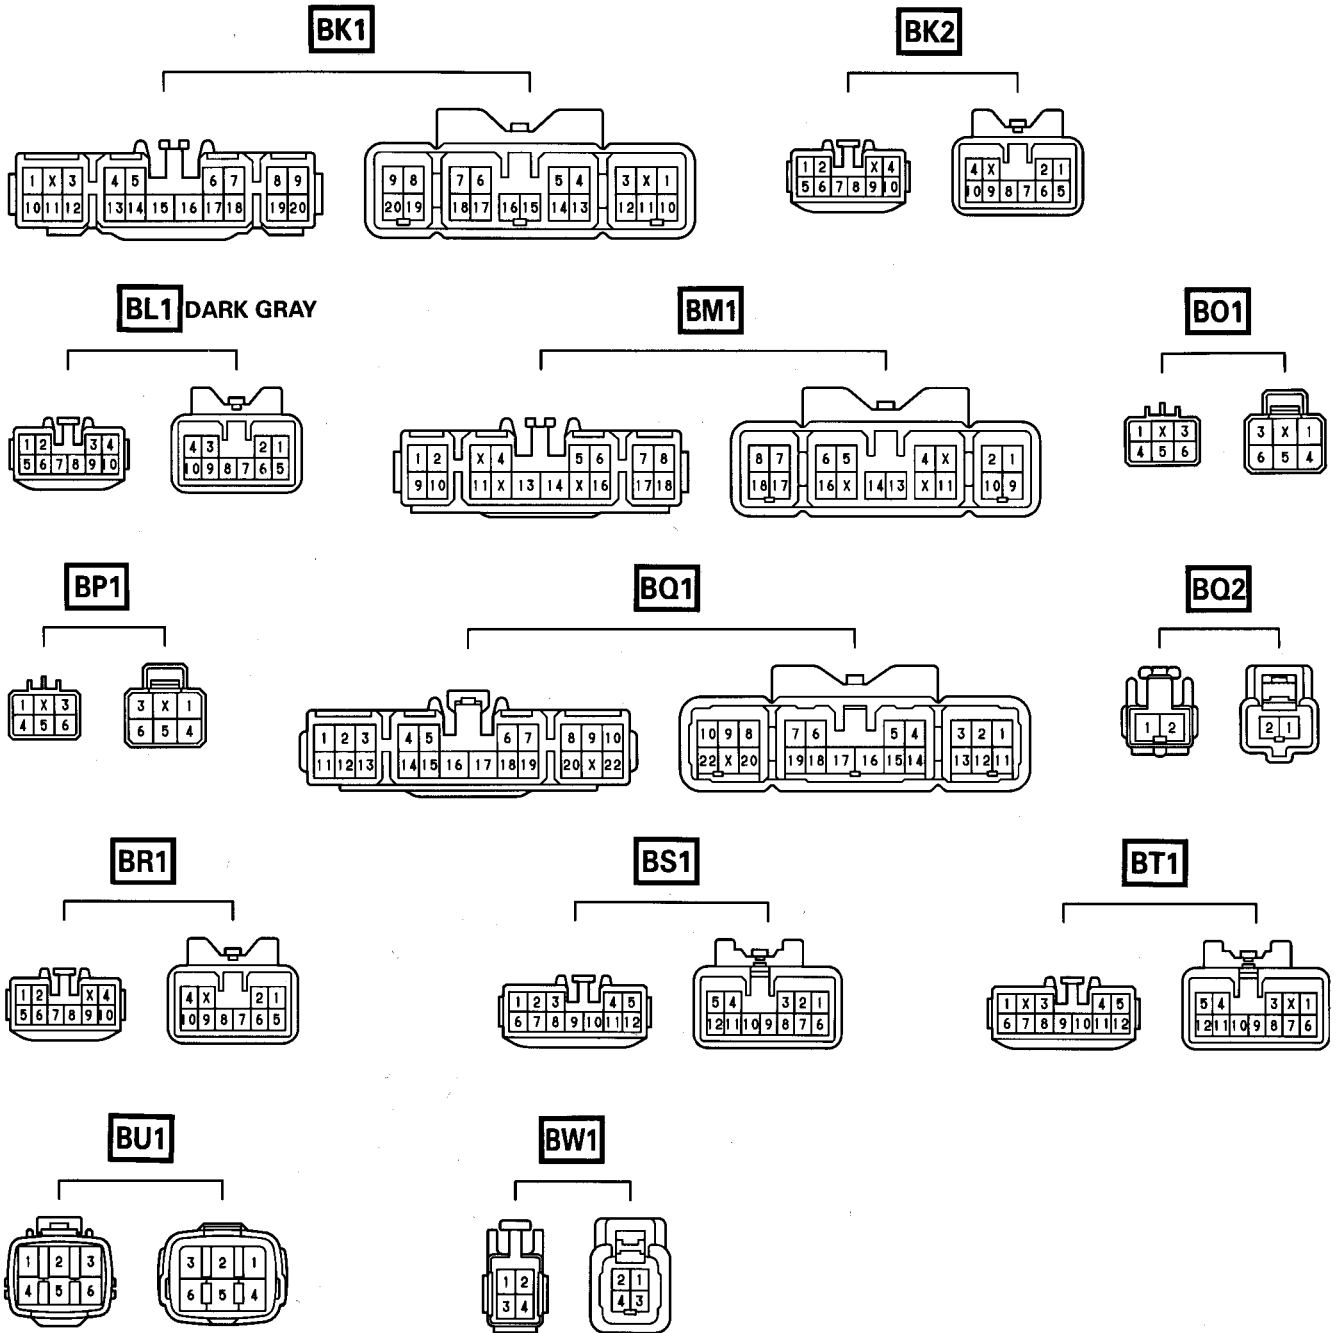

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BK1	FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)
BK2	COWL WIRE AND FLOOR NO. 3 LH WIRE (LEFT SIDE OF FRONT LH SEAT)
BL1	FRAME NO. 2 WIRE AND COWL WIRE (UNDER THE FRONT LH SEAT)
BM1	FLOOR NO. 3 RH WIRE AND COWL WIRE (RIGHT SIDE OF FRONT RH SEAT)
BO1	REAR DOOR LH WIRE AND FLOOR NO. 3 LH WIRE (LEFT CENTER PILLAR)
BP1	REAR DOOR RH WIRE AND FLOOR NO. 3 RH WIRE (RIGHT CENTER PILLAR)
BQ1	FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)
BQ2	
BR1	FLOOR NO. 3 RH WIRE AND FLOOR WIRE (RIGHT SIDE OF REAR RH SEAT)
BS1	FLOOR NO. 2 WIRE AND LUGGAGE ROOM WIRE (UNDER LEFT REAR PILLAR)
BT1	BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT)
BU1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BW1	SPEAKER REAR SUB WIRE AND LUGGAGE ROOM WIRE (INSIDE OF REAR HEADER TRIM)