

[Print Document](#)

1989 TOYOTA PICKUP 2DR PICKUP

Security

Battery	WHT +	(+)	IGNITION SWITCH HARNESS
Ignition	BLK/YEL	(+)	IGNITION SWITCH HARNESS
Starter01	BLK/WHT +	(+)	IGNITION SWITCH HARNESS
AllDoorTrigger	BLK/WHT (-)	(-)	TOP OF FUSEBOX "2 PIN PLUG"
TrunkTrigger	N/A		
HoodTrigger	N/A		
FactoryAlarmDisarm	N/A		
ParkingLights	GRN	(+)	DRIVER'S KICK PANEL OR FUSEBOX

Remote Start

Battery	WHT +	(+)	IGNITION SWITCH HARNESS
Ignition	BLK/YEL	(+)	IGNITION SWITCH HARNESS
Ignition02	BLK/RED +	(+)	IGNITION SWITCH HARNESS
Ignition03	+		
Accessory01	BLU/RED +	(+)	IGNITION SWITCH HARNESS
Accessory02		+	
Starter01	BLK/WHT +	(+)	IGNITION SWITCH HARNESS
AntiTheftSystem	NONE		
Tach	BLK (-)	(-)	AT COIL OR BLK/WHT (-) AT CK CONN "IG-"
ParkingLights	GRN	(+)	DRIVER'S KICK PANEL OR FUSEBOX
BrakeLights	GRN/WHT	(+)	AT BRAKE SWITCH
Horn	GRN/RED (-)		AT STEERING COLUMN "HIGH CURRENT USE RLY"

Doorlocks / Window

PowerUnLock	PNK/WHT (-)	(-)	NEGATIVE TRIGGER "SEE TECH TIP"
PowerLock	BRN/WHT (-)	(-)	AT DOOR CONTROL RELAY BEHIND LEFT FRT SP

Convenience

HeadLights	RED/WHT (-)	(-)	AT STEERING COLUMN
LowSpeedWipers	BLU/BLK	(-)	AT STEERING COLUMN

Mobile Audio / Video

Battery	WHT +	(+)	IGNITION SWITCH HARNESS
Accessory01	BLU/RED +	(+)	IGNITION SWITCH HARNESS
Ground	BRN -	(-)	RADIO HARNESS
Illumination	GRN	(+)	RADIO HARNESS
FrontLeftSpeakerPos	PNK		
FrontLeftSpeakerNeg	VIO		
FrontRightSpeakerPos	LT.GRN		
FrontRightSpeakerNeg	BLUE		
RearLeftSpeakerPos	BLK		
RearLeftSpeakerNeg	YEL		
RearRightSpeakerPos	RED		
RearRightSpeakerNeg	WHT		
Amp	NOT LIKELY		

Control Modules

Note:

Wirediagram.com makes no representation or warranty with respect to the above information including its accuracy, completeness, or its freedom from third parties' proprietary rights. Wirediagram.com disclaims all liability or responsibility for errors or omissions therein or any decision made by the recipient in reliance thereon. The installer must verify any circuitry with the proper test equipment prior to installation.

[Report Errors](#)