

## COLD START INJECTOR ON-VEHICLE INSPECTION

EG10R-03

### INSPECT RESISTANCE OF COLD START INJECTOR

- Disconnect the cold start injector connector.
- Using an ohmmeter, check the resistance of the injector.

#### Resistance:


**2-4Ω**

If the resistance is not as specified, replace the cold start injector.

- Connect the cold start injector connector.

EG17H-01

## COMPONENTS FOR REMOVAL AND INSTALLATION

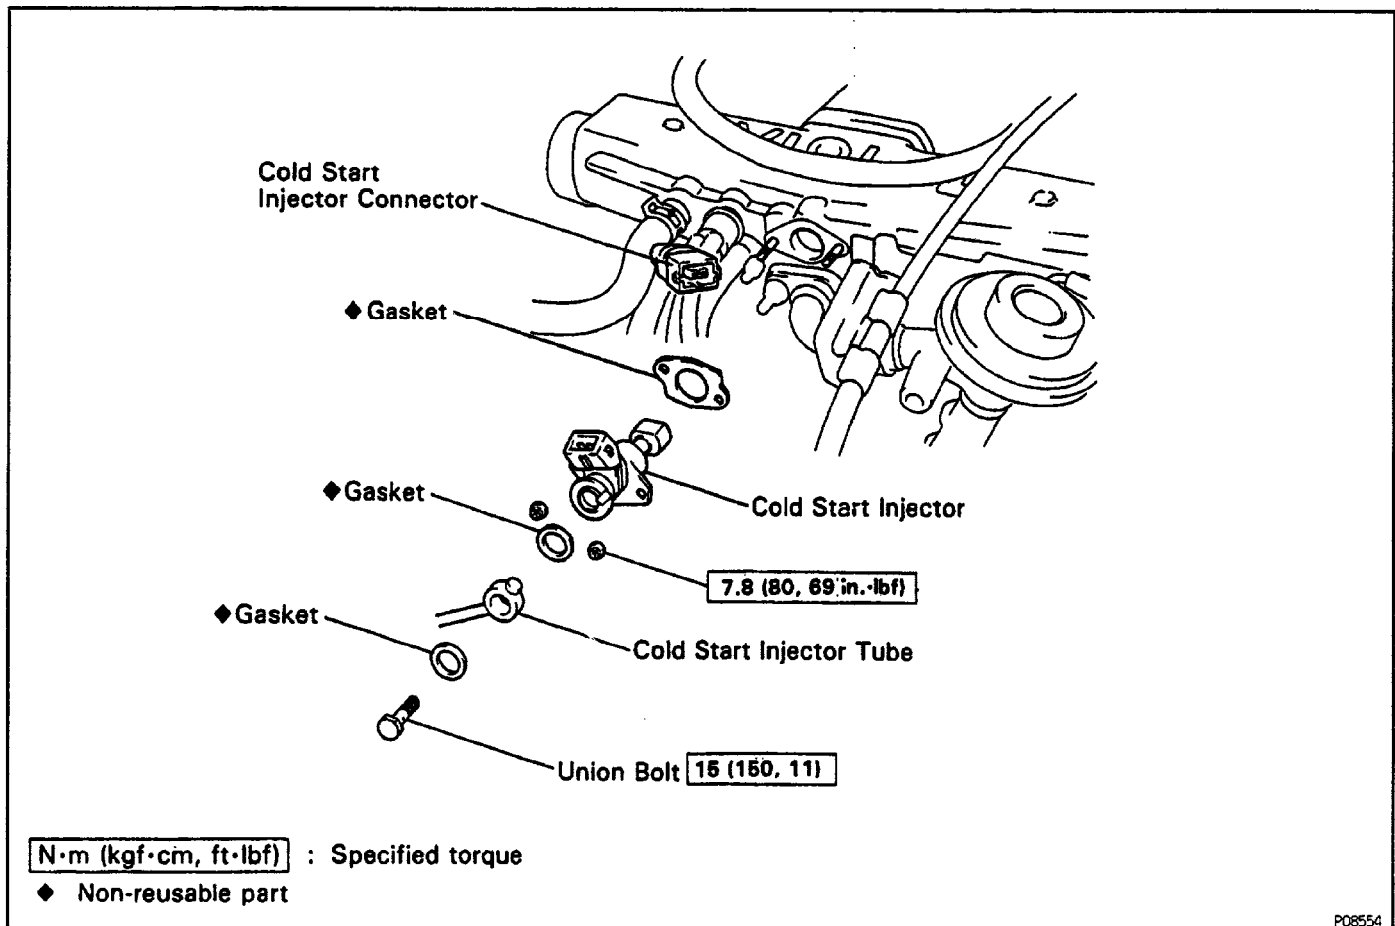

P08554