


GROUND POINT

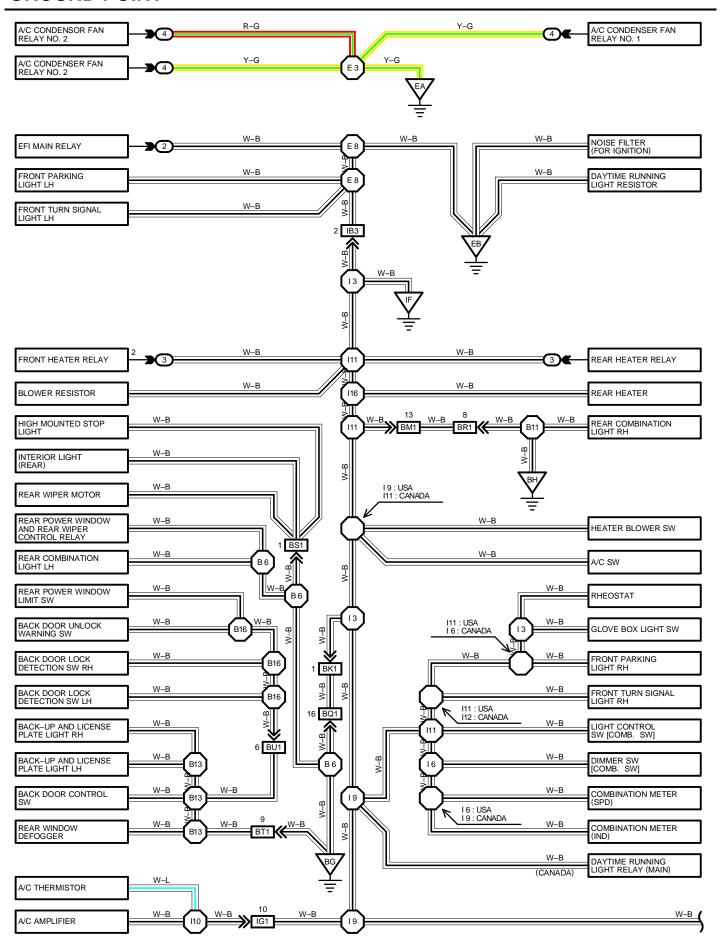

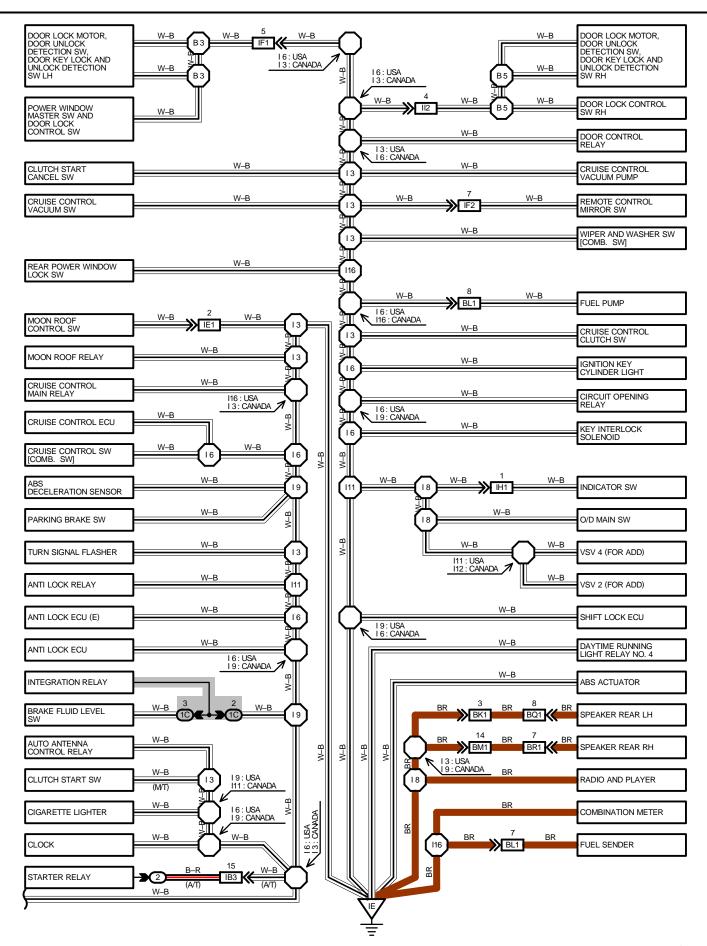

GROUND POINT

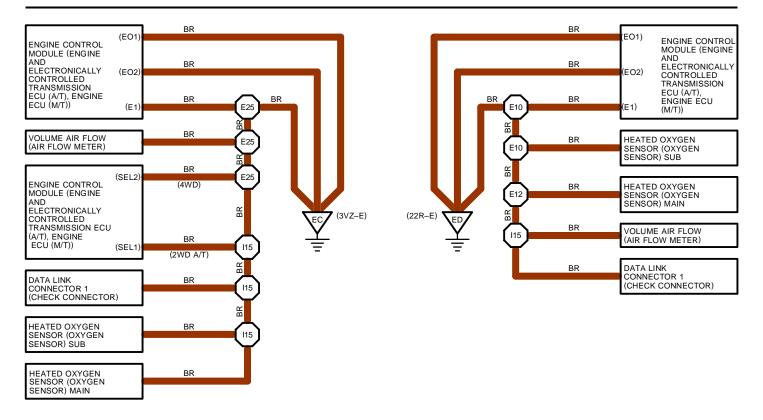

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)
3	23	R/B NO. 3 (RIGHT KICK PANEL)
4	23	R/B NO. 4 (BESIDE R/B NO. 2)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE SEE PAGE JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)		JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)	
	1C	20 COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	GE JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)		
IB3	34	ENGINE ROOM MAIN WIRE AND COWL WIRE		
IE1 34 COWL WIRE AND ROOF WIRE (INSTRUMENT PANEL LEFT)		COWL WIRE AND ROOF WIRE (INSTRUMENT PANEL LEFT)		
IF1	34	FRONT ROOP LILIMINE AND COMI MIDE (LEFT MOY DANEL)		
IF2	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)		
IG1	34	COWL WIRE AND A/C WIRE		
IH1	IH1 34 ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)			
II2 34 FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)		FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)		
BK1	BK1 36 FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)			
BL1 36 FRAME NO. 2 WIRE AND COWL WIRE (UNDER THE FRONT LH SEAT)		FRAME NO. 2 WIRE AND COWL WIRE (UNDER THE FRONT LH SEAT)		
BM1	BM1 36 FLOOR NO. 3 RH WIRE AND COWL WIRE (RIGHT SIDE OF FRONT RH SEAT)			
BQ1	BQ1 36 FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)			
BR1	36	FLOOR NO. 3 RH WIRE AND FLOOR WIRE (RIGHT SIDE OF REAR RH SEAT)		
BS1	36 FLOOR NO. 2 WIRE AND LUGGAGE ROOM WIRE (UNDER LEFT REAR PILLAR)			
BT1	1 36 BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT)			
BU1	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)		

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30 (3VZ-E)	LEFT CIDE OF PADIATOR
EA	32 (22R-E)	LEFT SIDE OF RADIATOR
EB	30 (3VZ-E)	LEFT FENDER
ЕВ	32 (22R-E)	
EC	30 (3VZ-E)	RH CYLINDER HEAD COVER REAR
ED	32 (22R-E)	INTAKE MANIFOLD
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL
BG	36	UNDER LEFT REAR PILLAR
ВН	36	UNDER RIGHT REAR PILLAR

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
	30 (3VZ-E)	A/C SUB WIRE	I10	34	A/C WIRE
E 3	32 (22R-E)		l11	- 34	COWL WIRE
E 8	30 (3VZ-E)	ENGINE ROOM MAIN WIRE	l12		
E 0	32 (22R-E)		I15	34	ENGINE WIRE
E10	32 (22R-E) 30 (3VZ-E)	ENGINE WIRE	I16	34	COWL WIRE
E12			B 2	36	FRONT DOOR LH WIRE
E25			B 5	36	FRONT DOOR RH WIRE
13	34	COWL WIRE	B 6	36	FLOOR NO. 2 WIRE
16			B11	36	FLOOR WIRE
18			B13	36	BACK DOOR NO. 1 WIRE
19			B16	36	BACK DOOR NO. 2 WIRE