



COMBINATION METER

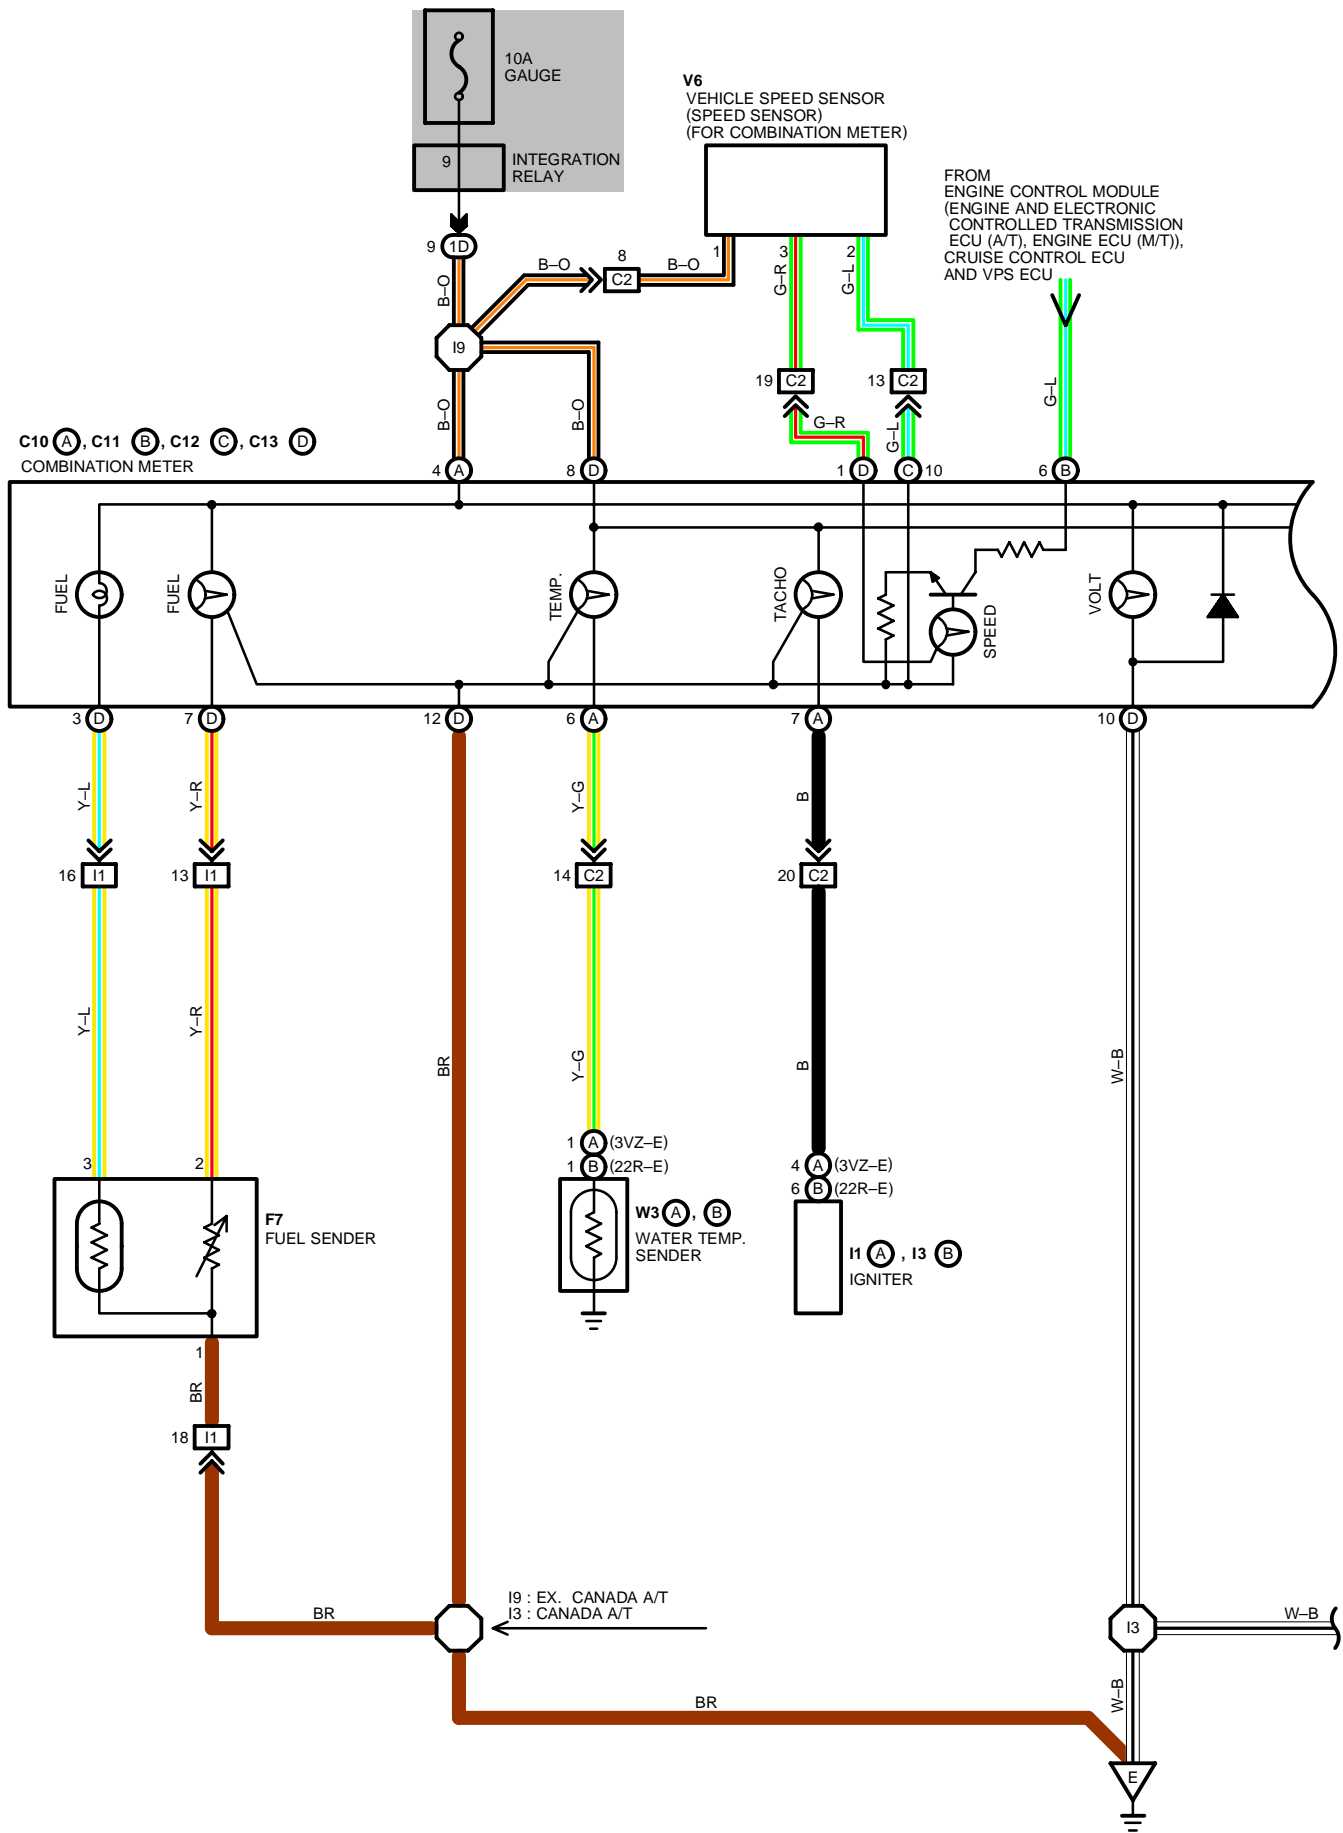

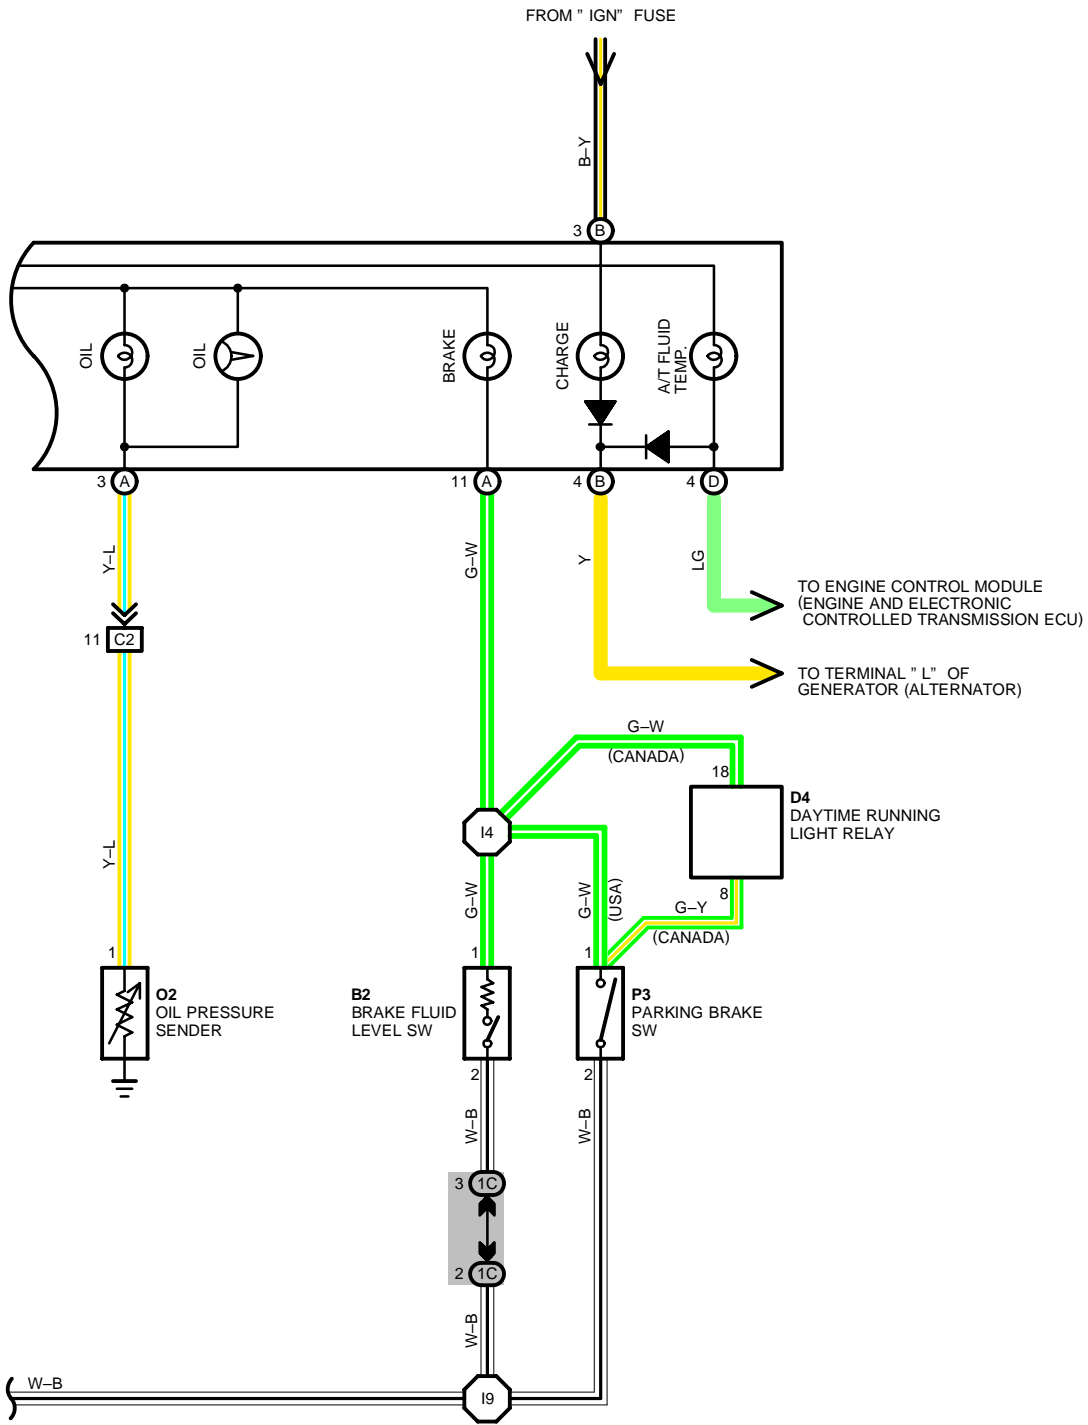

COMBINATION METER

SERVICE HINTS

B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C10(A), C11(B), C12(C), C13(D) COMBINATION METER

(A) 4, (D) 8-GROUND: APPROX. 12 VOLTS WITH IGNITION SW ON

(C) 9, (D)10, (D) 12-GROUND: ALWAYS CONTINUITY

P 3 PARKING BRAKE SW

1-2 : CLOSED WITH PARKING BRAKE LEVER PULLED UP

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 2	24 (3VZ-E), 25 (22R-E)	D 4	26	P 3	26
C10	A 26	F 7	27	V 6	24 (3VZ-E), 25 (22R-E)
C11	B 26	I 1	A 24 (3VZ-E)	W 3	A 24 (3VZ-E)
C12	C 26	I 3	B 25 (22R-E)		B 25 (22R-E)
C13	D 26	O 2	24 (3VZ-E), 25 (22R-E)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1 C	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1 D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
C 2	32	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
I 1	34	FRAME WIRE AND COWL WIRE (UNDER PASSENGER'S SEAT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
E	32	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	32	COWL WIRE	I 9	32	COWL WIRE
I 4					


B2 GRAY




C10 A BLUE

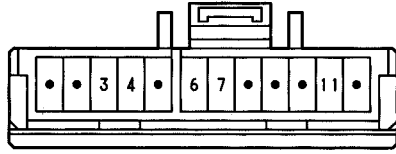


C11 B

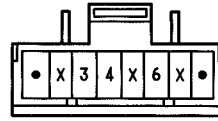


C12 C GRAY

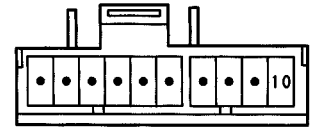

C13 D

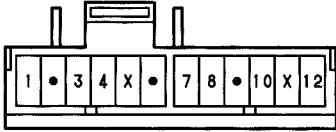


D4 GRAY

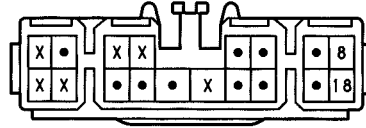


F7




I1 A BLACK

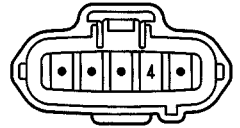

I3 B DARK GRAY

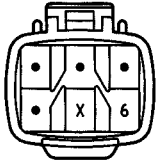

O2 GRAY

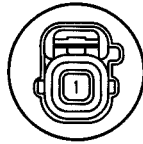

P3



V6 BLACK



(3VZ-E) W3 A GRAY



(22R-E) W3 B GRAY

