


# FRONT FOG LIGHT

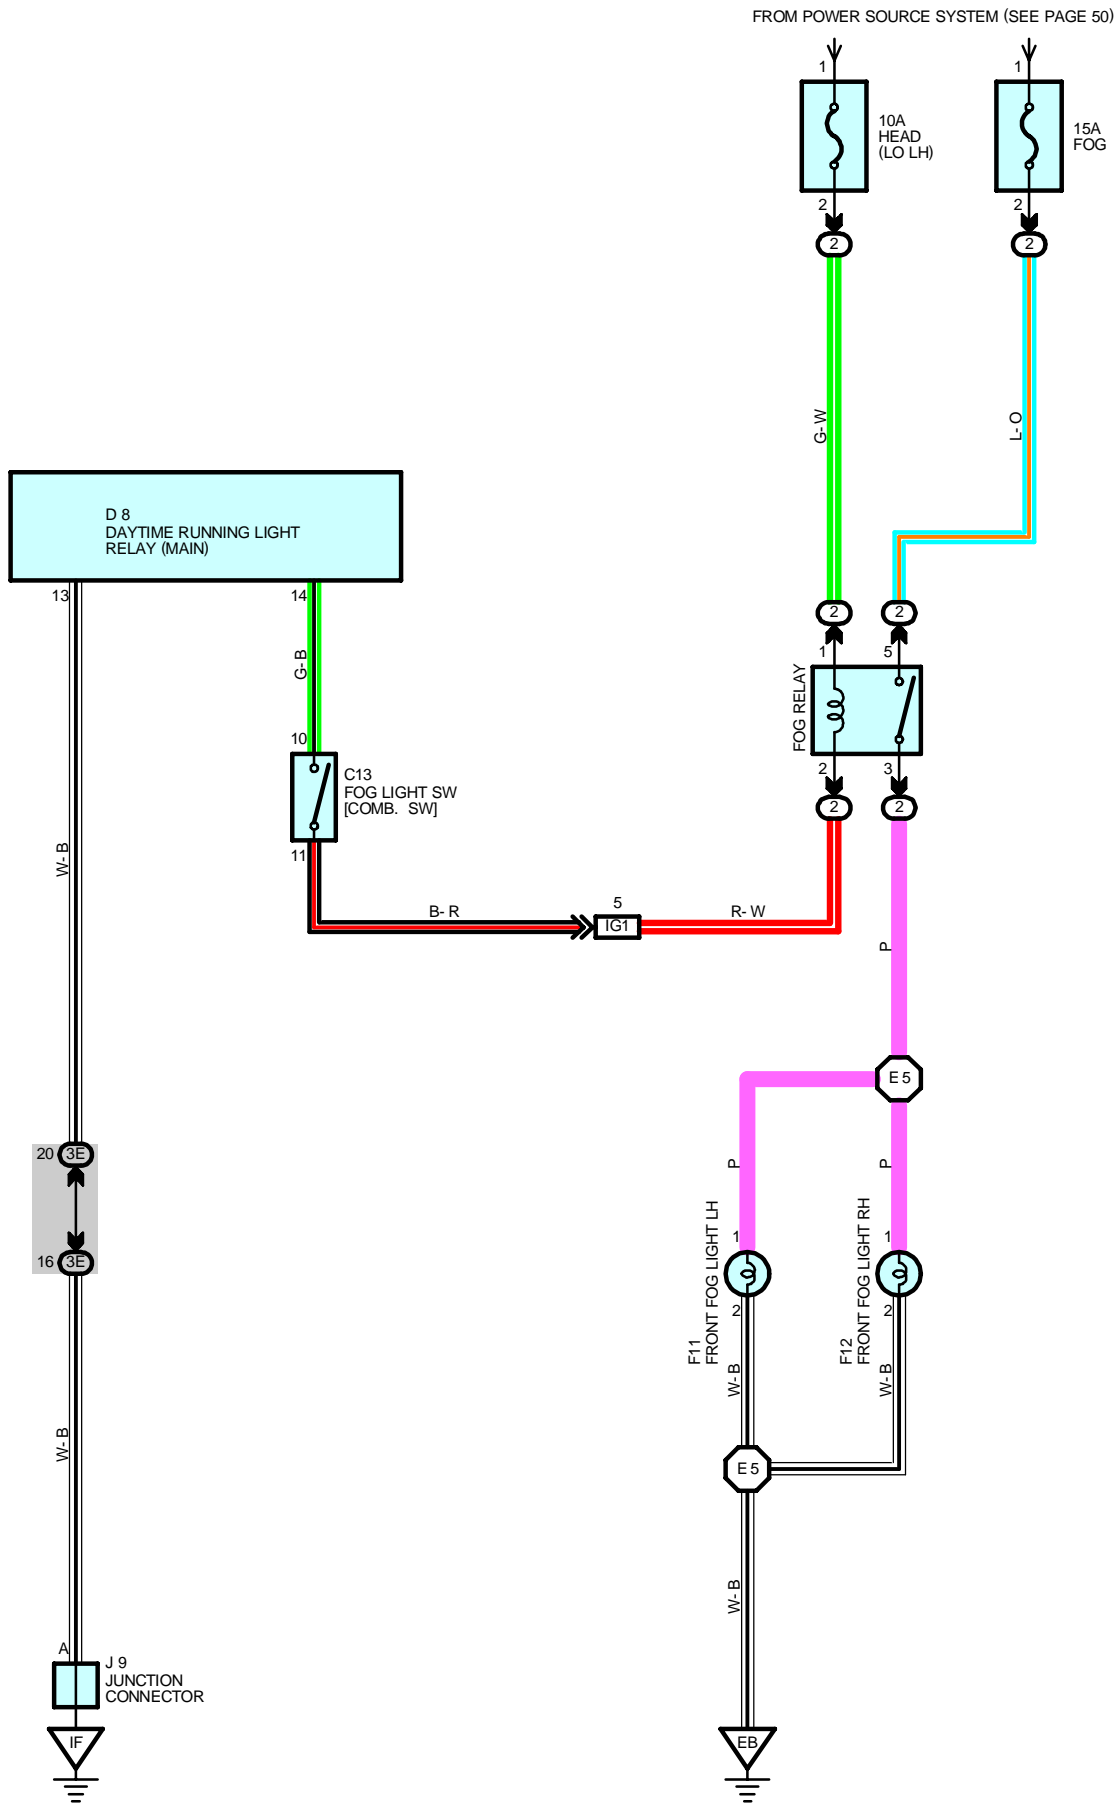

**SERVICE HINTS****FOG RELAY [ENGINE ROOM R/B]**5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog light SW at **ON** position : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C13	<a href="#">32</a>	F11	<a href="#">28 (5VZ-FE)</a>	J9	<a href="#">33</a>
D8	<a href="#">32</a>	F12	<a href="#">28 (5VZ-FE)</a>		

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
3E	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	<a href="#">42</a>	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
EB	<a href="#">38 (5VZ-FE)</a>	Front Left Fender
IF	<a href="#">42</a>	Cowl Side Panel RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	<a href="#">38 (5VZ-FE)</a>	Engine Room Main Wire			