







# **STARTING AND IGNITION (5VZ-FE)**

#### SERVICE HINTS

## S1 (A), S2 (B) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW ON AND IGNITION SW AT **ST** POSITION (A/T) POINTS CLOSED WITH IGNITION SW AT **ST** POSITION (M/T)

#### **I14 IGNITION SW**

3-1, 8-7: CLOSED WITH IGNITION SW AT ON OR ST POSITION

3-6 : CLOSED WITH IGNITION SW AT ST POSITION

## P1 PARK/NEUTRAL POSITION SW (A/T)

6-5 : CLOSED WITH A/T SHIFT LEVER IN P OR N POSITION

#### **R4, S5 STARTER RELAY**

5-3 : CLOSED WITH IGNITION SW AT ST POSITION AND PARK/NEUTRAL POSITION SW ON (A/T)

5-3 : CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT ST POSITION (M/T)

#### C8 CLUTCH START CANCEL SW (M/T)

1-2: CLOSED WITH IGNITION SW ON AND CANCEL SW ON

#### **C9 CLUTCH START SW**

1-2: CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

## : PARTS LOCATION

CODE SEE PAGE		CODE		SEE PAGE	CODE		SEE PAGE	
C	:1	22	E7	С	27	l14		27
C	2	22		D	27	Р	1	23
C	8	26	l:	2	23	R	4	27
C	9	26	I;		23	S1	Α	23
E5	Α	27	l4	4	23	S2	В	23
E6	В	27	15	5	23	S	5	27

## : RELAY BLOCKS

CODE SEE PAGE RELAY BLOCKS (RE		SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
	2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	30	ENGINE ROOM MAIN WIRE AND ENGINE NO. 2 WIRE (NEAR THE BATTERY)
IA3	34	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE1	34	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)

## : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	NEAR THE THROTTLE BODY
IC	34	LEFT KICK PANEL

## : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	20	ENGINE WIRE	16	34	COWL WIRE
E3	30		19		
13	34	COWL WIRE	l14	34	ENGINE WIRE
14	34	COVVL WIRE			

