


## 4WD (A/T)

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

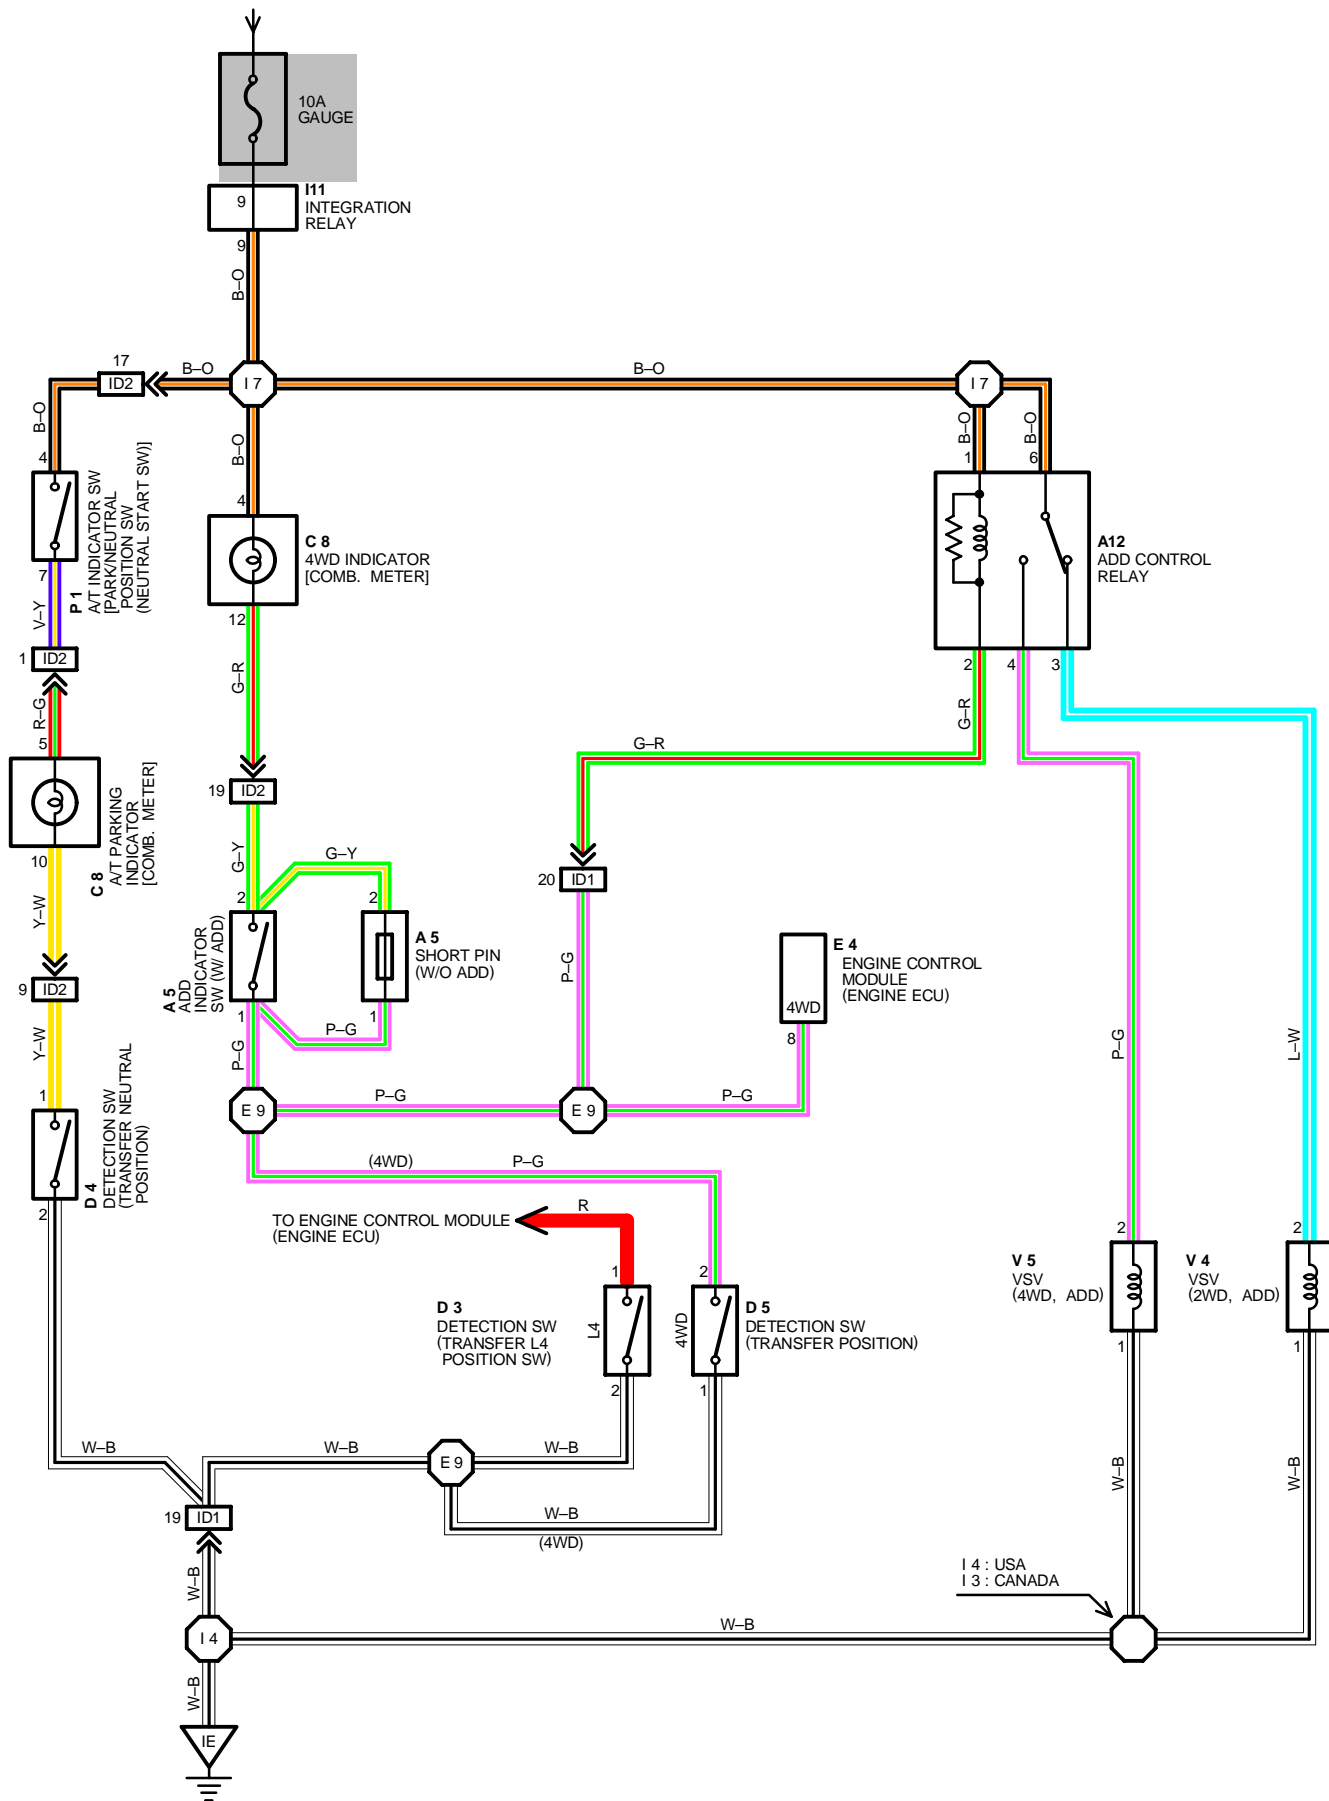

## SERVICE HINTS

### P 1 A/T INDICATOR SW [PARK/NEUTRAL POSITION SW (NEUTRAL START SW)]

4-7 : CLOSED WITH A/T SHIFT POSITION AT "P" POSITION

### D 4 DETECTION SW (TRANSFER NEUTRAL POSITION, A/T)

1-2 : CLOSED WITH TRANSFER POSITION AT NEUTRAL POSITION

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	22	D 4	22	P 1	23
A12	24	D 5	22	V 4	23
C 8	24	E 4	24	V 5	23
D 3	22	I11	24		

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	28	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
ID2		

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	28	LEFT KICK PANEL

 
## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 9	26	ENGINE WIRE	I 7	28	COWL WIRE
I 4	28	COWL WIRE			


A 5 DARK GRAY



A12




C 8 BLUE

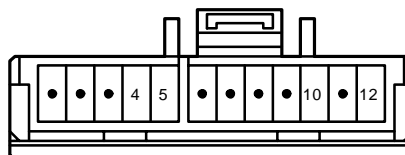

D 3 GRAY




D 4 GRAY

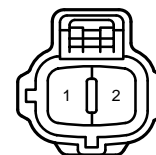


D 5 GRAY




E 4 DARK GRAY

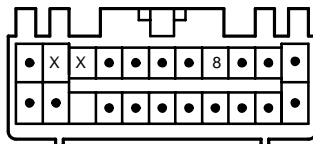

I11

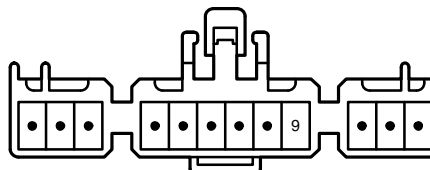

P 1

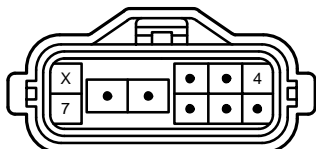

V 4 BROWN



V 5 BLUE

