


4WD (M/T)

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

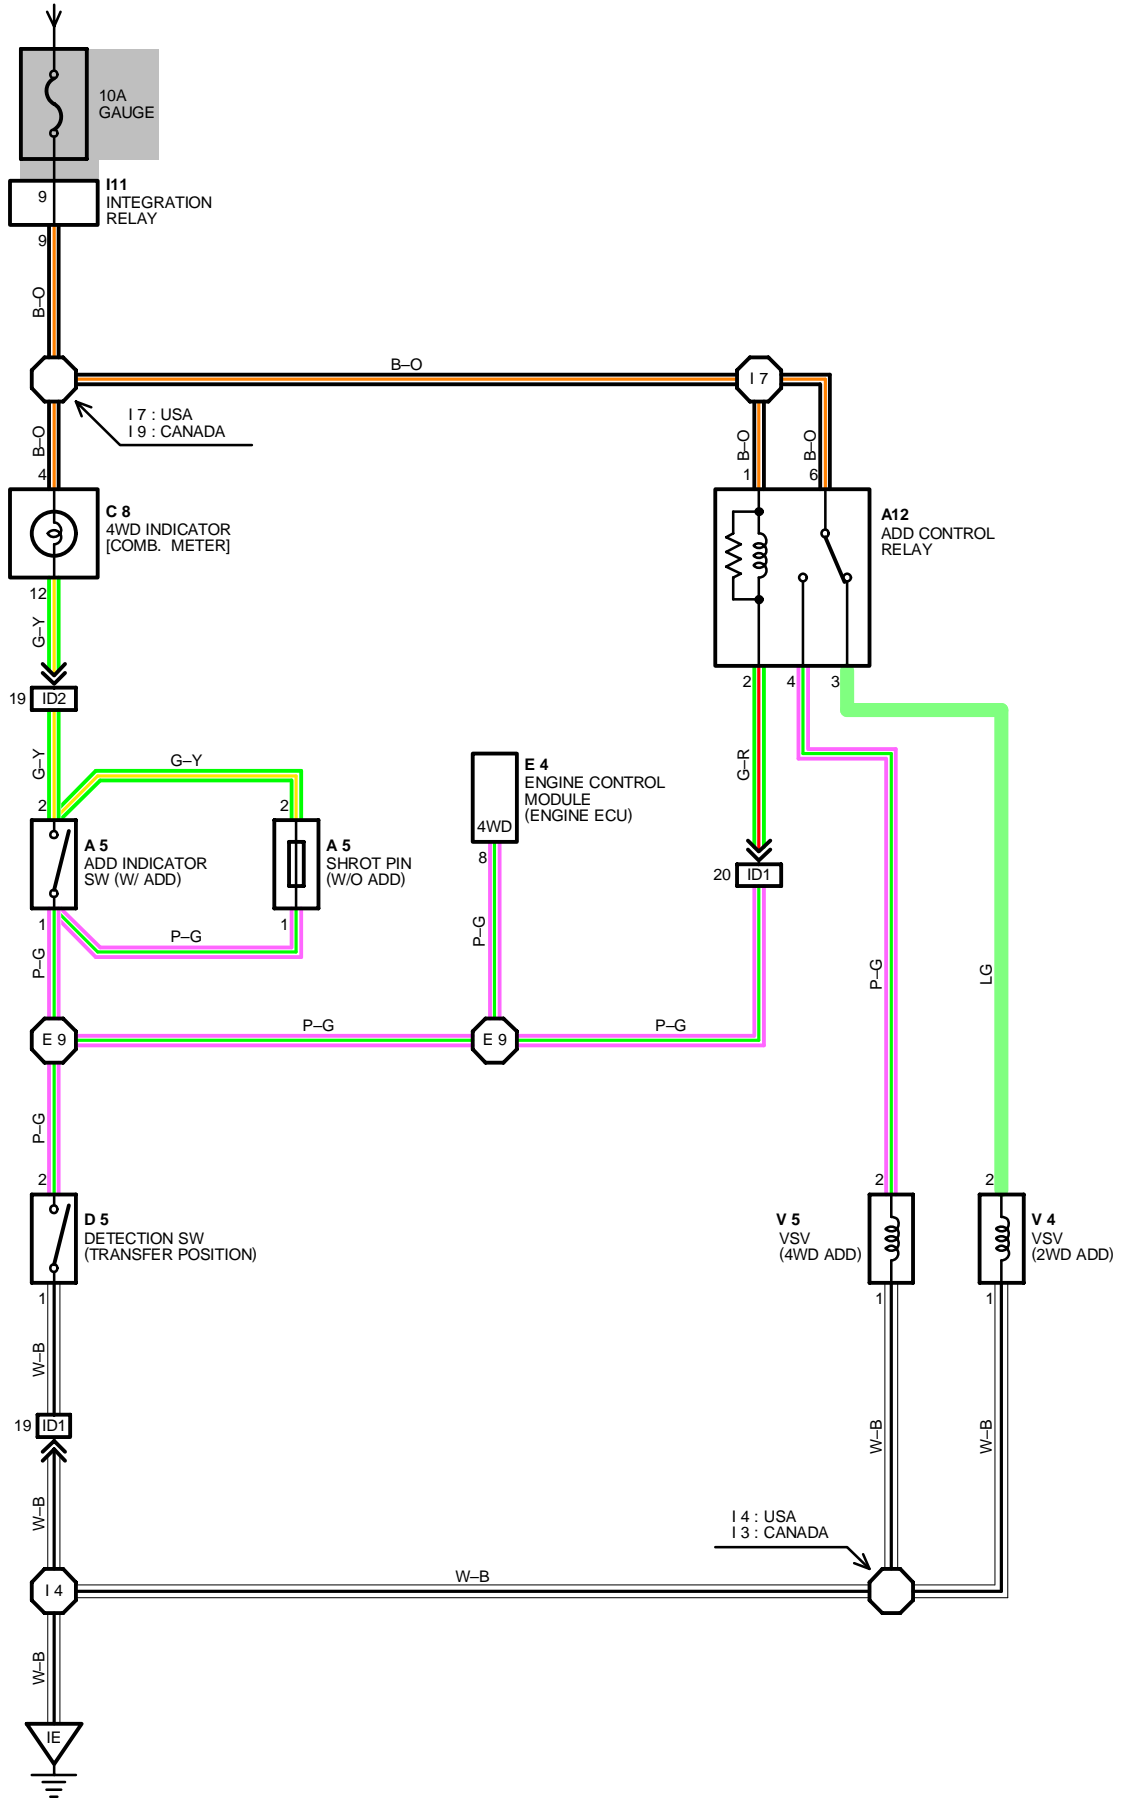

SERVICE HINTS

A12 ADD CONTROL RELAY

3-6 : CLOSED WITH IGNITION SW AT **OFF** POSITION OR IGNITION SW ON AND INDICATOR SW **H2** POSITION

4-6 : CLOSED WITH IGNITION SW AT **ON** POSITION OR IGNITION SW ON AND INDICATOR SW **H4** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	22	D 5	22	V 4	23
A12	24	E 4	24	V 5	23
C 8	24	I11	24		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	29	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
ID2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	28	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 9	26	ENGINE WIRE	I 7	28	COWL WIRE
I 3	28	COWL WIRE	I 9		
I 4					


A 5 DARK GRAY



 A12




C 8 BLUE

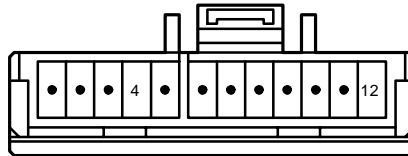


D 5



E 4 DARK GRAY

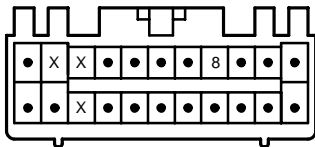

I11

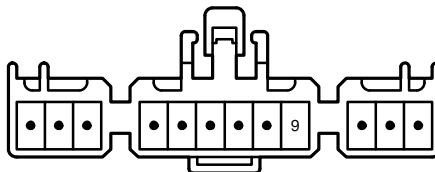

V 4 BLUE



V 5 BROWN

