


# AUTO ANTENNA

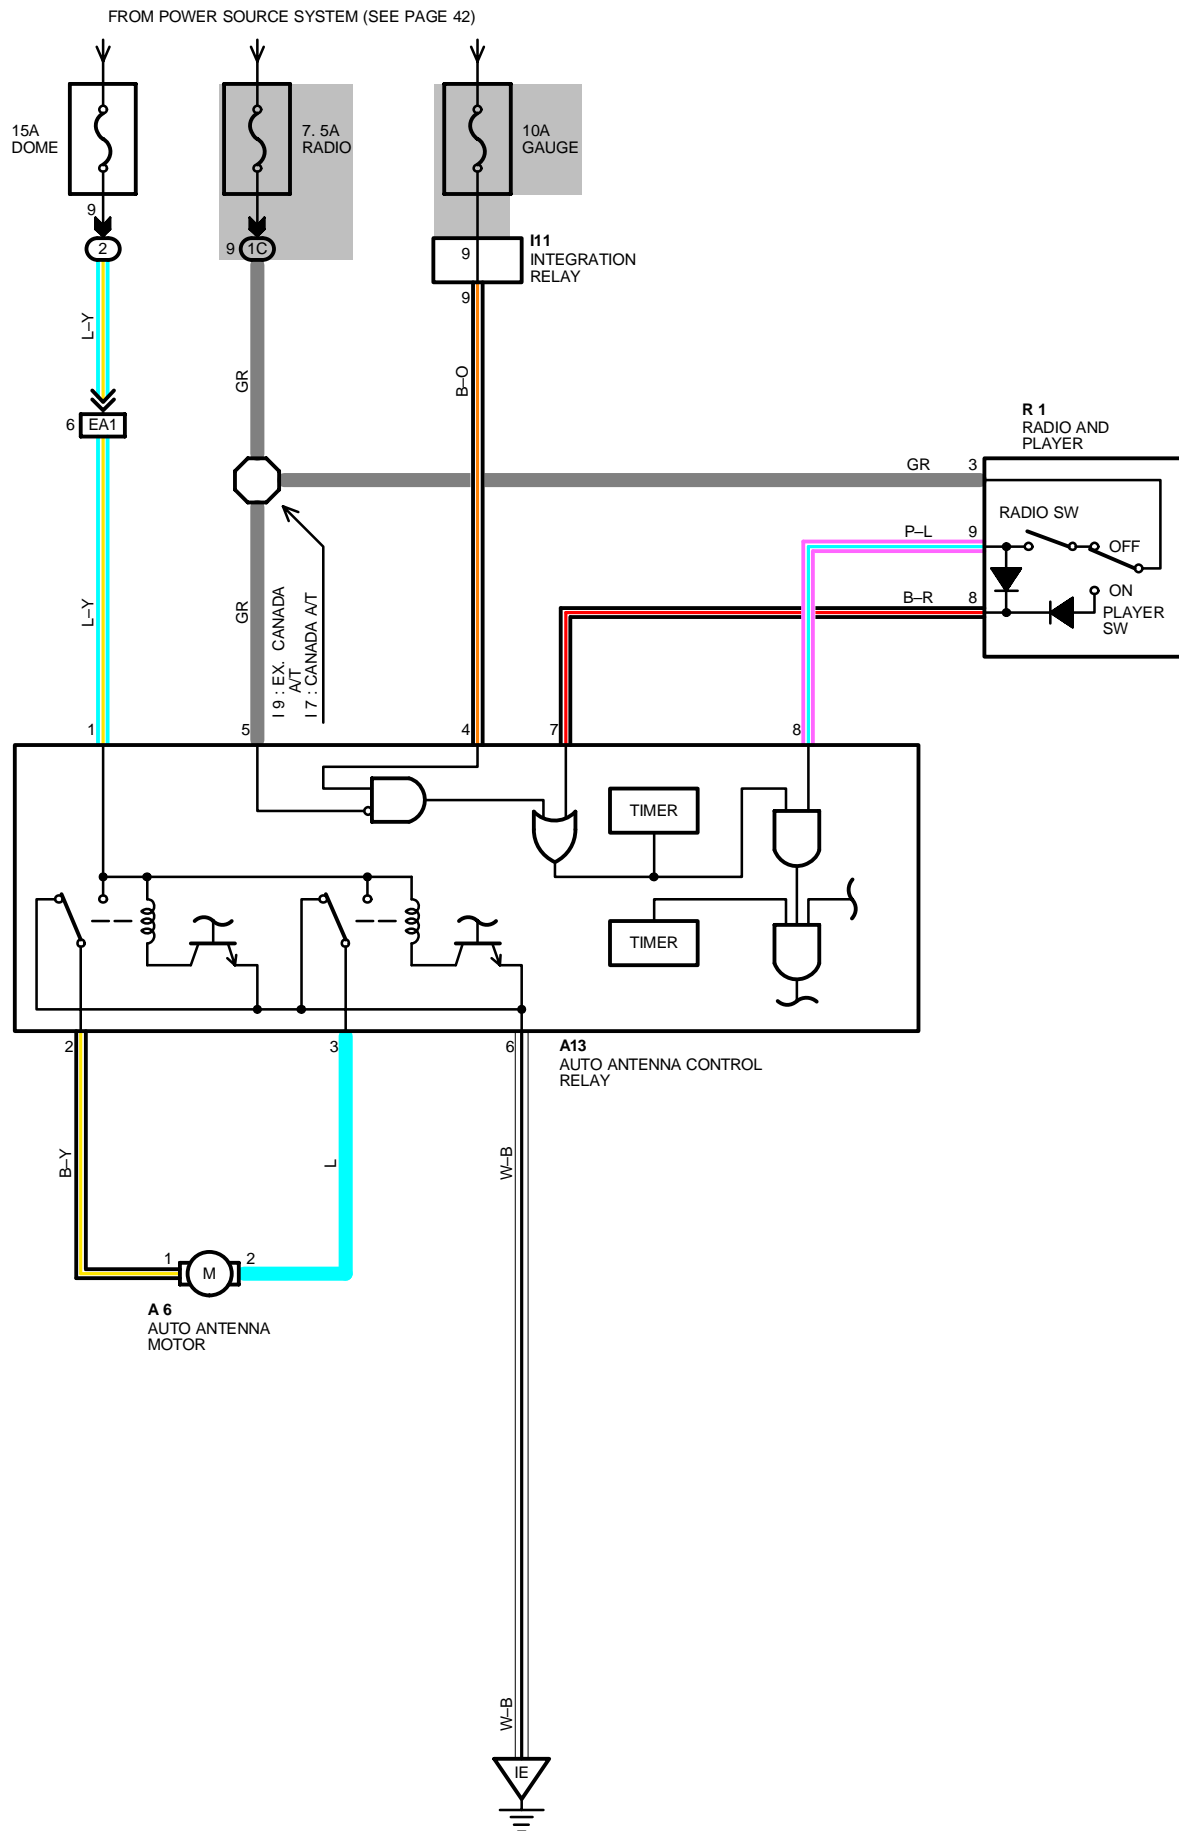

## SERVICE HINTS

### A13 AUTO ANTENNA CONTROL RELAY

- 1-GROUND : ALWAYS APPROX. 12 VOLTS
- 5-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
- 6-GROUND : ALWAYS CONTINUITY
- 7-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION AND RADIO SW ON AND PLAYER SW OFF UNTIL ANTENNA AT **UPPERMOST** POSITION
- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION AND RADIO SW OFF AND PLAYER SW ON UNTIL ANTENNA AT **LOWERMOST** POSITION
- 5-7 : CONTINUITY WITH PLAYER SW ON
- 5-8 : CONTINUITY WITH PLAYER SW OFF AND RADIO SW ON

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 6	22	I11	24		
A13	24	R 1	24		

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	28	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	28	COWL WIRE	I 9	28	COWL WIRE

