



ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

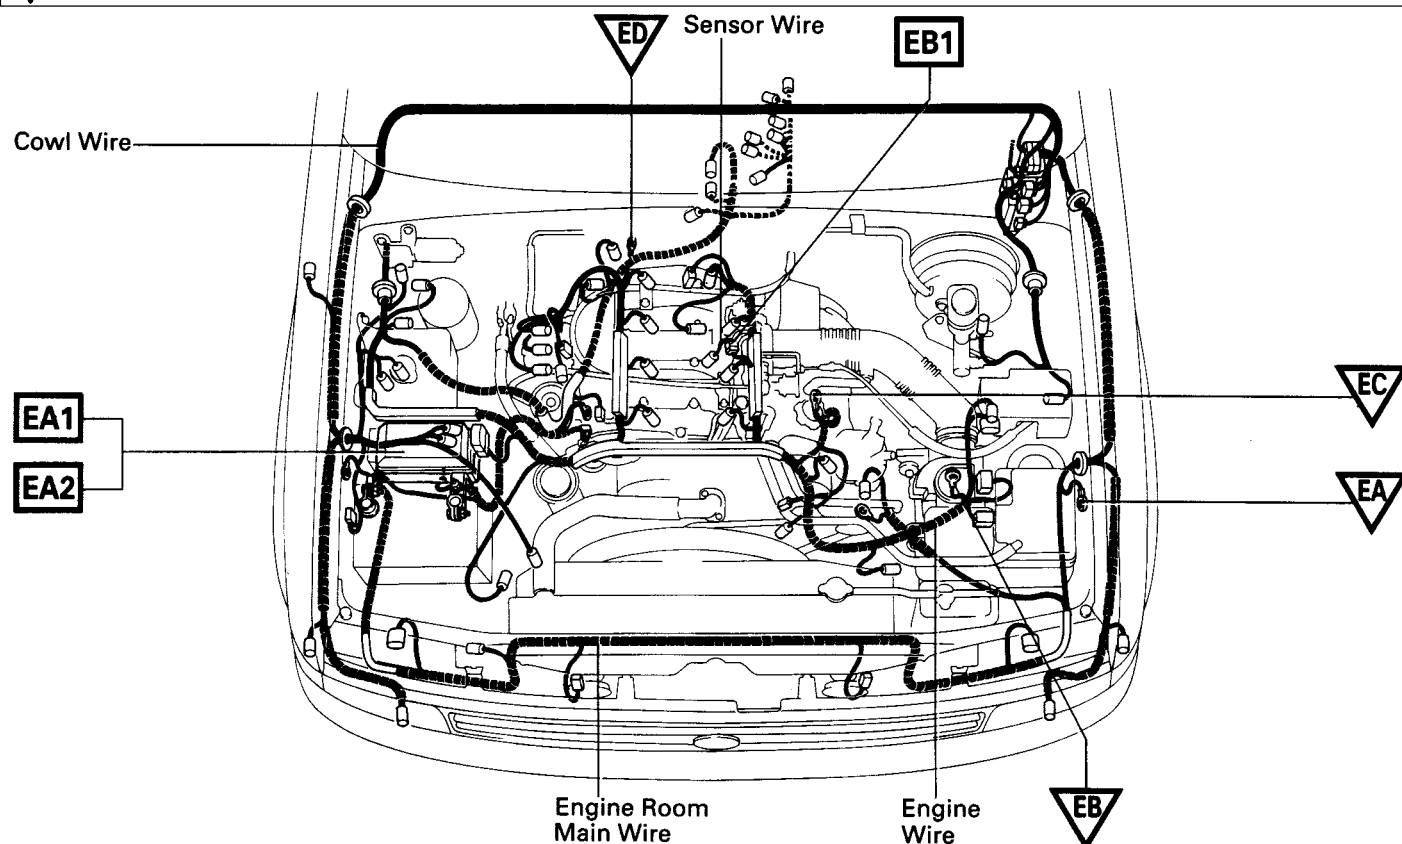

○ : Location of Splice Points

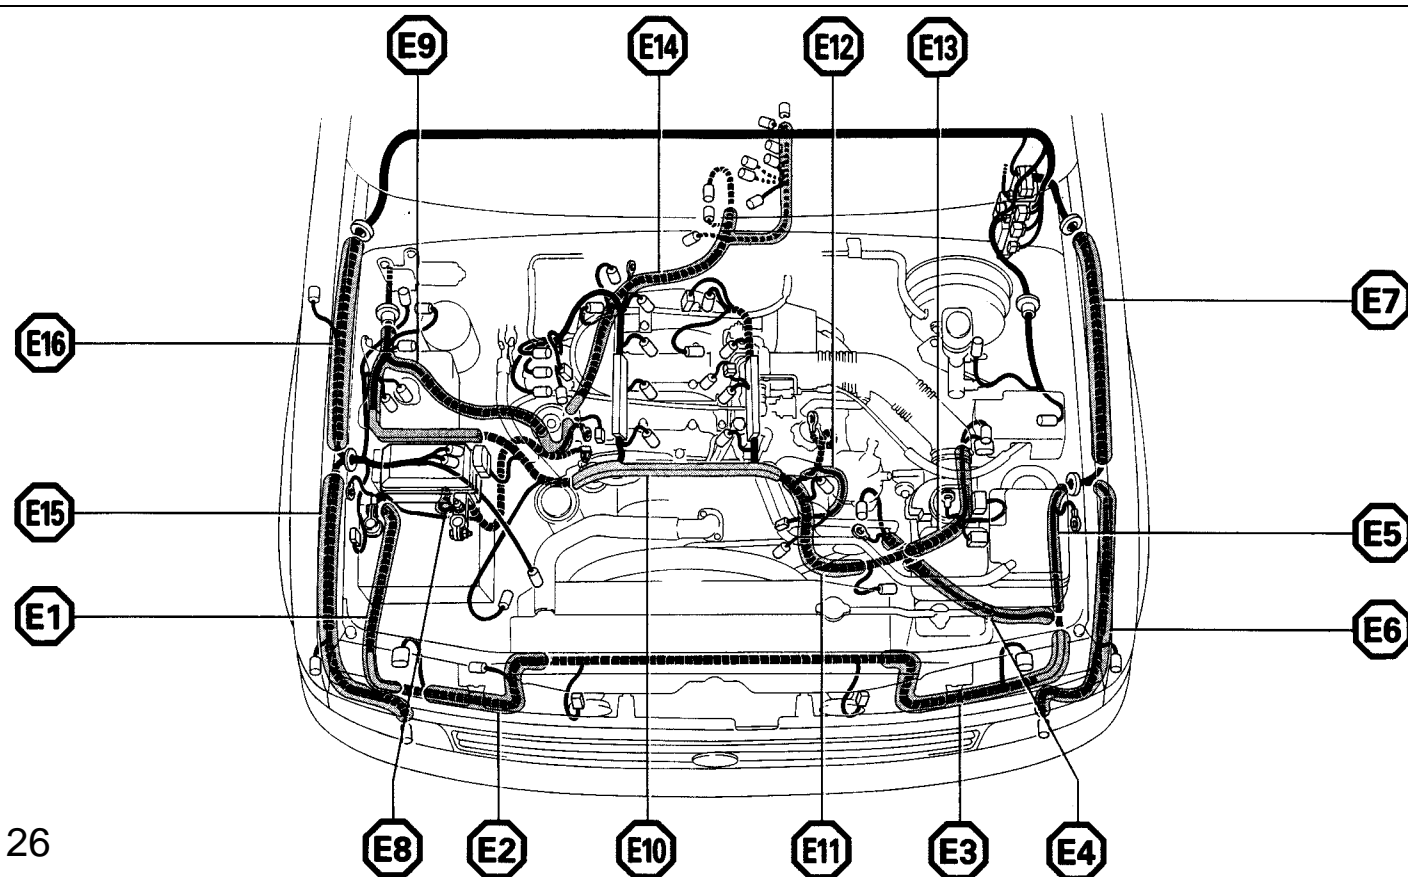

Connector Joining Wire Harness and Wire Harness

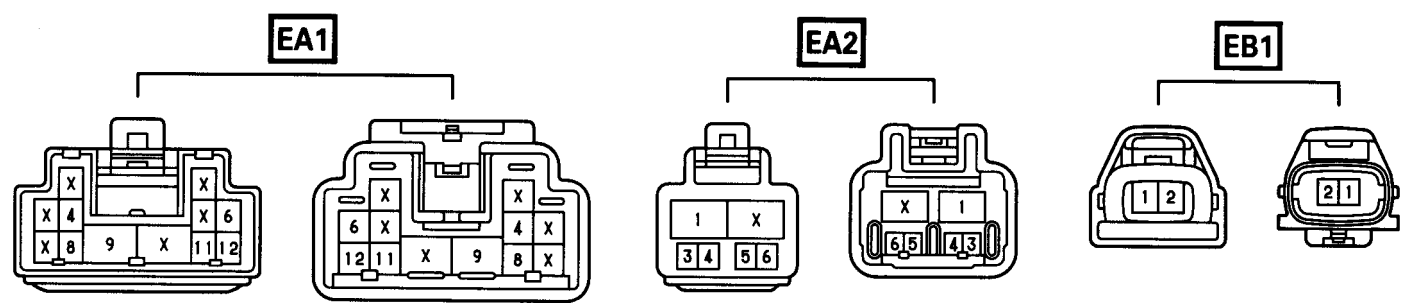


EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)
EA2	
EB1	


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

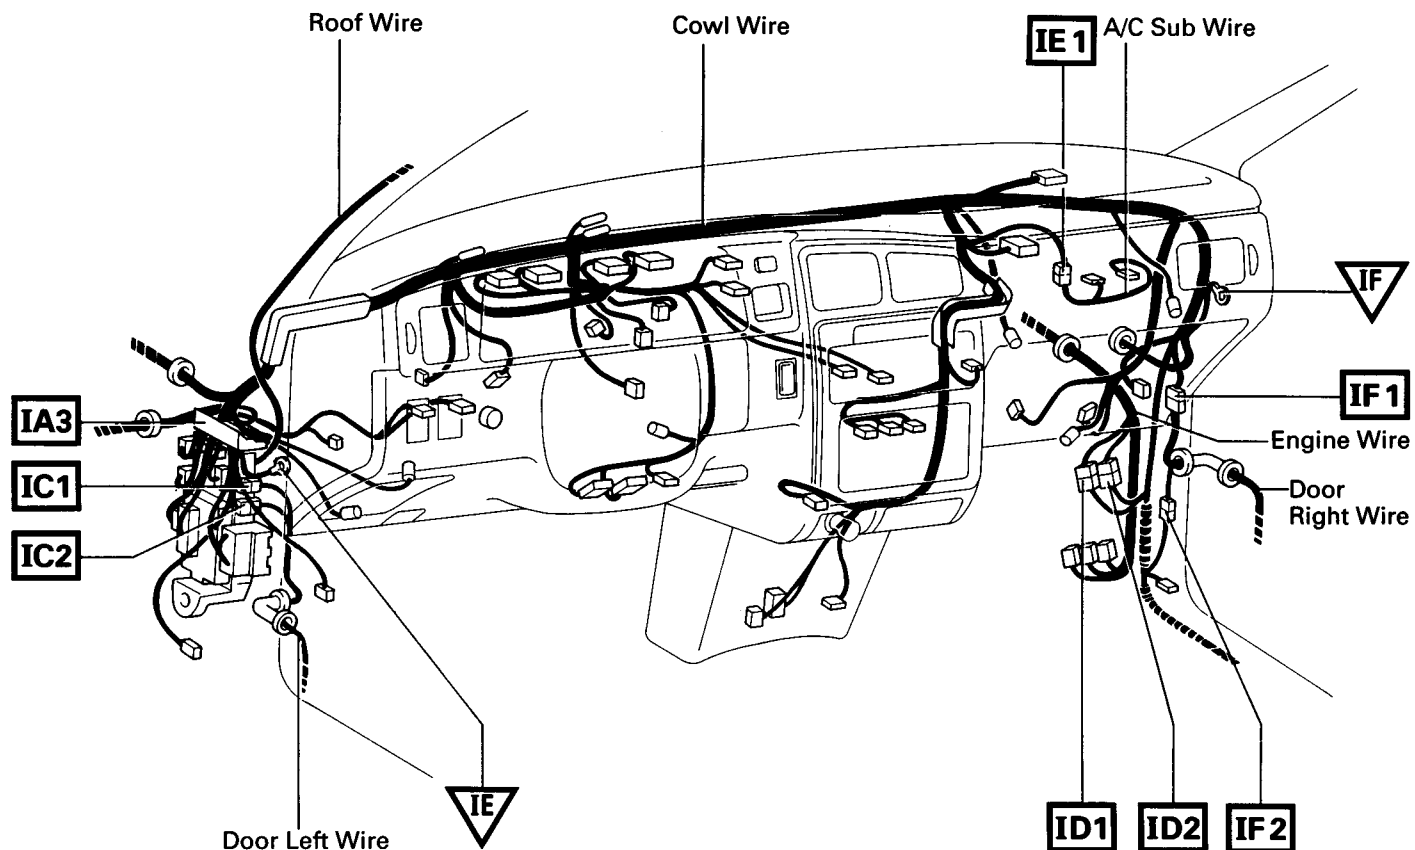

○ : Location of Splice Points

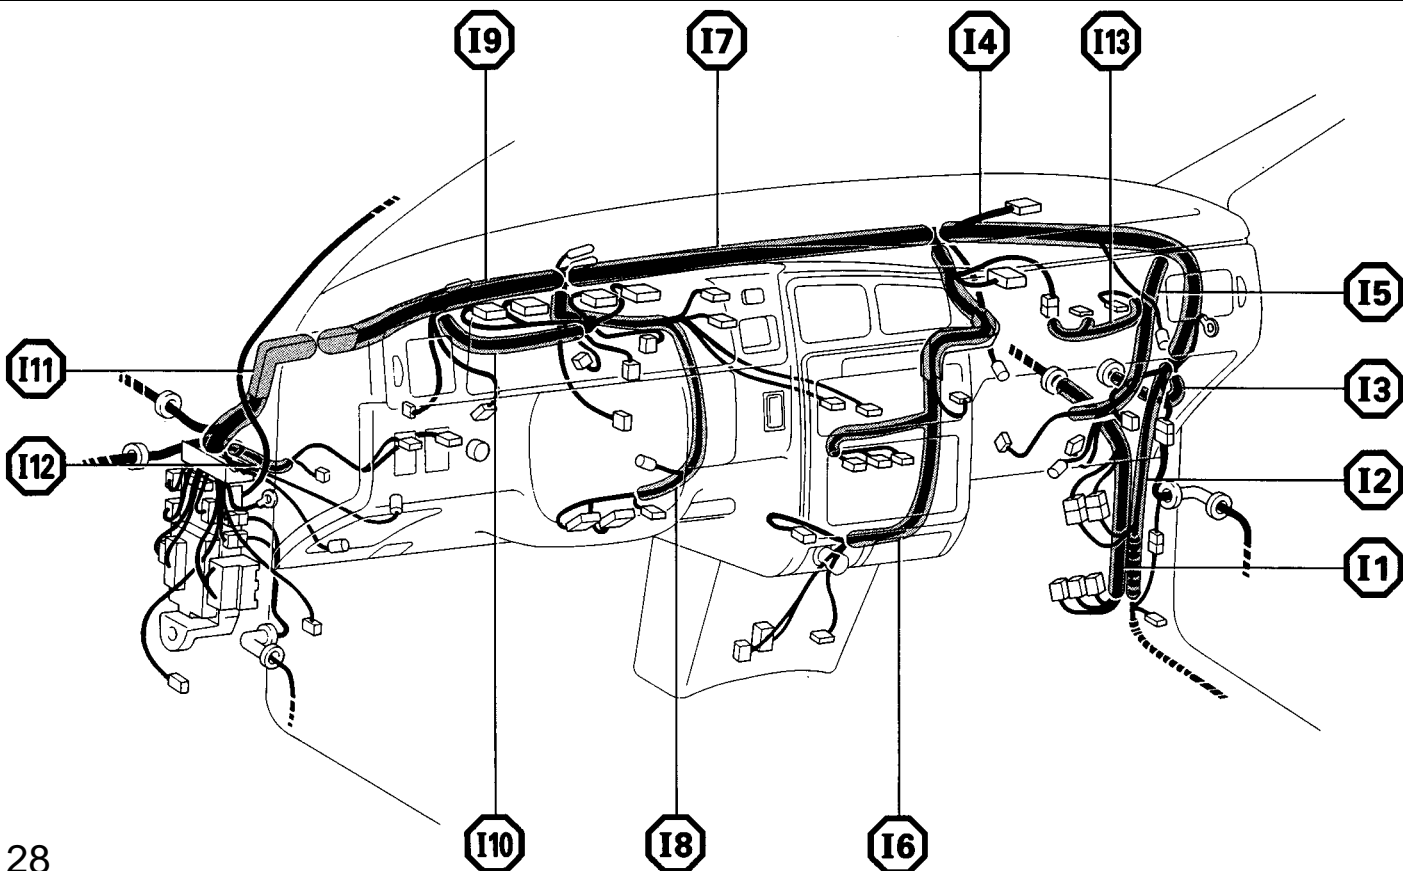

Connector Joining Wire Harness and Wire Harness

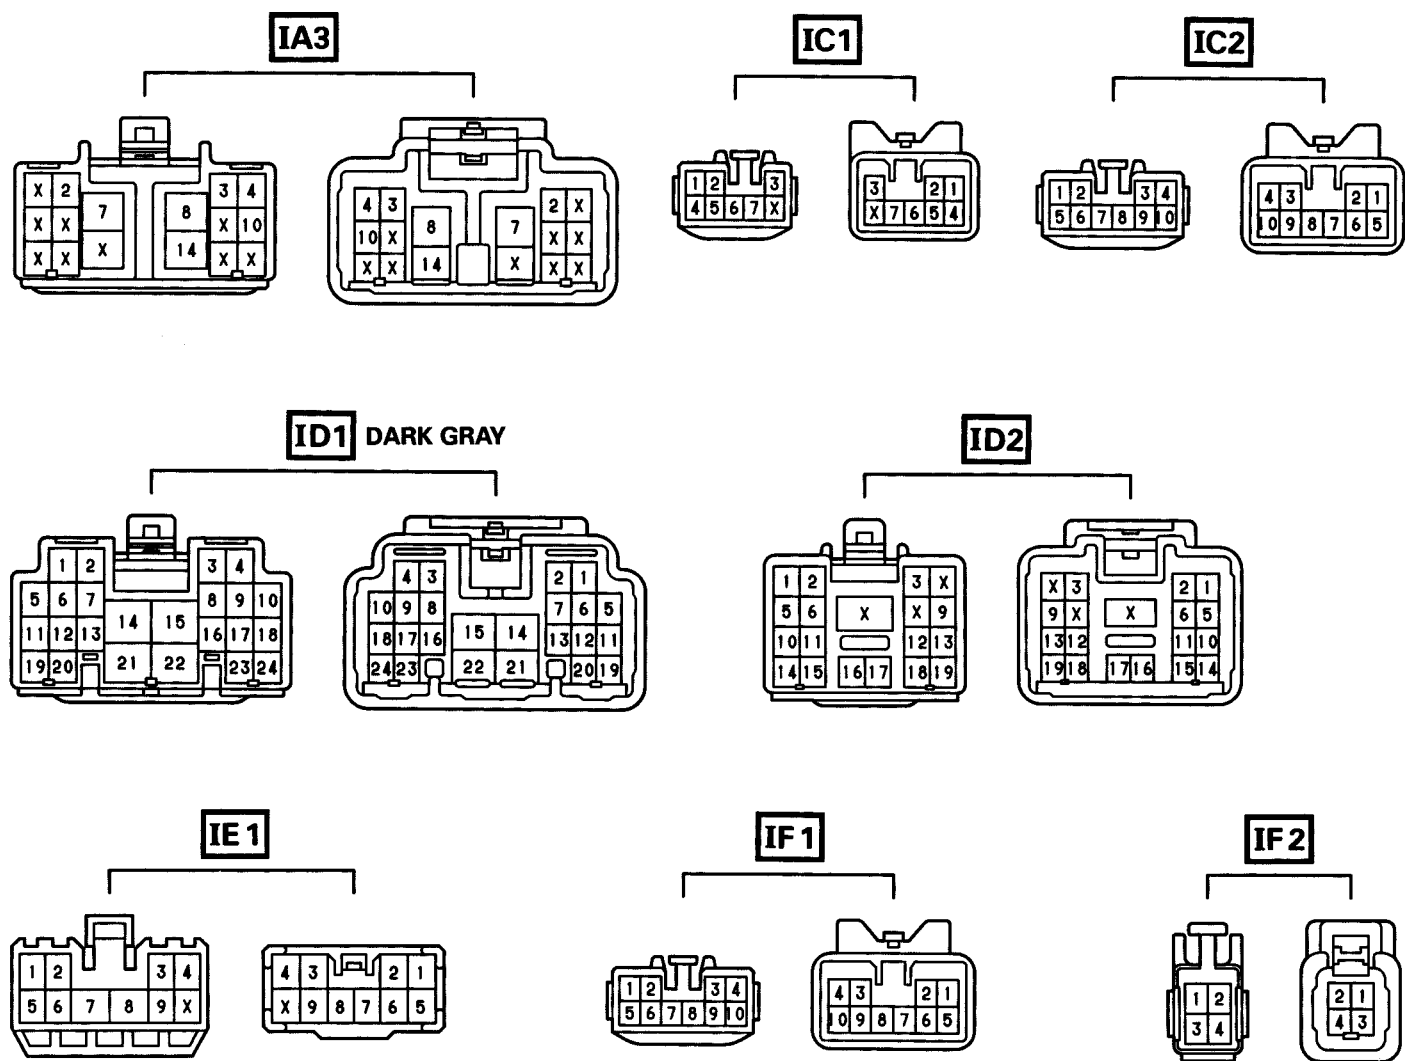


IA3	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IC1	DOOR LEFT WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2	DOOR RIGHT WIRE AND COWL WIRE (RIGHT KICK PANEL)
ID1	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
ID2	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IE1	COWL WIRE AND A/C SUB WIRE (BEHIND THE GLOVE BOX)
IF1	DOOR RIGHT WIRE AND COWL WIRE (RIGHT KICK PANEL)
IF2	DOOR RIGHT WIRE AND COWL WIRE (RIGHT KICK PANEL)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

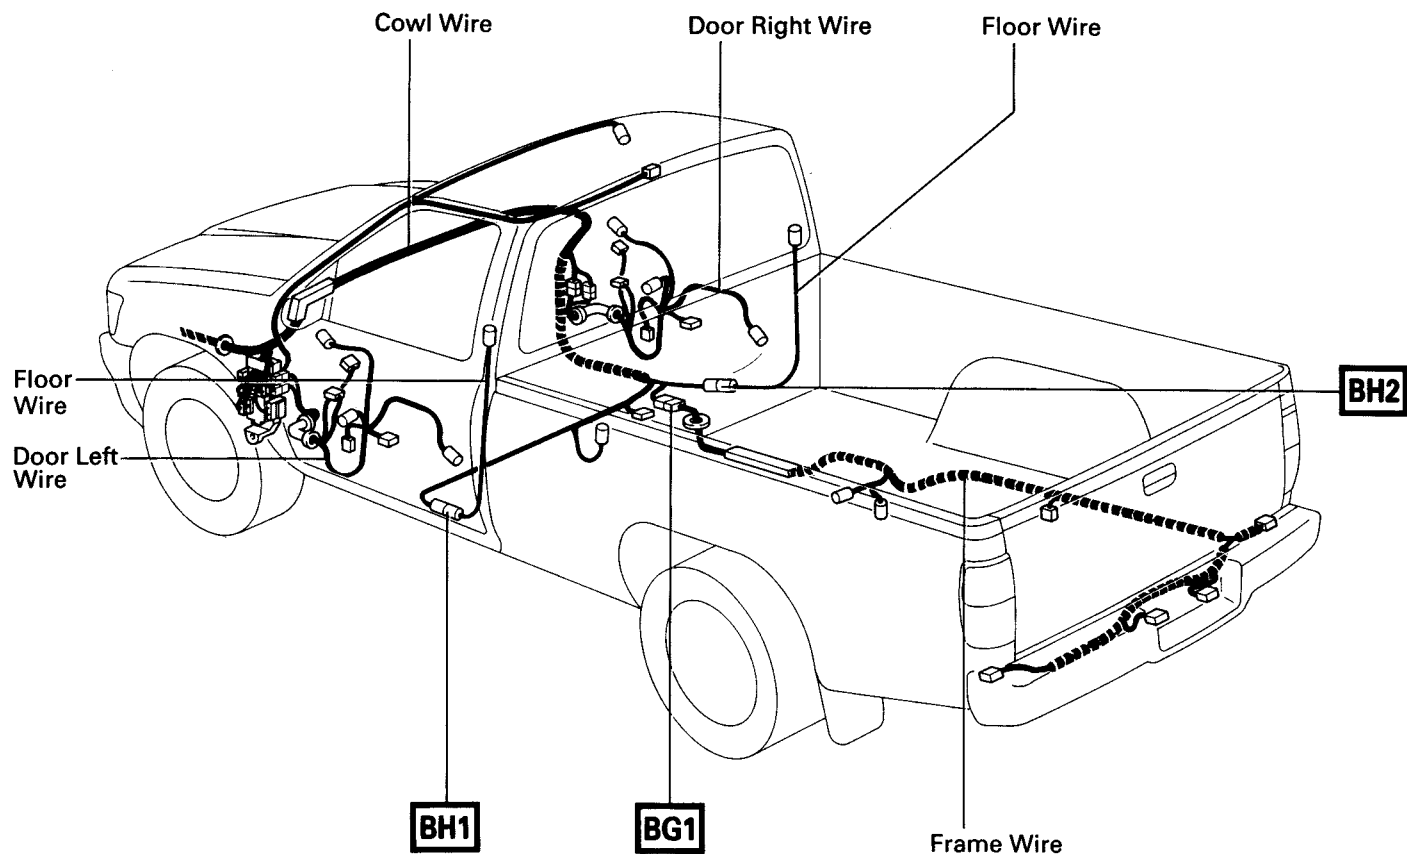

○ : Location of Splice Points

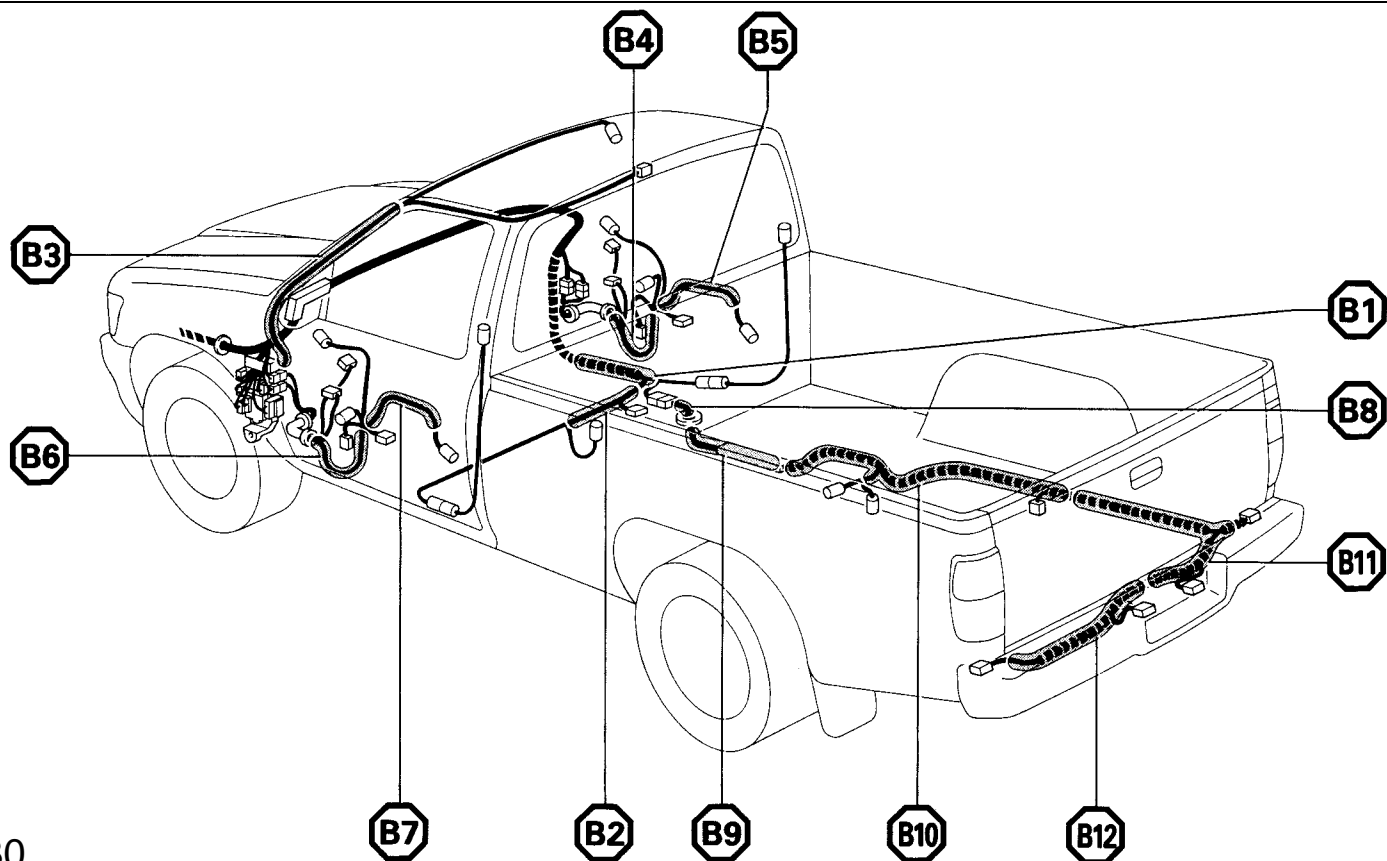

Connector Joining Wire Harness and Wire Harness

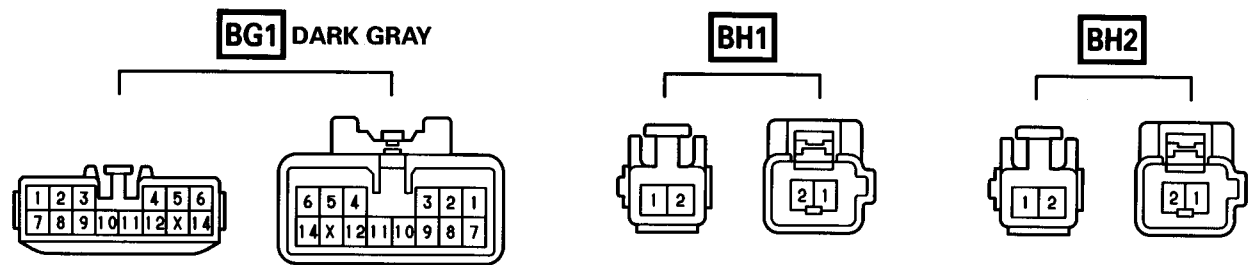

BG1	FRAME WIRE AND COWL WIRE (UNDER THE PASSENGER'S SEAT)
BH1	FLOOR WIRE AND COWL WIRE (UNDER THE LEFT SCUFF PLATE)
BH2	FLOOR WIRE AND COWL WIRE (UNDER THE RIGHT SCUFF PLATE)