


# INTERIOR LIGHT

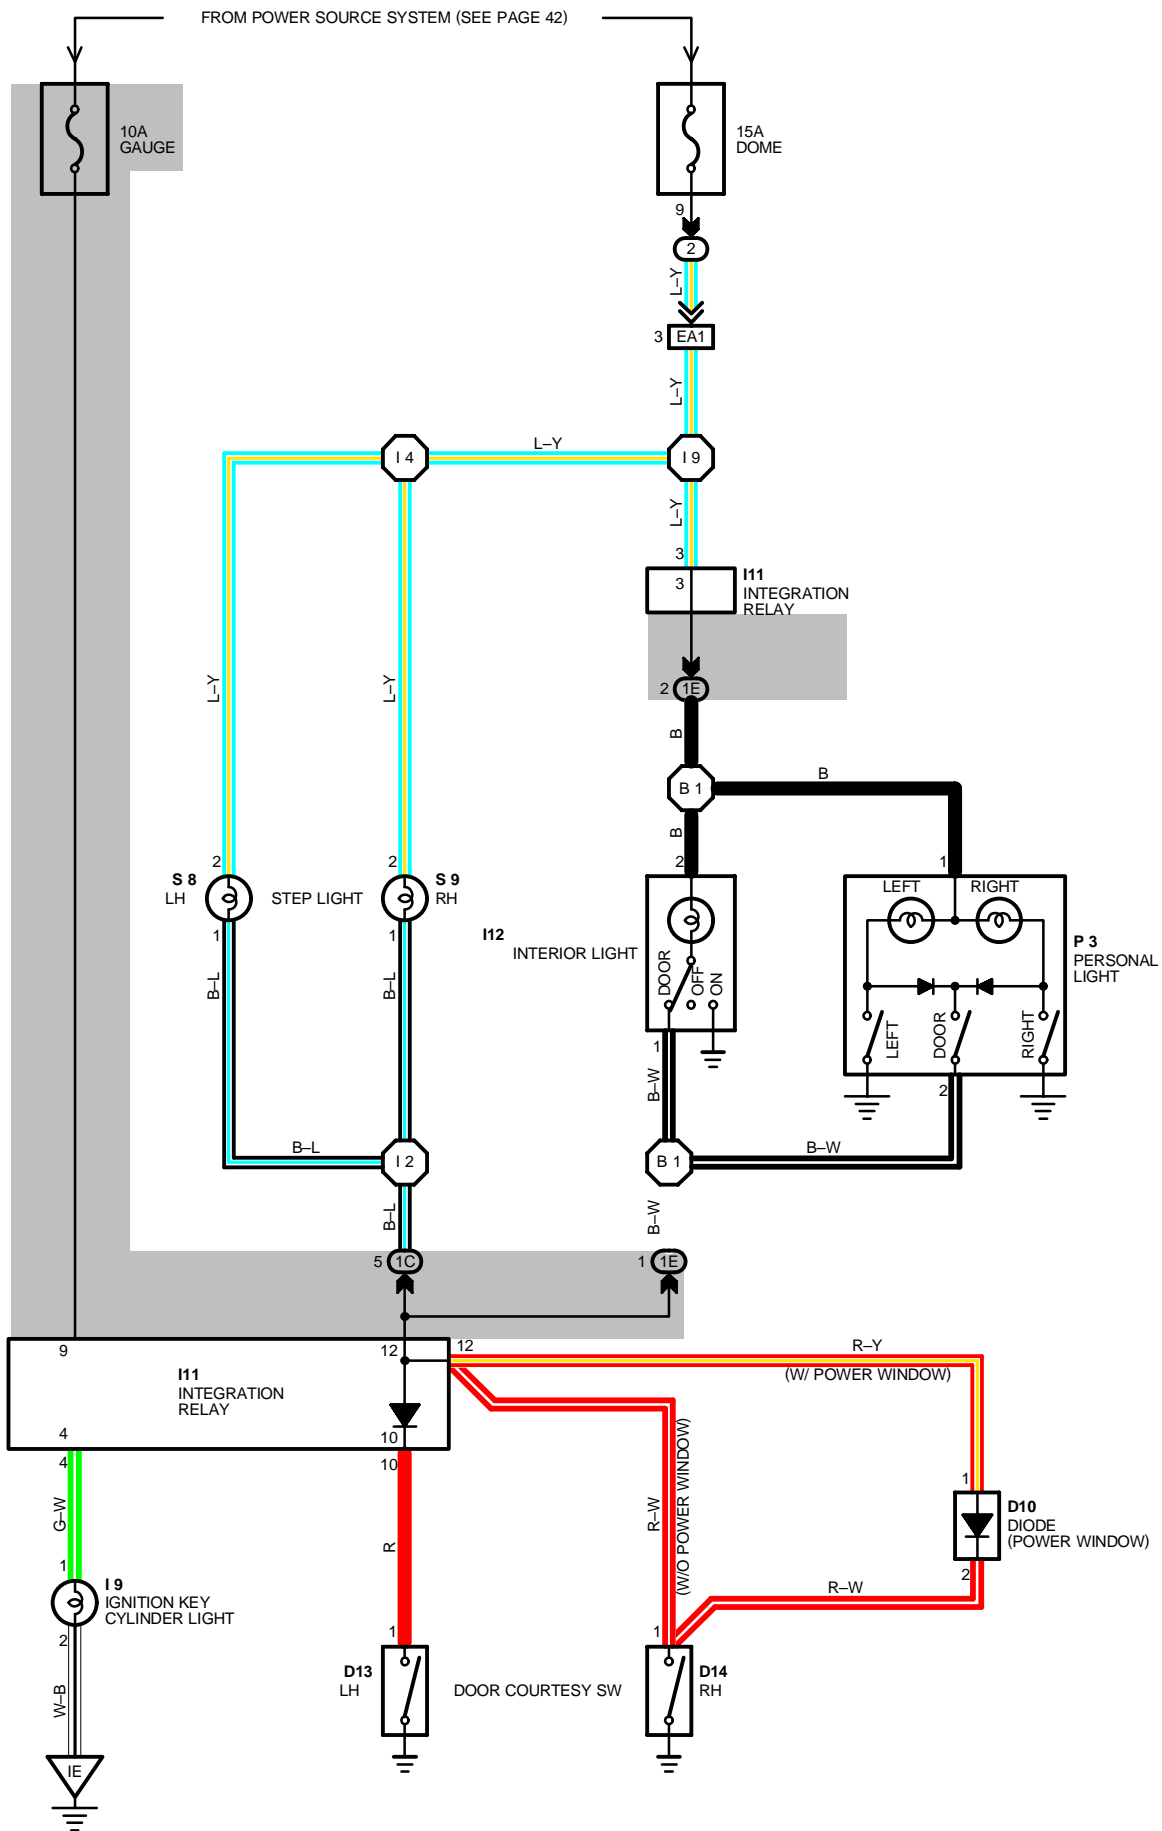

## SERVICE HINTS

### D13, D14 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D10	24	I9	24	P3	25
D13	24	I11	24	S8	24
D14	24	I12	25	S9	24

## ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D	20	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	28	LEFT KICK PANEL

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I4	28	COWL WIRE	B3	30	ROOF WIRE
I9					

D10 BLACK

D13, D14

I9

I11

I12, P3

S8, S9 BLUE

