


# OVERALL ELECTRICAL WIRING DIAGRAM

\*The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

## HOW TO READ THIS SECTION

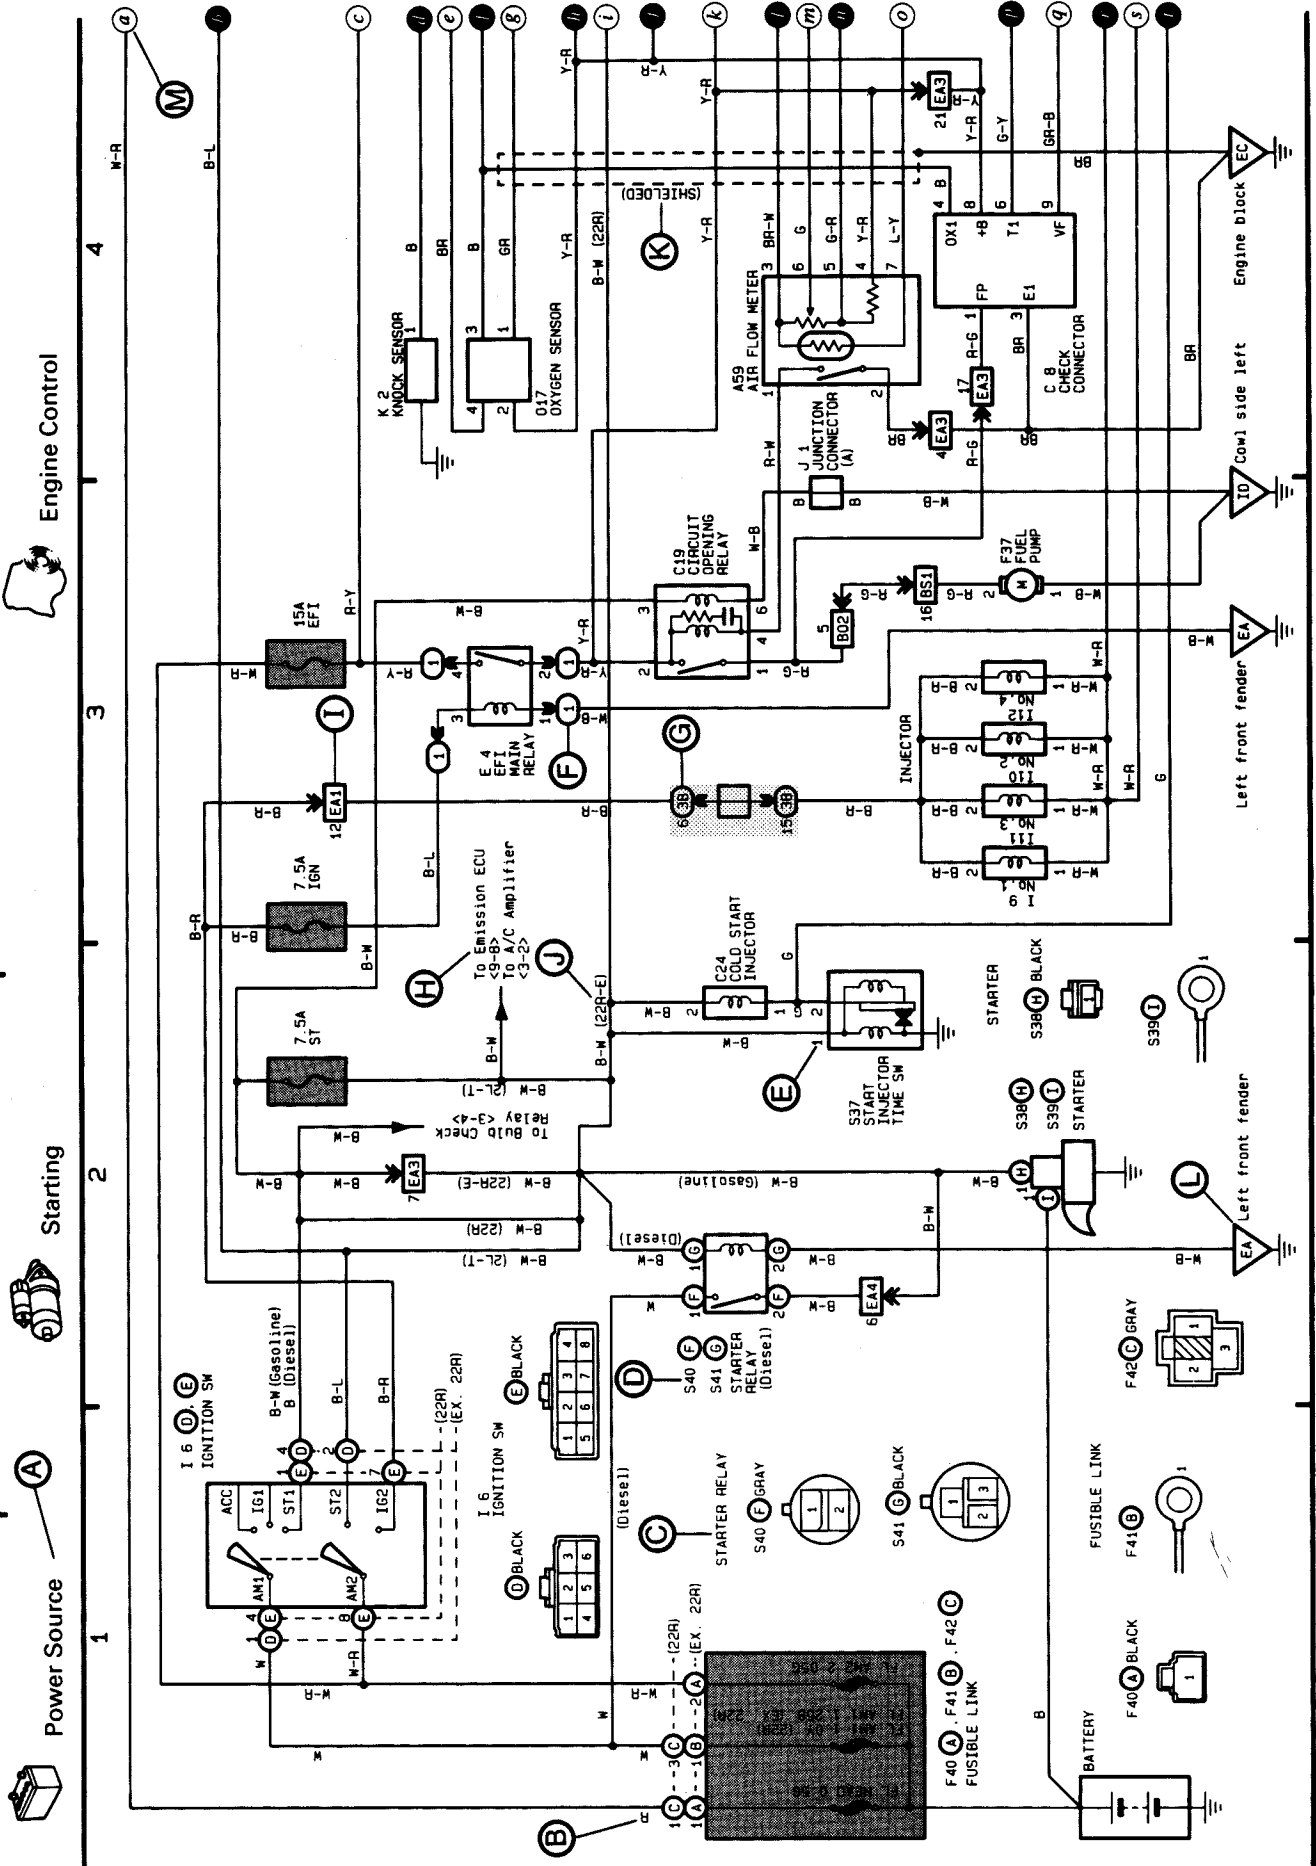

(A): System Title

 
(B): Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black	L = Blue	R = Red
BR = Brown	LG = Light Green	V = Violet
G = Green	O = Orange	W = White
GR = Gray	P = Pink	Y = Yellow

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

**Example: L - Y**




(C): Indicates the connector to be connected to a part (the numeral indicates the pin No.)

(D): The position of the parts is the same as shown in the wiring diagram and wire routing.


(E): Indicates the pin number of the connector. The numbering system is different for female and male connectors.

**Example:** Numbered in order from upper left to lower right

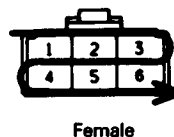

Female

 Numbered in order from upper right to lower left



Male


The numbering system for the overall wiring diagram is the same as above.

(F): Indicates a Relay Block. No Shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

**Example: ① Indicates Relay Block No. 1.**

 (G): Junction Block (The number in the circle is the J/B No. and connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification).

Example:




**3B indicates that it is inside Junction Block No. 3.**

(H): Indicates related system.

(I): Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗).

Outside numerals are pin numbers.

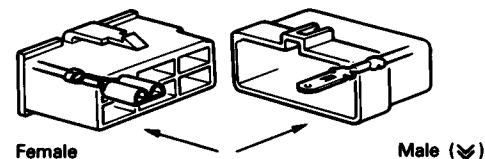

(J): ( ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

(K): Indicates a shielded cable.



(L): Indicates and located on ground point.

(M): The same code occurring on the next page indicates that the wire harness is continuous.

## SYSTEM INDEX

1993 Model (Location No. 1 to 16)

SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
Air Conditioning	16-2	Horn	7-4	Unlock and Seat Belt Warning	5-2
Auto Antenna	15-2	Interior Light	5-3		
Back-Up Light	8-4	Light Reminder Buzzer	12-3	Wiper and Washer	7-2
Cigarette Lighter and Clock	15-3	Power Source	1-16-1		
Combination Meter	14-2	Power Window	11-4		
Cruise Control	8-2	Radio and Player	13-2		
Door Lock	11-2	Rear Wheel Anti-Lock Brake	10-2		
Electronic Controlled Transmission and A/T indicator	9-2	Remote Control Mirror	12-2		
Engine Control	2-2	Starting, Ignition and Charging	1-2		
4WD	3-3	Stop Light	8-3		
Headlight (Canada)	4-2	Taillight and Illumination	3-6		
Headlight (USA)	3-2	Turn Signal and Hazard Warning Light	6-2		