


POWER SOURCE

*1 : USA
*2 : CANADA

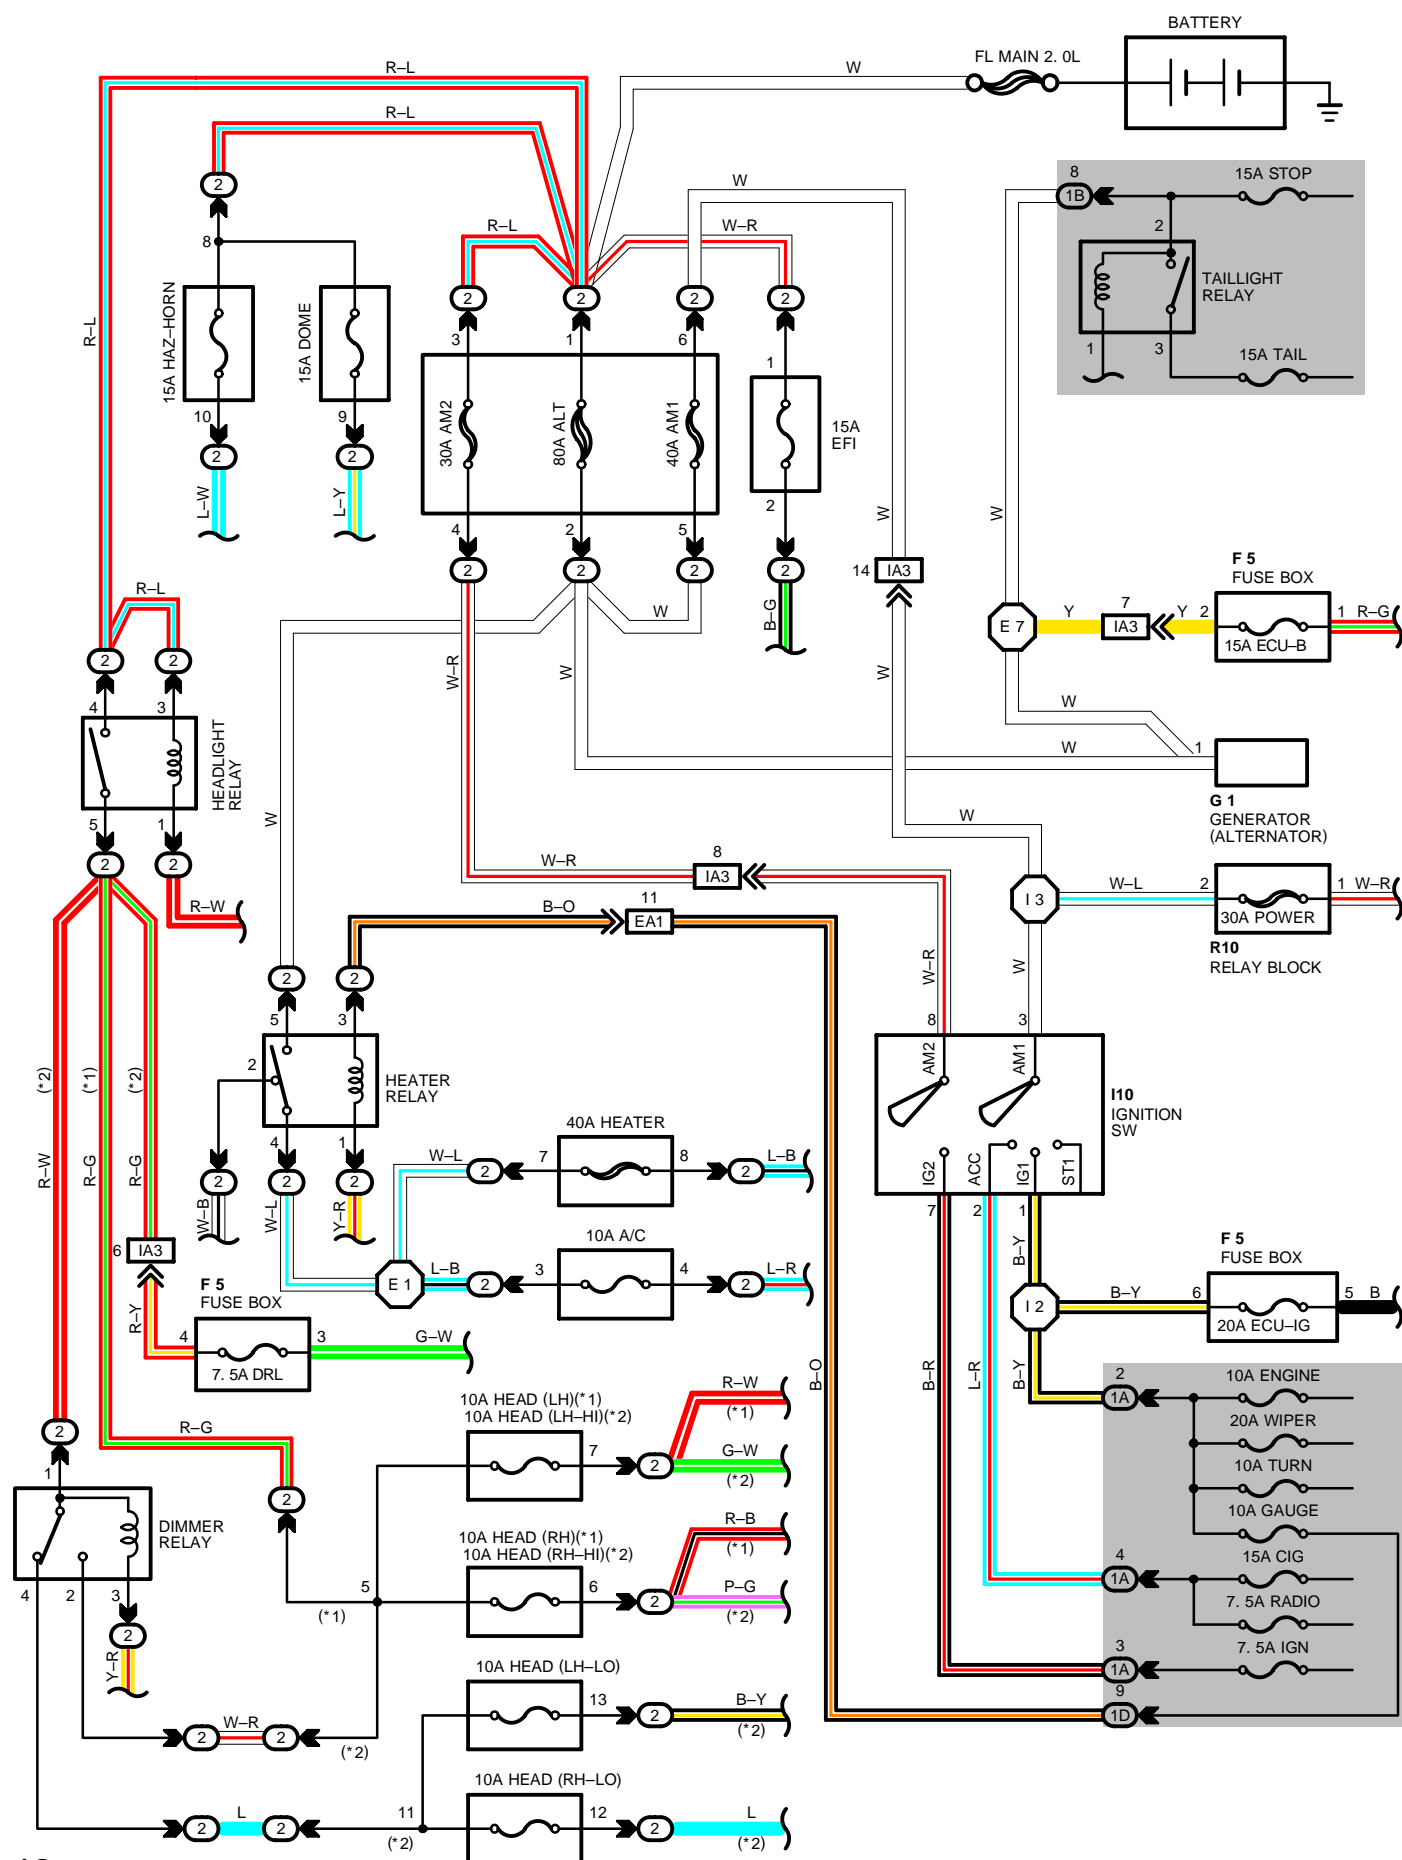

SERVICE HINTS

HEATER RELAY

(2) 4- (2) 5 : CLOSED WITH IGNITION SW ON AND BLOWER SW ON

HEADLIGHT RELAY

(2) 4- (2) 5 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

I10 IGNITION SW

3-2 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

3-1 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

8-7 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

2-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

DIMMER RELAY

CHANGED FROM HEAD(LO) TO HEAD(HI) WITH DIMMER SW AT **FLASH** POSITION OR WITH HEADLIGHT RELAY ON
AND DIMMER SW AT **HIGH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F 5	22	I10	23		
G 1	22	R10	24		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D	20	COWL WIRE J/B NO. 1 (LEFT KICK PANEL)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)
IA3	28	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	26	ENGINE ROOM MAIN WIRE	I 7	28	COWL WIRE
E 7			I 9		

 
F 5



G 1

 

I10 BLACK

 

R10

