



RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

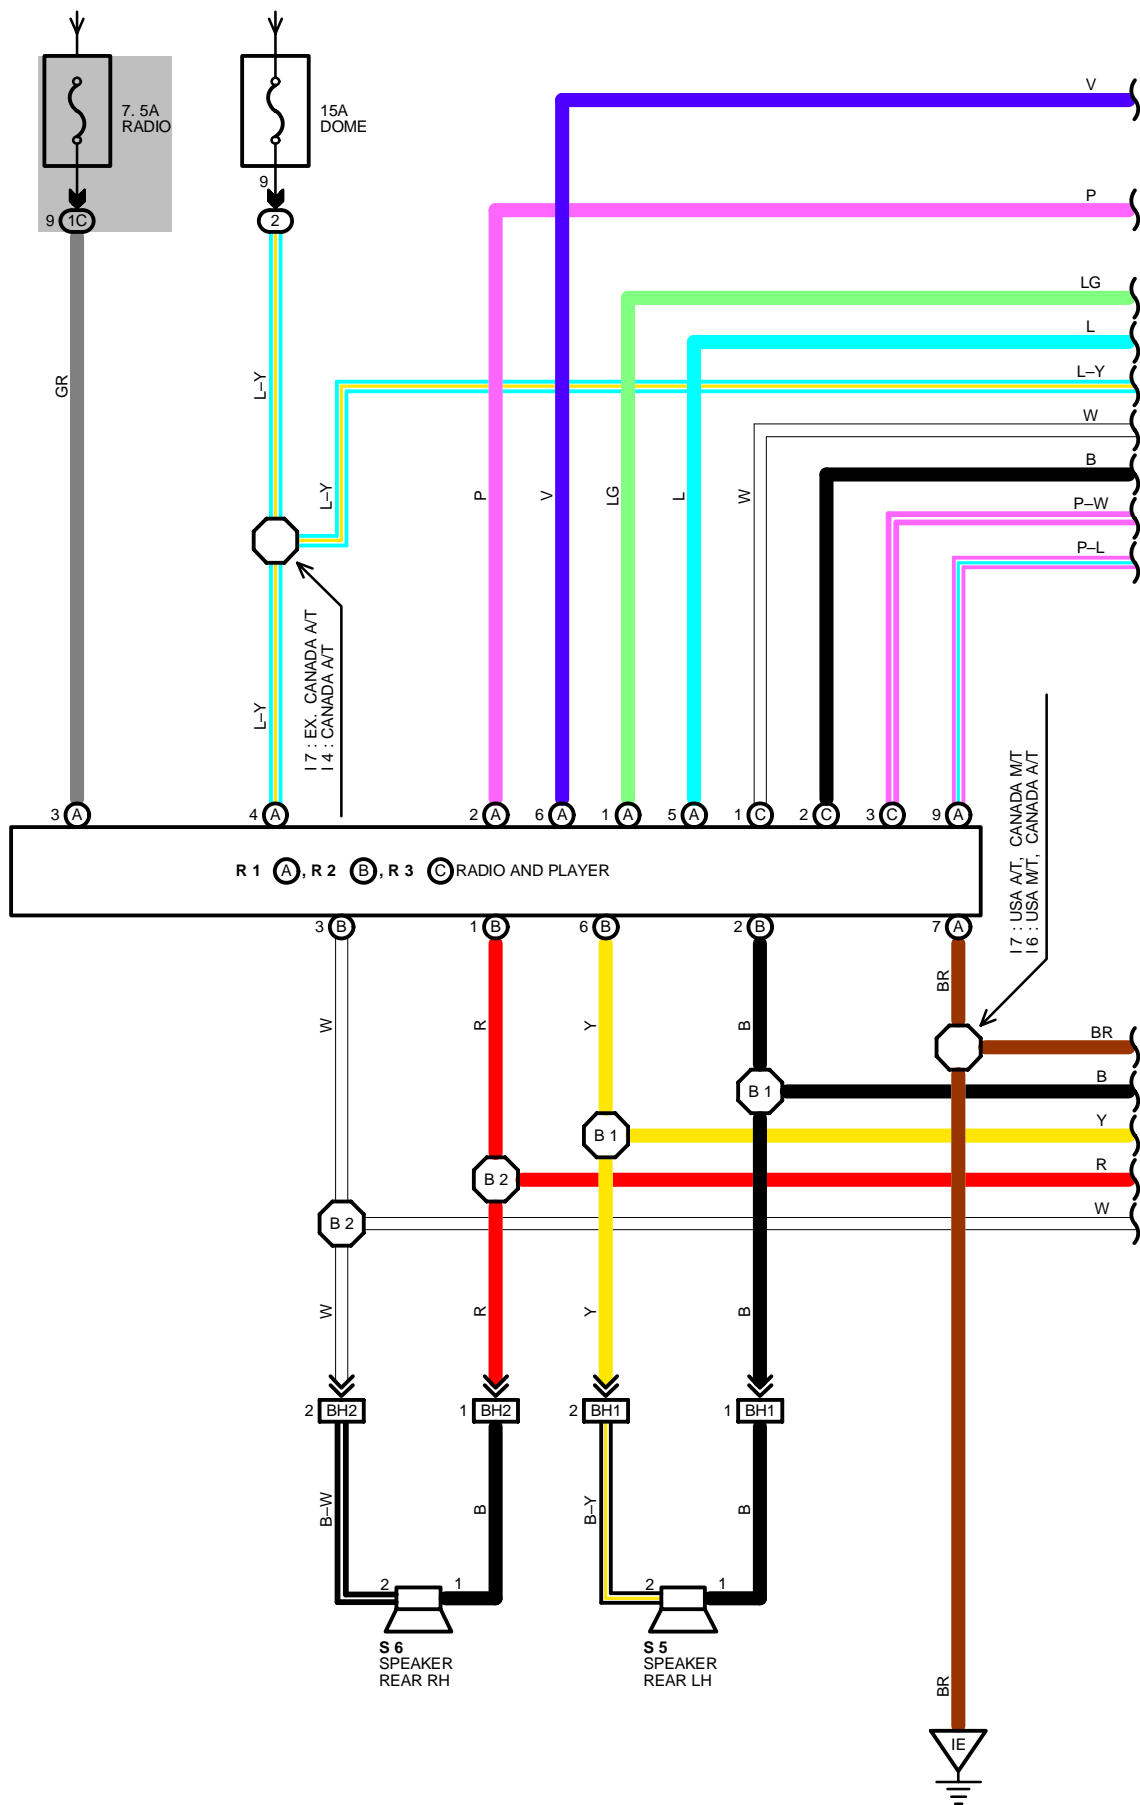

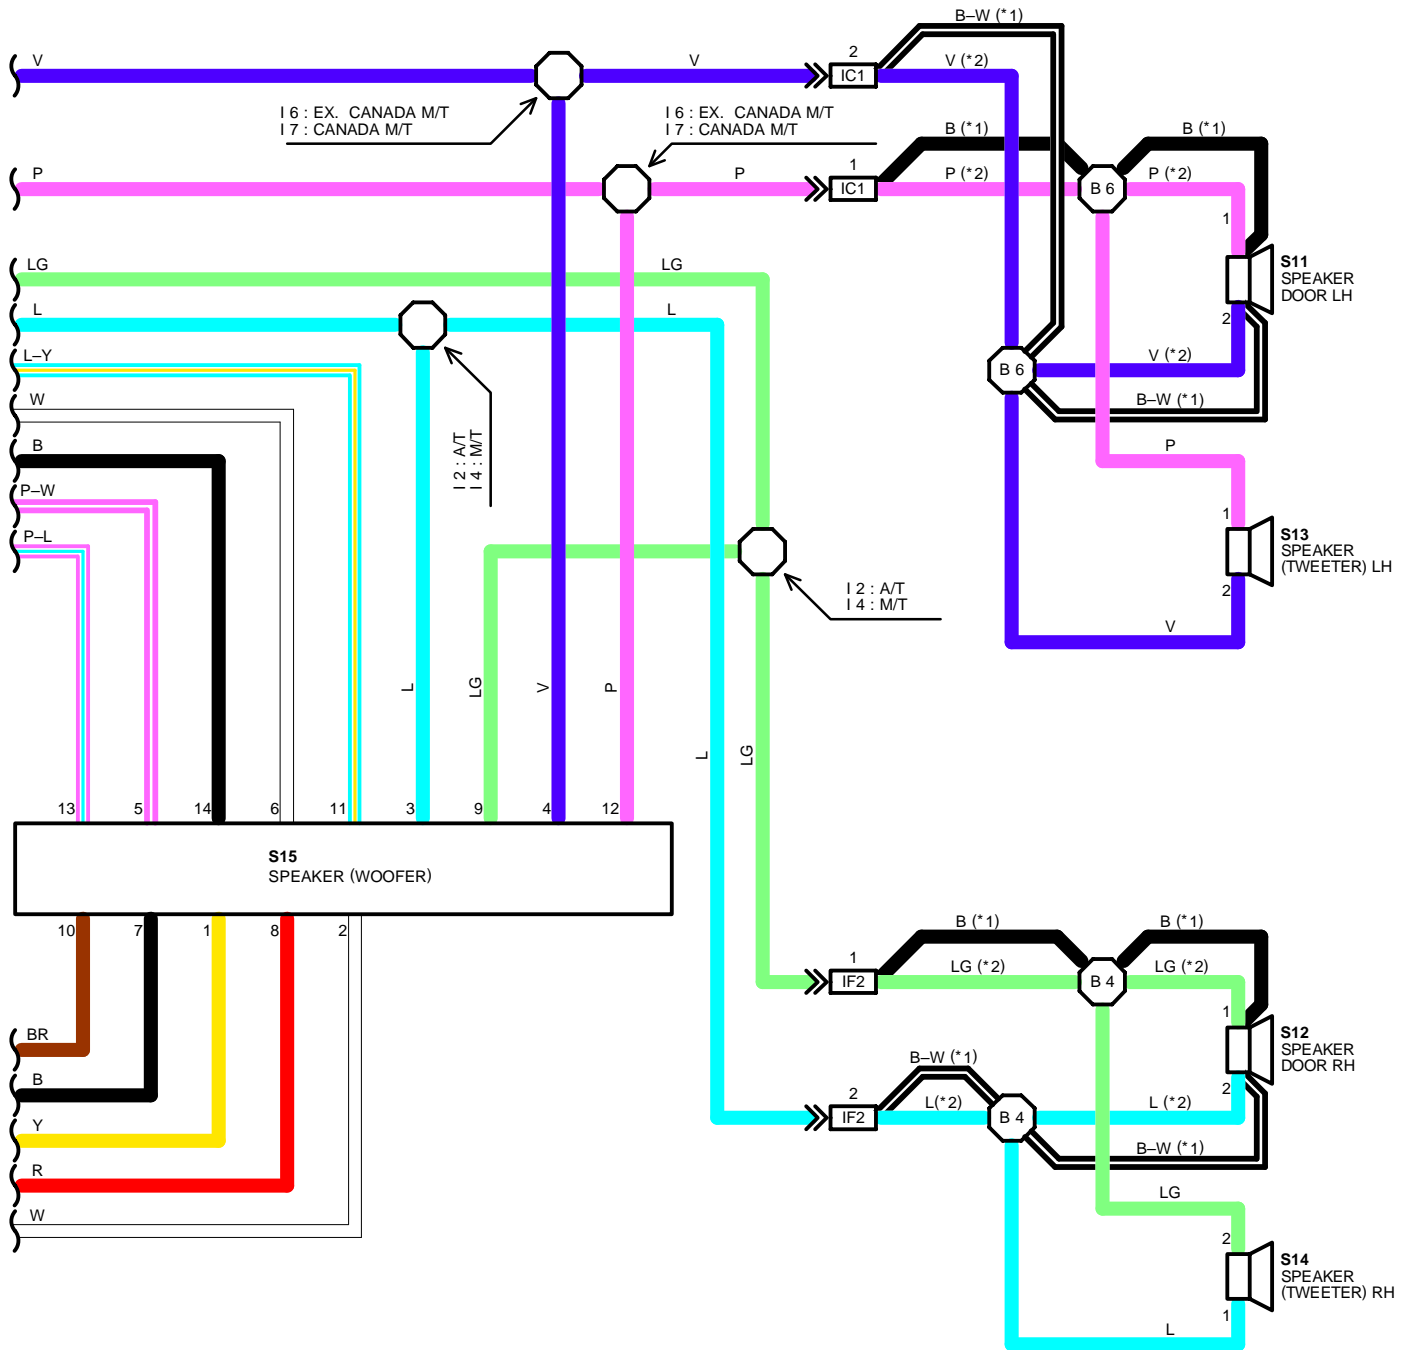

RADIO AND PLAYER

SERVICE HINTS

R 1 RADIO AND PLAYER

- (A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION
- (A) 4-GROUND : ALWAYS APPROX. 12 VOLTS
- (A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
R 1	A	24	S 6	25		S14	25	
R 2	B	24	S11	25		S15	24	
R 3	C	24	S12	25				
S 5		25	S13	25				

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)
IC1	28	DOOR LEFT WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	28	DOOR RIGHT WIRE AND COWL WIRE (RIGHT KICK PANEL)
BH1	30	FLOOR NO. 3 WIRE AND COWL WIRE (UNDER THE LEFT SCUFF PLATE)
BH2	30	FLOOR NO. 3 WIRE AND COWL WIRE (UNDER THE RIGHT SCUFF PLATE)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	28	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	28	COWL WIRE	B 1	30	COWL WIRE
I 4			B 2		
I 6			B 4		
I 7			B 6		

