


# REMOTE CONTROL MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

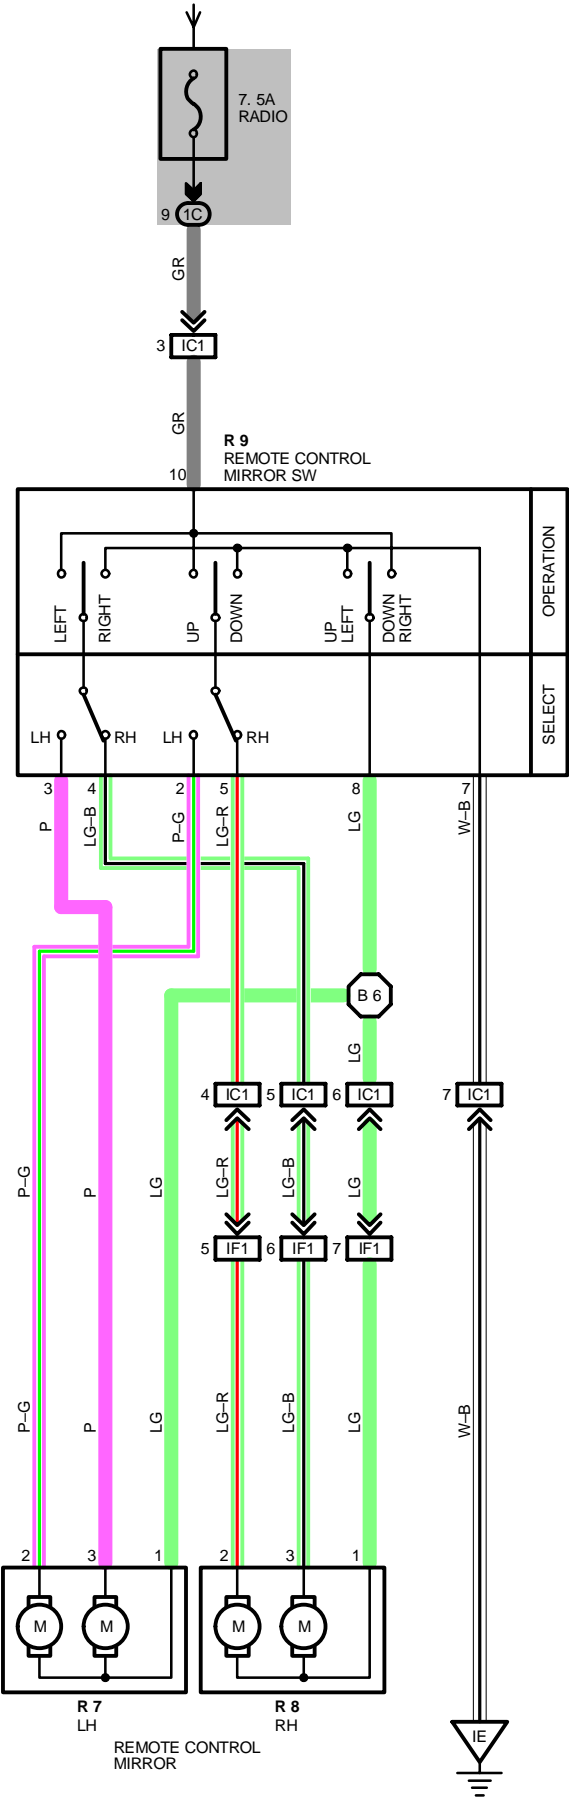

## SERVICE HINTS

### R 9 REMOTE CONTROL MIRROR SW

- 10-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION  
 8-7 : CONTINUITY WITH OPERATION SW AT **UP** OR **LEFT** POSITION  
 10-8 : CONTINUITY WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
R 7	25	R 8	25	R 9	25

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	28	DOOR LEFT WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	28	DOOR RIGHT WIRE AND COWL WIRE (RIGHT KICK PANEL)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	28	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 6	30	DOOR RIGHT WIRE			

R 7, R 8



R 9

