



RELAY LOCATIONS

[Engine Compartment]

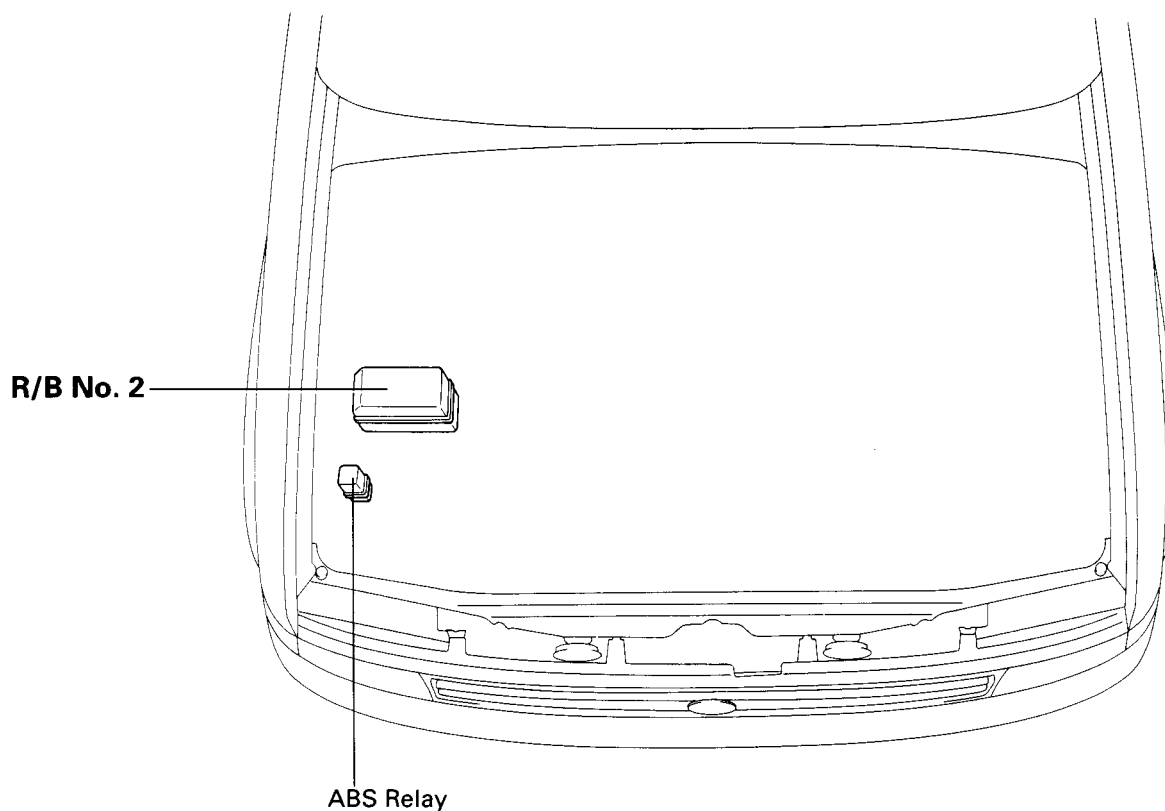


[Instrument Panel]

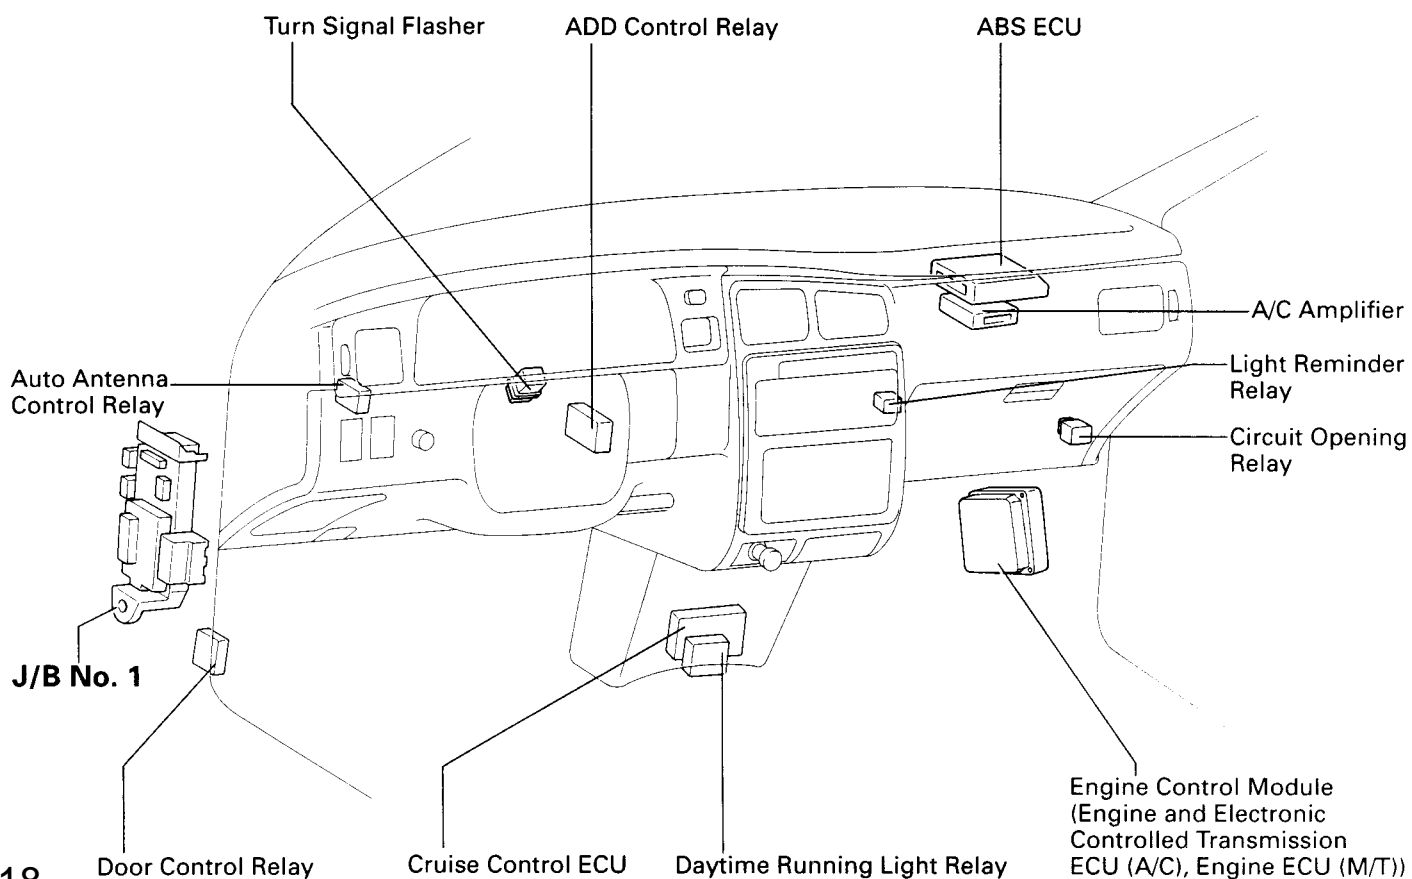


② : R/B No. 2

Engine Compartment Right (See Page 18)

(for USA)

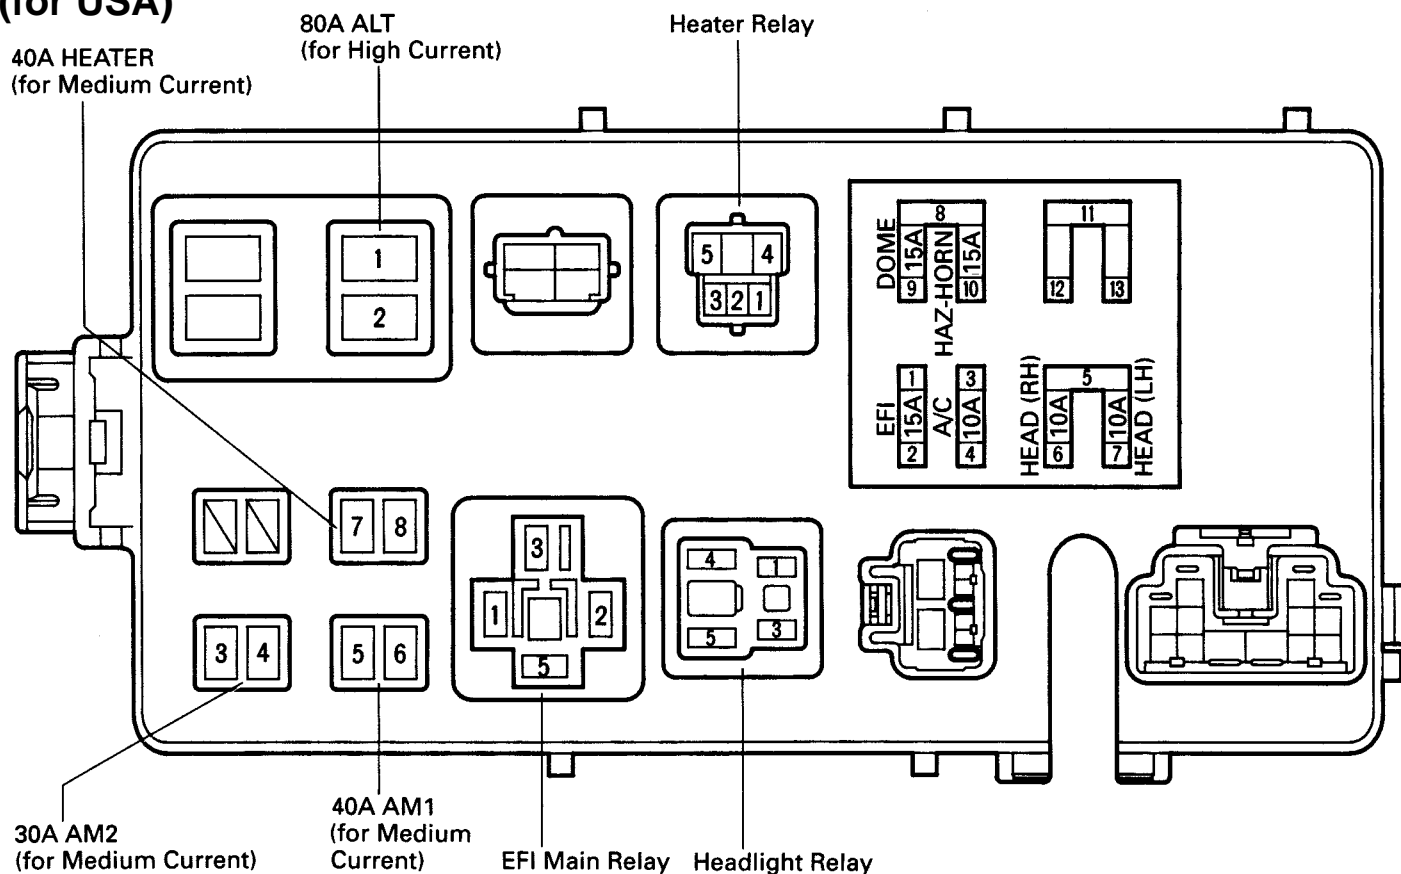


(for CANADA)

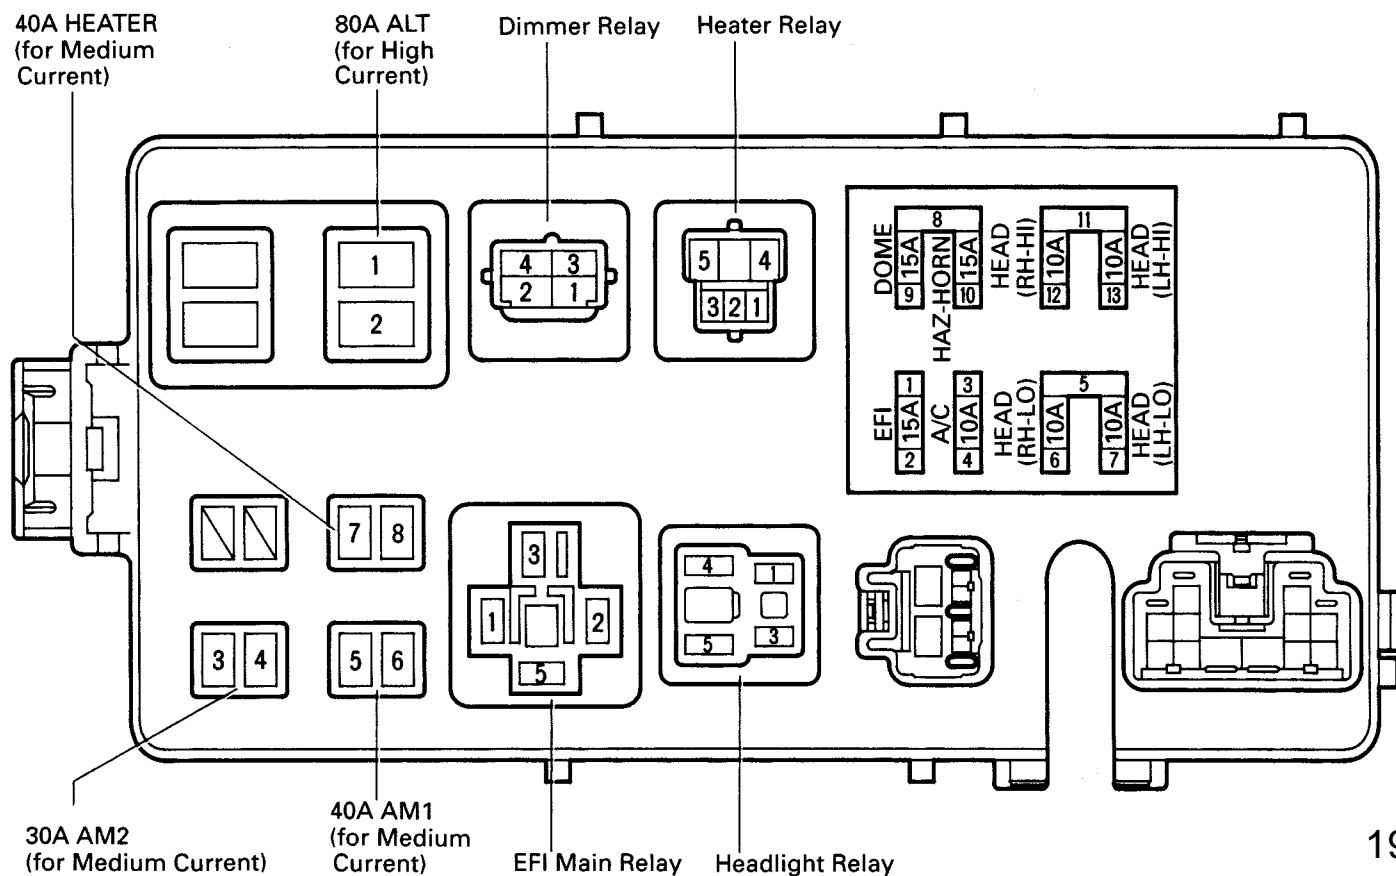


RELAY LOCATIONS

○ : J/B No. 1

Left Kick Panel (See Page 18)

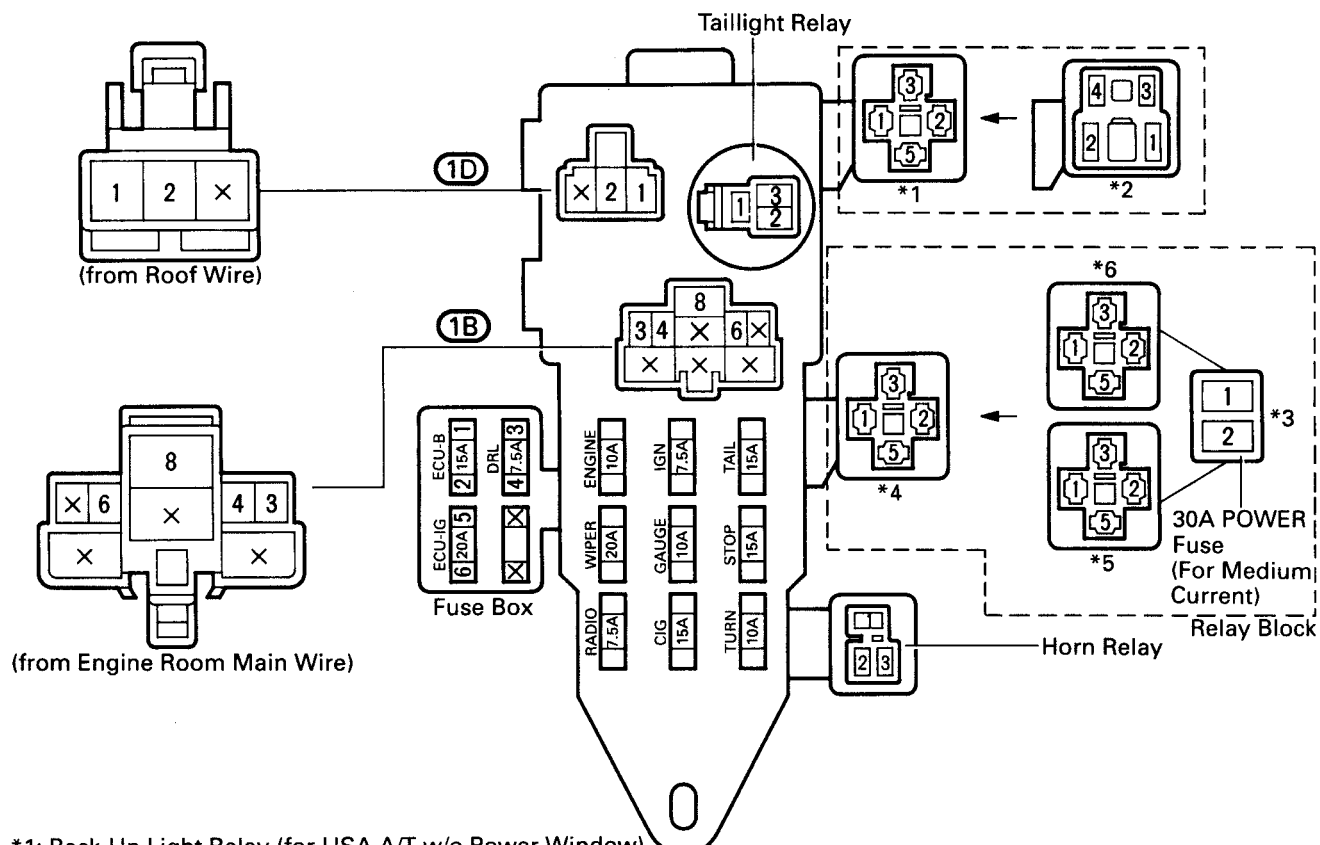

- *1: Back-Up Light Relay (for USA A/T w/o Power Window)
- *2: Daytime Running Light Relay No. 2 (for Canada)
- *3: w/ Power Window and Door Lock System
- *4: Starter Relay (for USA w/o Power Window)
- *5: Back-Up Light Relay (for Canada, USA w/ Power Window)
- *6: Starter Relay (for Canada, USA w/ Power Window)

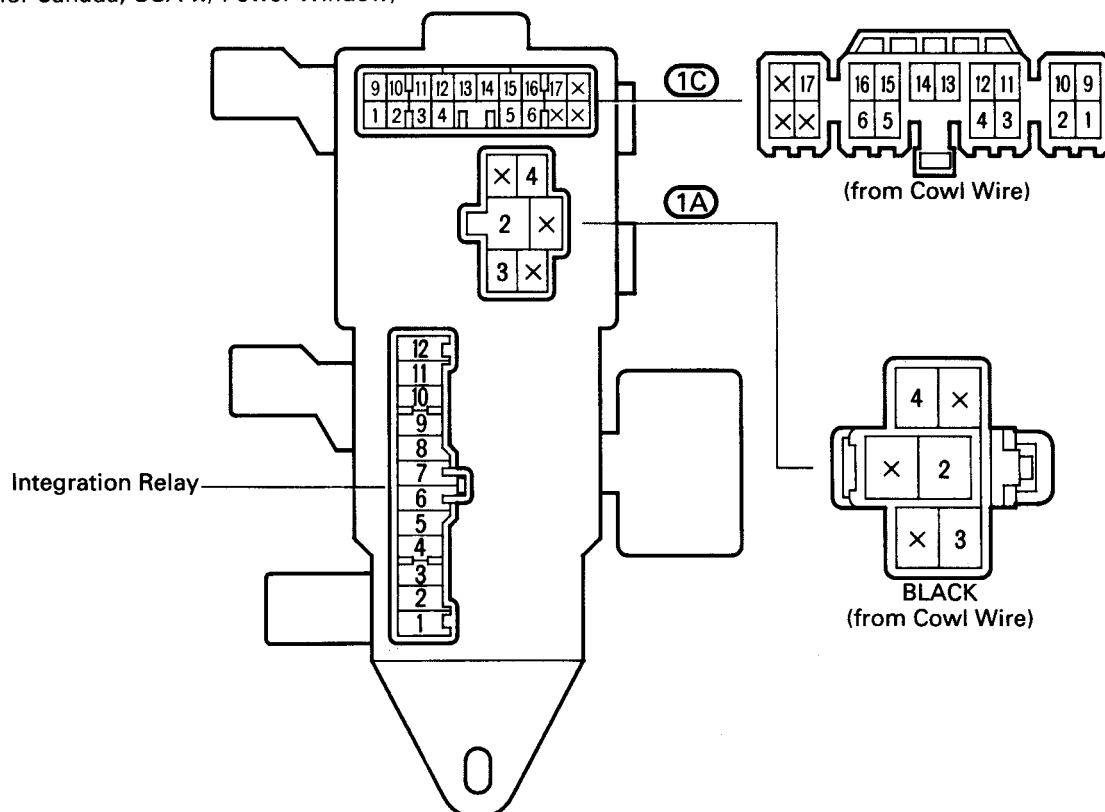

[J/B No. 1 Inner Circuit]

