

# STARTING AND IGNITION

## SERVICE HINTS

### STARTER

POINTS CLOSED WITH NEUTRAL START SW ON (A/T) AND IGNITION SW AT **ST** POSITION

#### C1 COLD START INJECTOR

2-1 : APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

#### C6 CLUTCH START CANCEL SW (M/T)

1-2 : CLOSED WITH IGNITION SW ON AND CANCEL SW ON

#### C7 CLUTCH START SW

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

#### I10 IGNITION SW

4-1, 8-7 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

4-6 : CLOSED WITH IGNITION SW AT **ST** POSITION

#### P1 PARK/NEUTRAL POSITION (NEUTRAL START SW)

6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

#### R10, S7 STARTER RELAY

5-3 : CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT **ST** POSITION

## : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	<a href="#">22</a>	E 6	<a href="#">24</a>	R10	<a href="#">24</a>
C 6	<a href="#">24</a>	I 1	<a href="#">23</a>	S 2	<a href="#">23</a>
C 7	<a href="#">24</a>	I 2	<a href="#">23</a>	S 3	A <a href="#">23</a>
C13	<a href="#">24</a>	I10	<a href="#">24</a>	S 4	B <a href="#">23</a>
D 1	<a href="#">22</a>	N 1	<a href="#">23</a>	S 7	<a href="#">24</a>
D 7	<a href="#">24</a>	P 1	<a href="#">23</a>		

## : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	<a href="#">19</a>	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	<a href="#">20</a>	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1B	<a href="#">20</a>	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	<a href="#">26</a>	COWL WIRE ENGINE ROOM MAIN WIRE (INNER THE R/B NO.2)
IA3	<a href="#">28</a>	ENGINE ROOM WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	<a href="#">28</a>	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)

## : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	<a href="#">26</a>	LEFT FENDER
ED	<a href="#">26</a>	CAMSHAFT BEARING CAP
IE	<a href="#">28</a>	LEFT KICK PANEL

## : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 9	<a href="#">26</a>	ENGINE WIRE	I 7	<a href="#">28</a>	COWL WIRE
E13			I 9		
I 1	<a href="#">28</a>	ENGINE WIRE	I12		
I 2	<a href="#">28</a>	COWL WIRE			

