


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

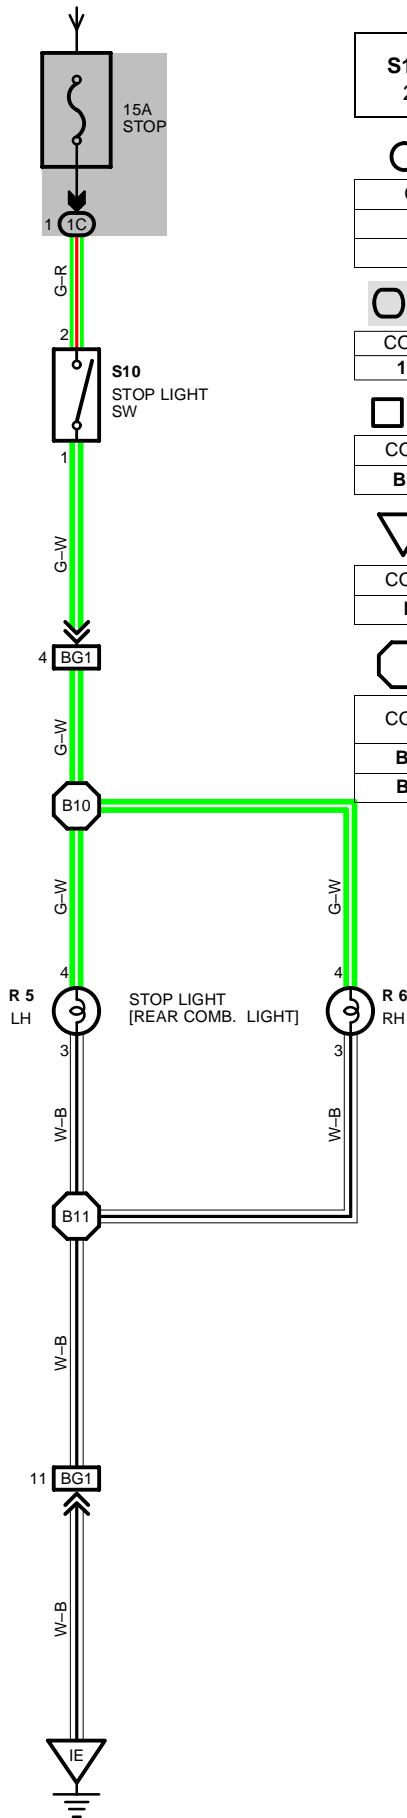

SERVICE HINTS

S10 STOP LIGHT SW
2-1: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| R 5 | 25 | S10 | 24 | | |
| R 6 | 25 | | | | |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|--|
| 1 C | 20 | COWL WIRE AND J/B NO.1 (LEFT KICK PANEL) |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|--|
| BG1 | 30 | FRAME WIRE AND COWL WIRE (UNDER PASSENGER'S SEAT) |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| IE | 28 | LEFT KICK PANEL |

○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B10 | 30 | FRAME WIRE | | | |
| B11 | | | | | |

