


TAILLIGHT AND ILLUMINATION

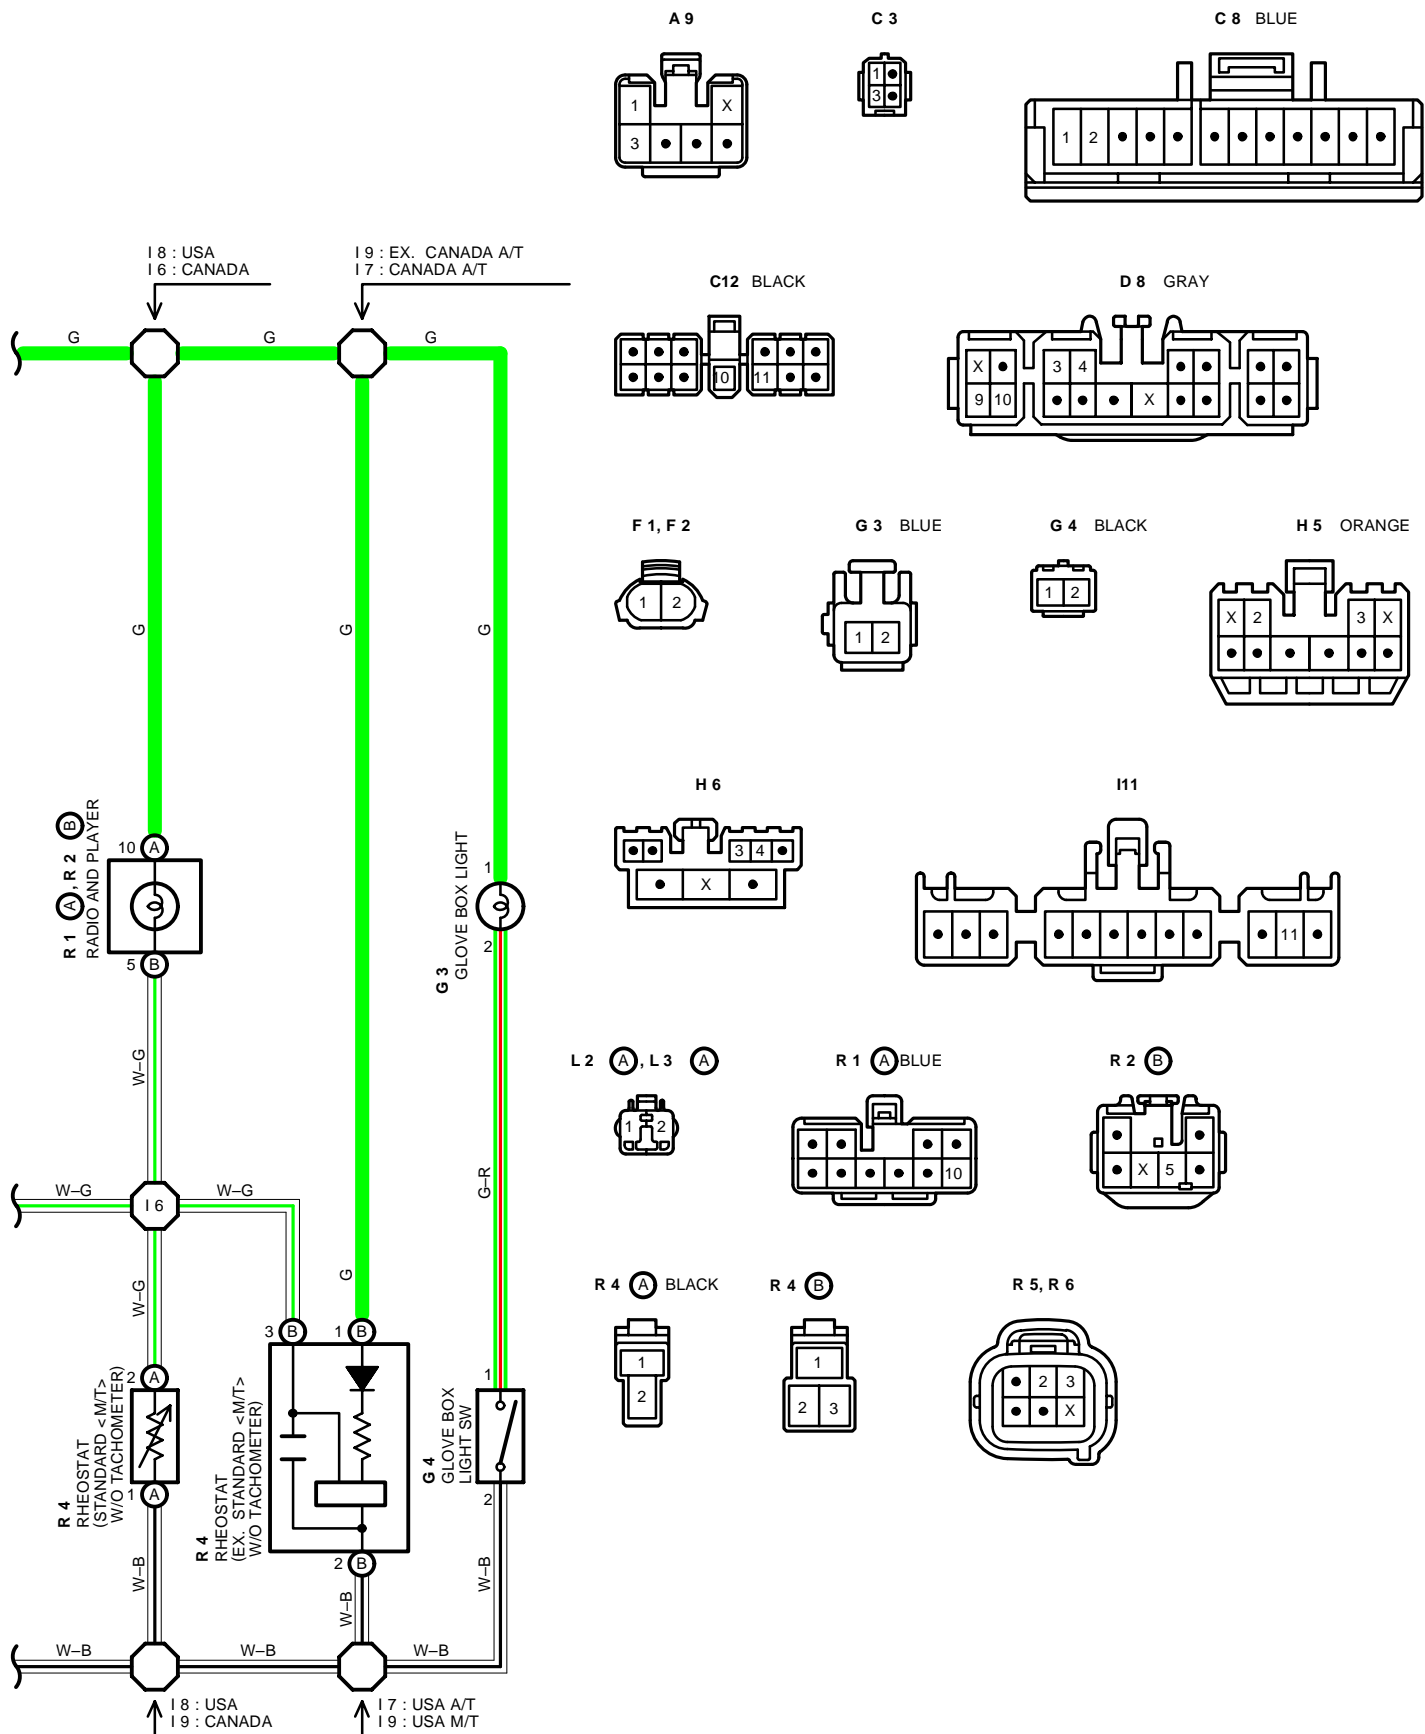

SERVICE HINTS

C12 LIGHT CONTROL SW [COMB. SW]

10–11: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

TAILLIGHT RELAY

2–3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 9	24	G 3	24	R 1	A 24
C 3	24	G 4	24	R 2	B 24
C 8	24	H 5	24	R 4	A 24
C12	24	H 6	24		B 24
D 8	24	I11	24	R 5	25
F 1	22	L 2	25	R 6	25
F 2	22	L 3	25		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BG1	30	FRAME WIRE AND COWL WIRE (UNDER THE PASSENGER'S SEAT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	26	LEFT FENDER
IE	28	LEFT KICK PANEL

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	28	COWL WIRE	I 8	28	COWL WIRE
I 3			I 9		
I 4			I12		
I 6			B10	30	FRAME WIRE
I 7			B11		