


## 76

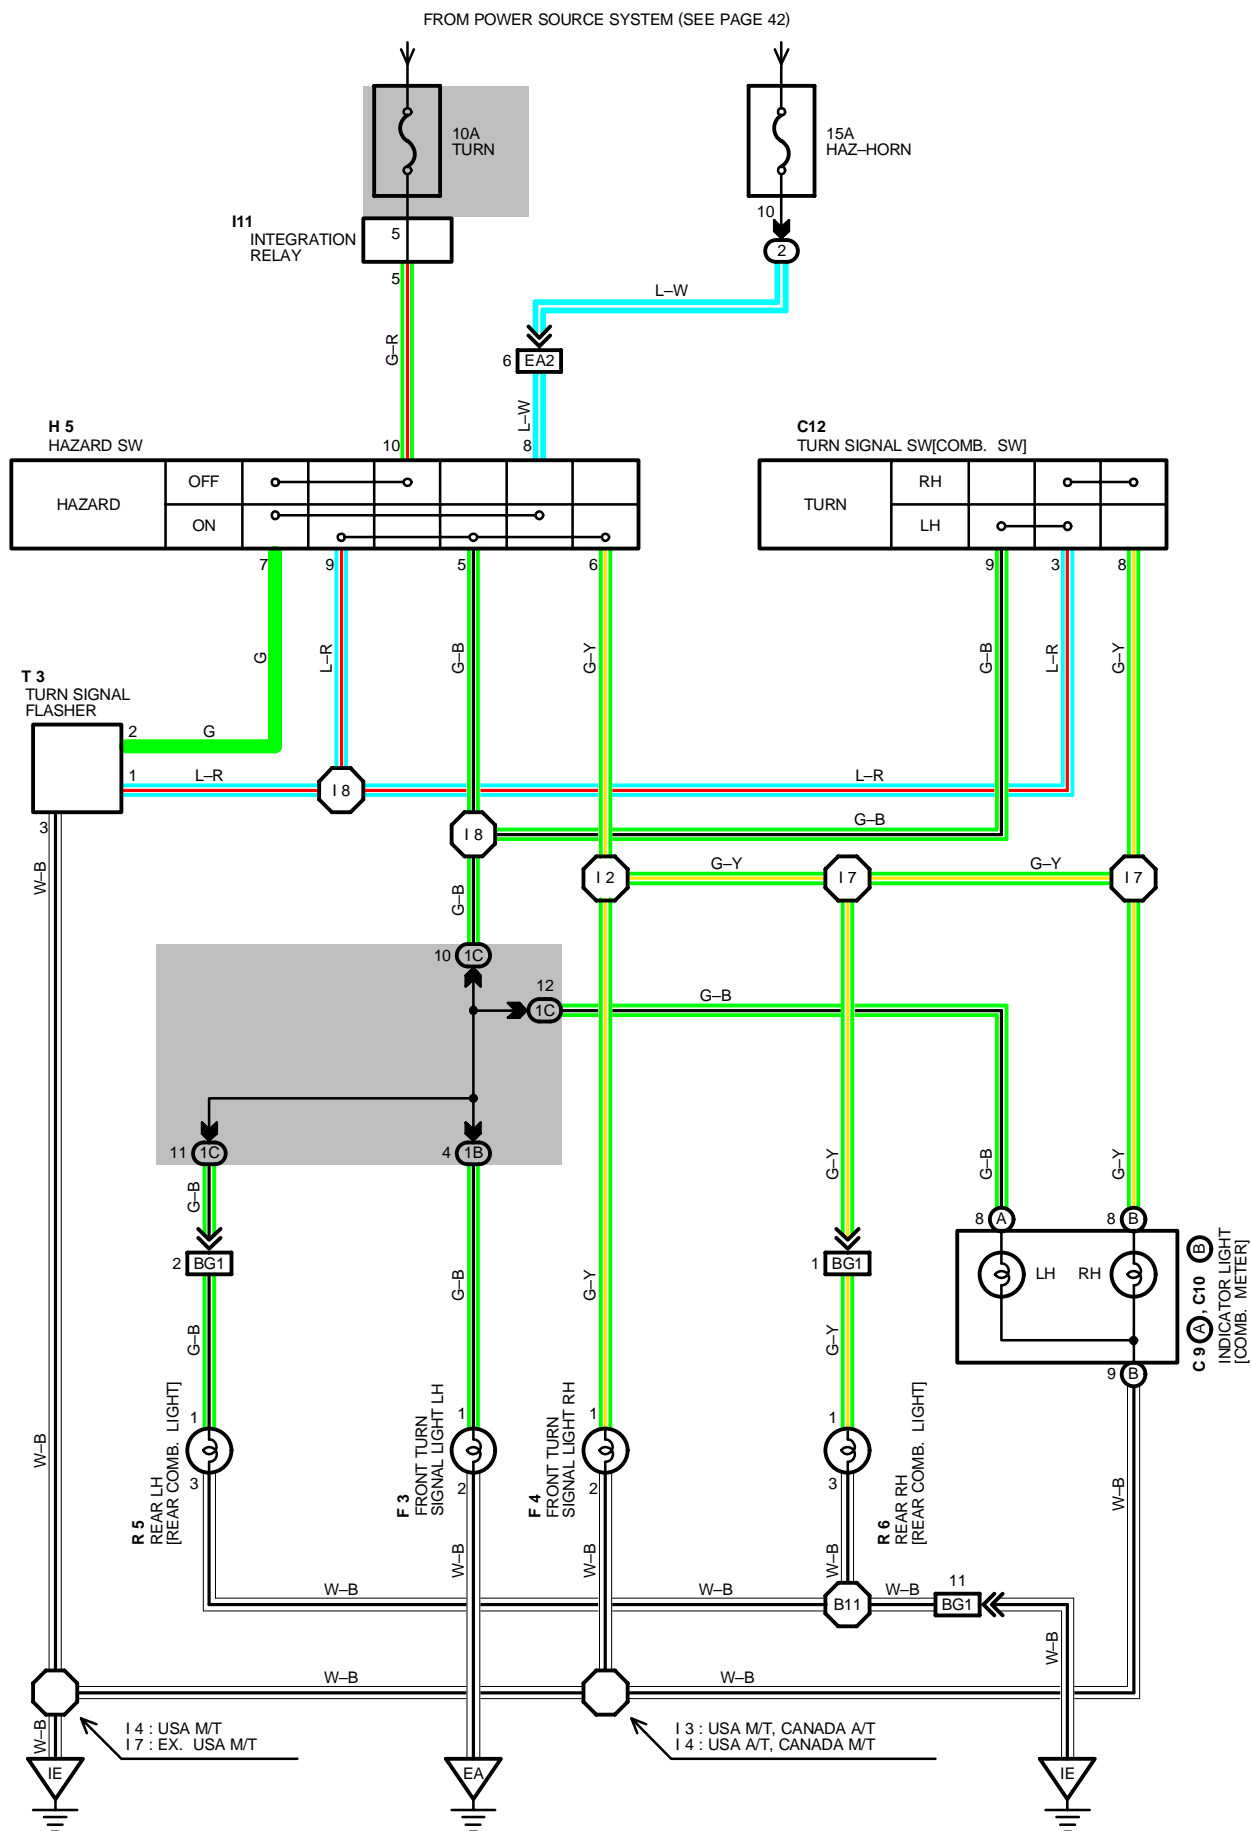

## SERVICE HINTS

### T 3 TURN SIGNAL FLASHER

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON

1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON

### ○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 9	A	24	F 4	22	R 6	25
C10	B	24	H 5	24	T 3	24
C12		24	I11	24		
F 3		22	R 5	25		

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (INNER THE R/B NO. 2)
BG1	30	FRAME WIRE AND COWL WIRE (UNDER THE PASSENGER'S SEAT)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	26	LEFT FENDER
IE	28	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2			I 7	28	COWL WIRE
I 3	28	COWL WIRE	I 8		
I 4			B11	30	FRAME WIRE

