


STARTING

*1 : (A/T OF 22R-E)
 *2 : (3VZ-E, M/T OF 22R-E)

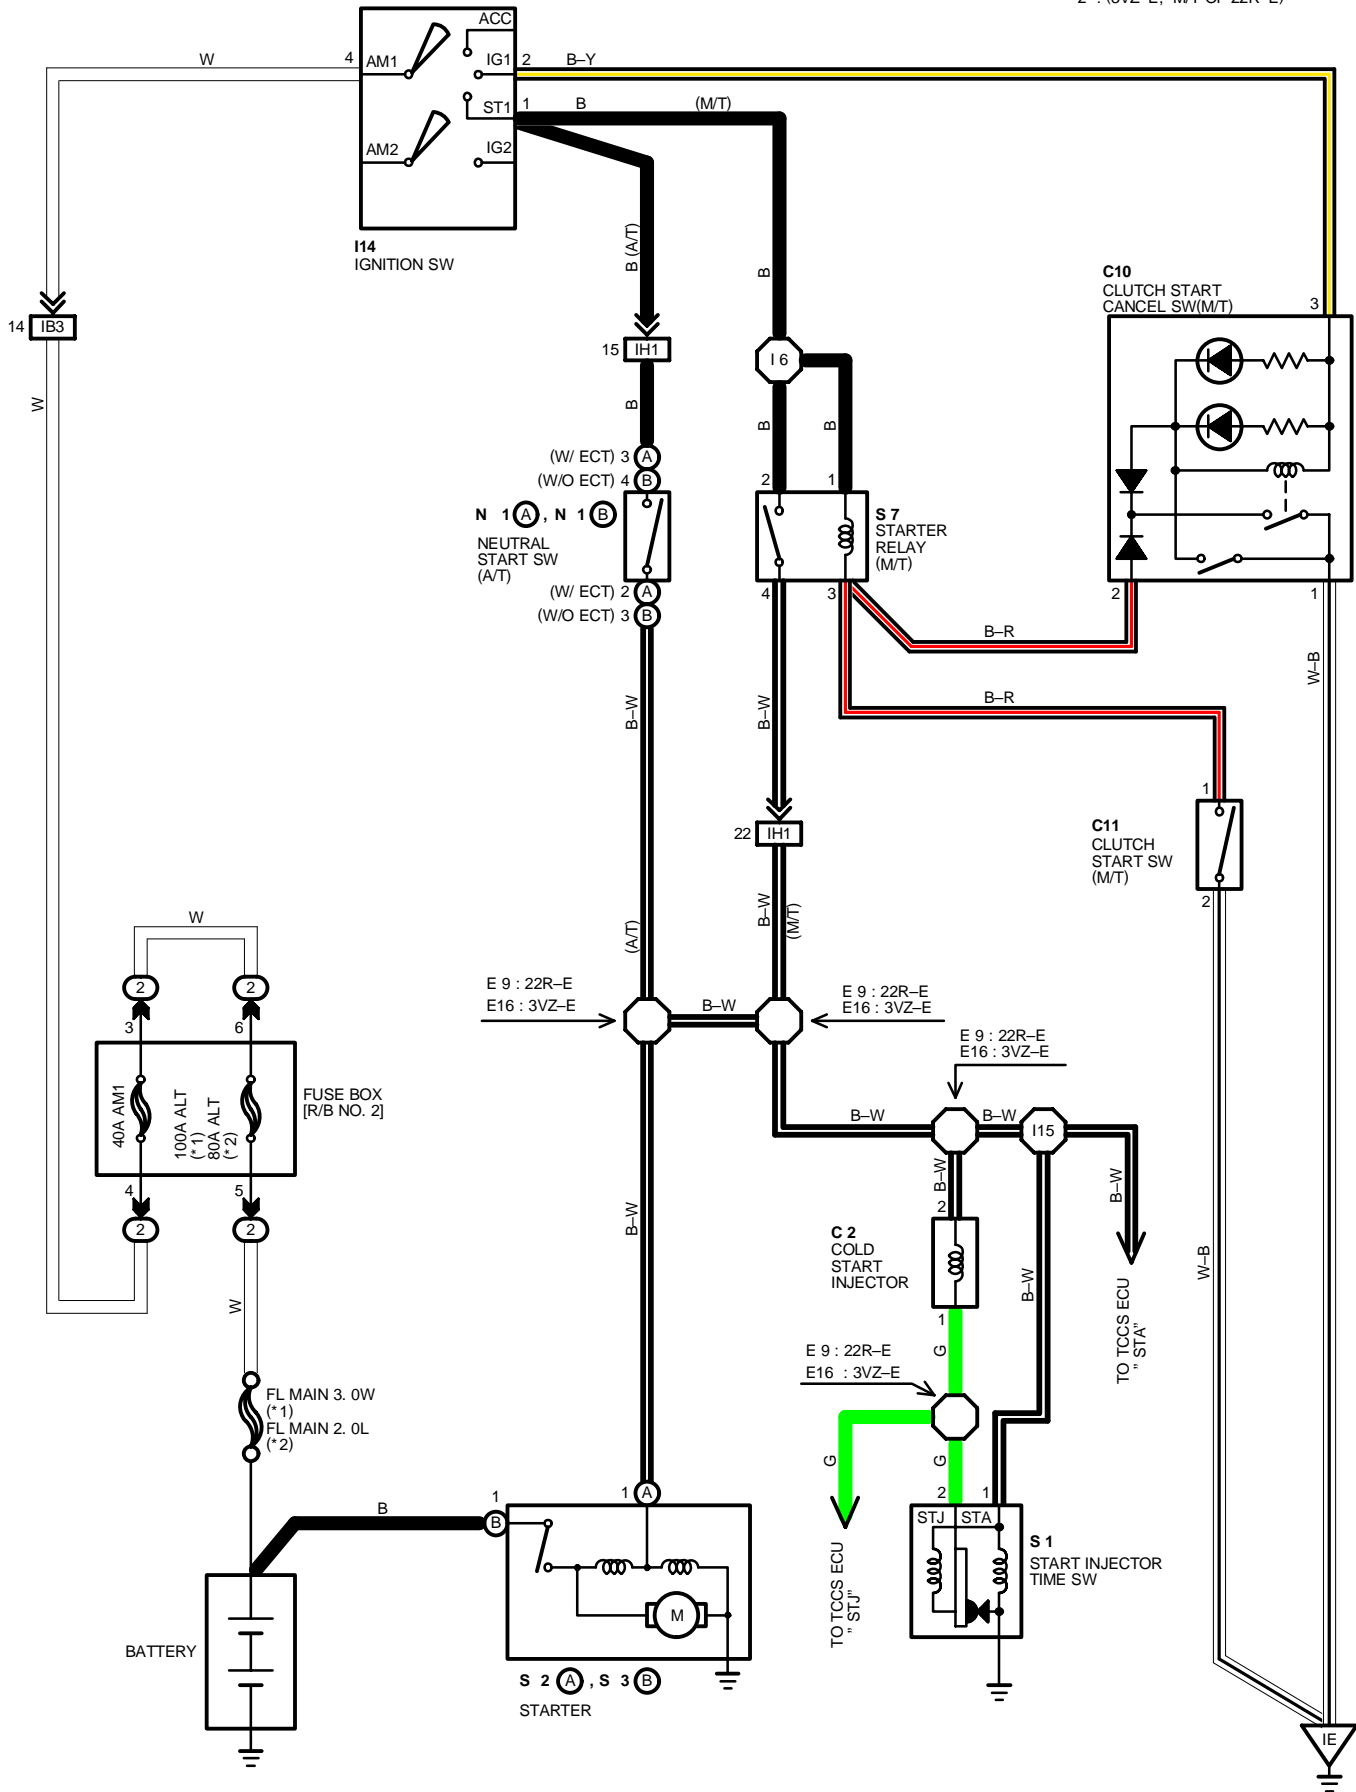

SERVICE HINTS

STARTER

POINTS CLOSED WITH NEUTRAL START SW ON AND IGNITION SW AT **ST** POSITION (A/T)

POINTS CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT **ST** POSITION (M/T)

C 2 COLD START INJECTOR

2-1 : APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

C10 CLUTCH START CANCEL SW (M/T)

1-2 : CLOSED WITH IGNITION SW ON AND CANCEL SW ON

C11 CLUTCH START SW (M/T)

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

I14 IGNITION SW

4-2 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

4-1 : CLOSED WITH IGNITION SW AT **ST** POSITION

N1 NEUTRAL START SW (A/T)

(A) 3 - (A) 2, (B) 4 - (B) 3: CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

S 7 STARTER RELAY (M/T)

2-4: CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT **ST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 2	22 (3VZ-E), 23 (22R-E)	N1	A 22 (3VZ-E), 23 (22R-E)	S 3	B 22 (3VZ-E), 23 (22R-E)
C10	24		B 23	S 7	24
C11	24	S 1	22 (3VZ-E), 23 (22R-E)		
I 14	24		S 2	A 22 (3VZ-E), 23 (22R-E)	

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB3	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IH1	30	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	30	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 9	28 (22R-E)	ENGINE WIRE	I 6	30	COWL WIRE
E16	26 (3VZ-E)		I 15	30	ENGINE WIRE

