

34RUNNER

(Cont. next page)


For the connectors of the parts listed below, see the last page of this system

\*Engine Control Module  
\*Junction Connector

Engine Control(5VZ-FE)



Power Source

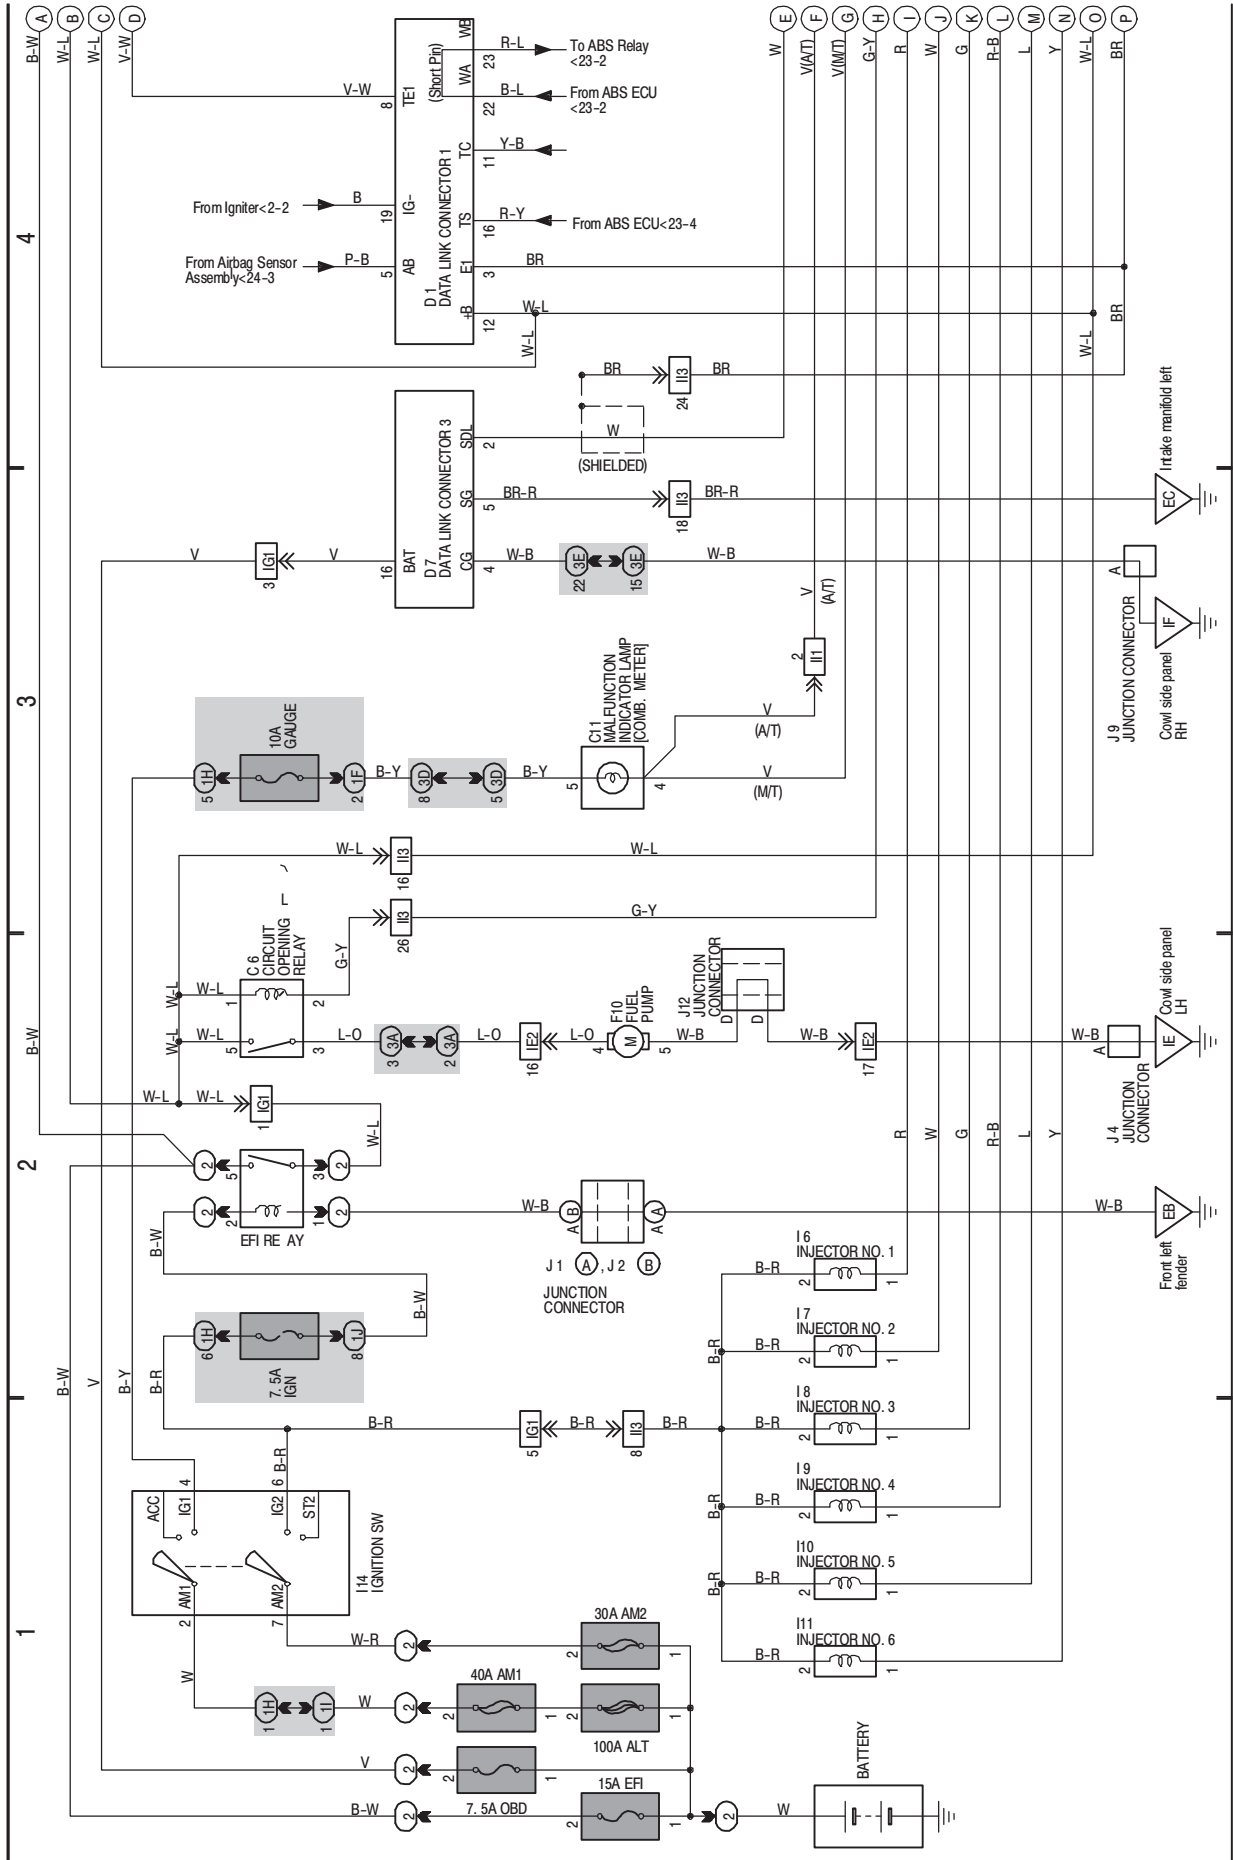

# K OVERALL ELECTRICAL WIRING DIAGRAM

34RUNNER(Cont' d)

(Cont. next page)

For the connectors of the parts listed below, see the next page.  
 \*Engine Control Module  
 †Junction Connector



## Engine Control(5VZ-FE)

