

SERVICE HINTS

G1 (A), G2 (B) GENERATOR

- (B) 1-GROUND : 13.9- 15.1 volts with engine running at 2000 rpm and 25°C (77°F)
 13.5- 14.3 volts with engine running at 2000 rpm and 115°C (239°F)
- (A) 1-GROUND : 0- 4 volts with ignition SW at ON position and engine not running

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C25		30	G2	B	28	J2	B	29
G1	A	28	J1	A	29			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	36	Engine No.2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I9	40	Cowl Wire			