


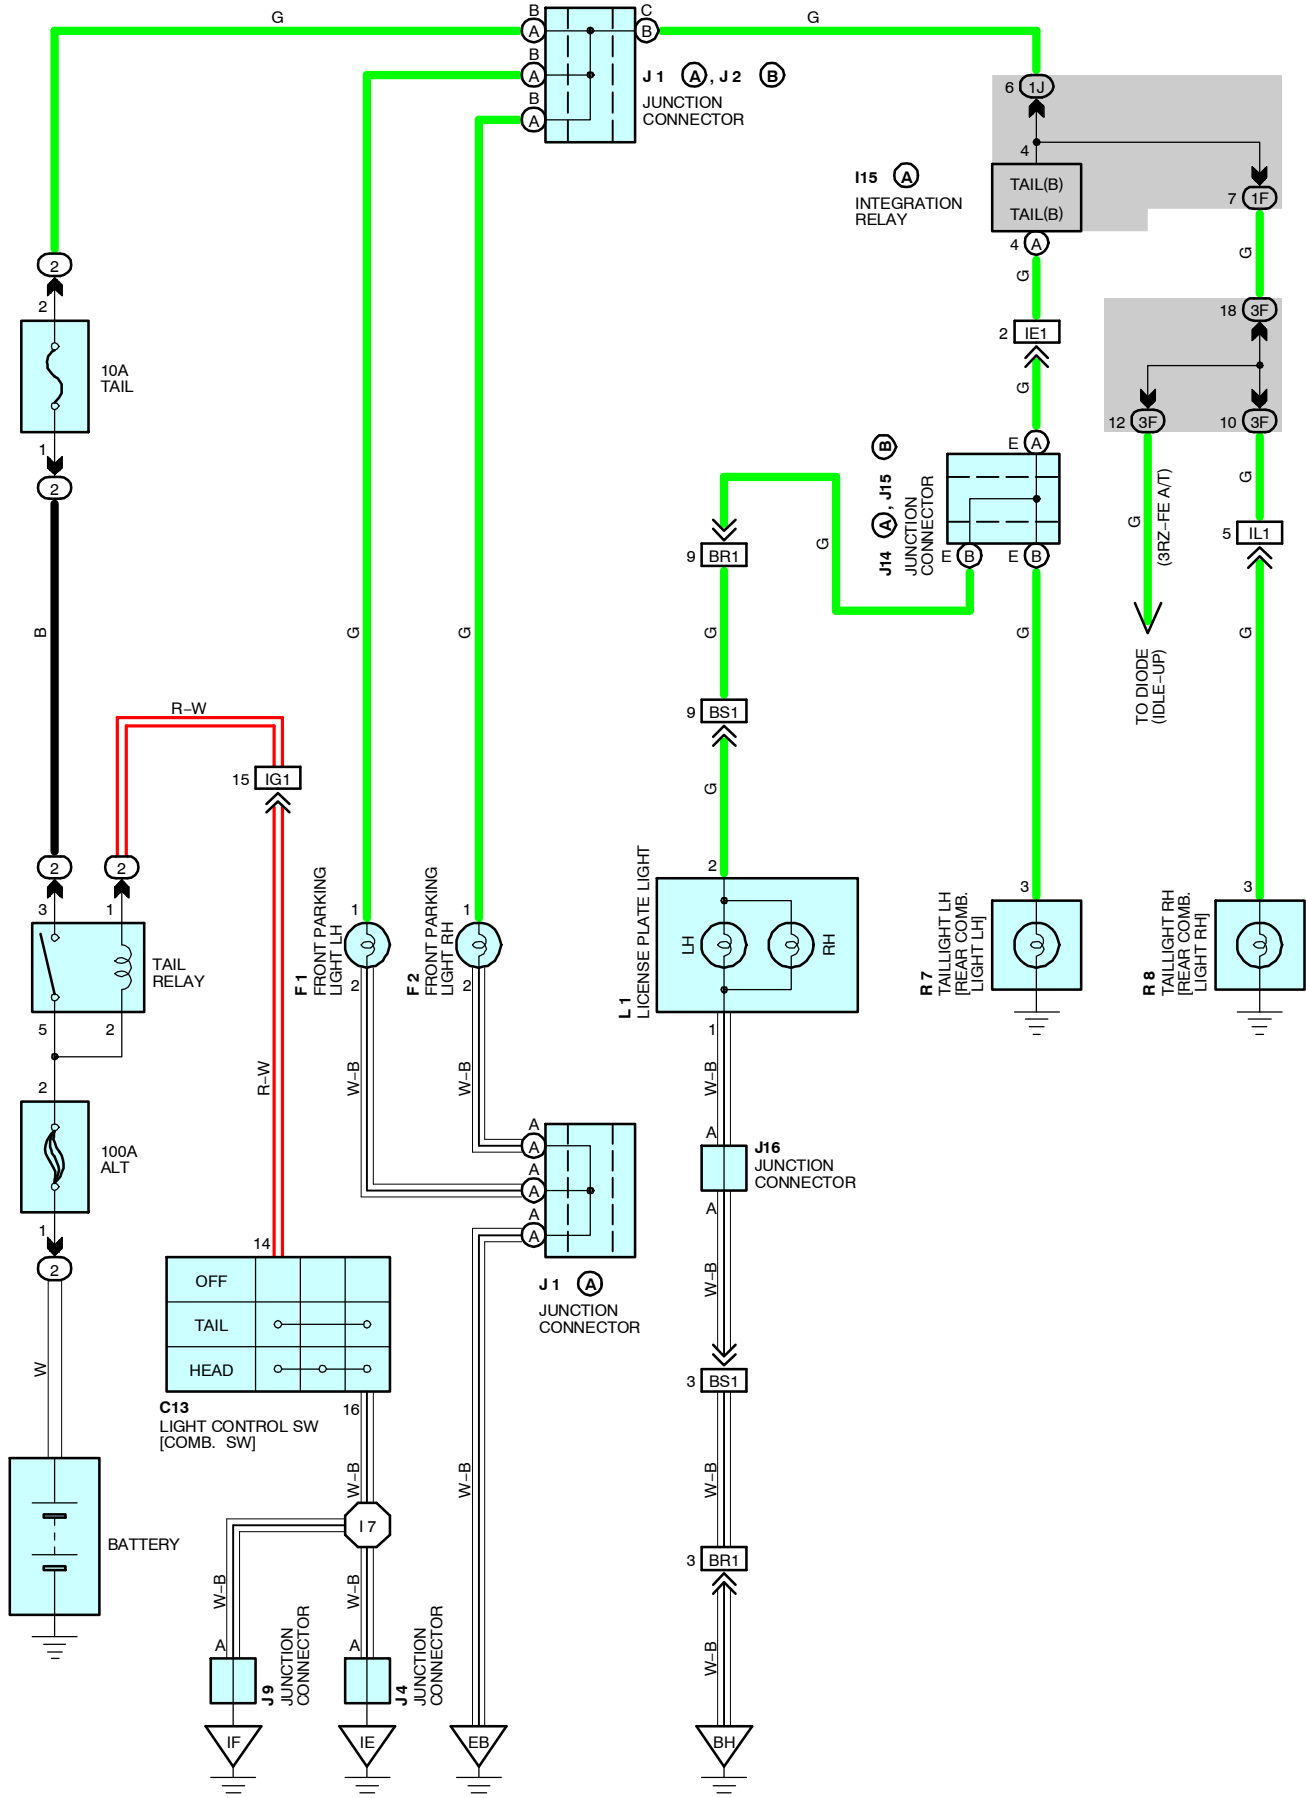

TAILLIGHT



SERVICE HINTS

C13 LIGHT CONTROL SW [COMB. SW]

14-16 : CLOSED WITH LIGHT CONTROL SW AT TAIL OR HEAD POSITION

TAIL RELAY

5-3 : CLOSED WITH LIGHT CONTROL SW AT TAIL OR HEAD POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	30	J2 B	27 (5VZ-FE), 29 (3RZ-FE)	J16	32
F1	26 (5VZ-FE), 28 (3RZ-FE)	J4	31	L1	32
F2	26 (5VZ-FE), 28 (3RZ-FE)	J9	31	R7	33
I15 A	31	J14 A	32	R8	33
J1 A	27 (5VZ-FE), 29 (3RZ-FE)	J15 B	32		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1F	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3F	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IL1	40	COWL WIRE AND FLOOR WIRE (RIGHT KICK PANEL)
BR1	42	BACK DOOR NO.1 WIRE AND FLOOR NO.2 WIRE (LEFT REAR SIDE OF ROOF)
BS1	42	BACK DOOR NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (5VZ-FE) 38 (3RZ-FE)	FRONT LEFT FENDER
IE	40	COWL SIDE PANEL LH
IF	40	COWL SIDE PANEL RH
BH	42	LEFT QUARTER PANEL INNER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	40	COWL WIRE			

