


TERMINALS OF ECU

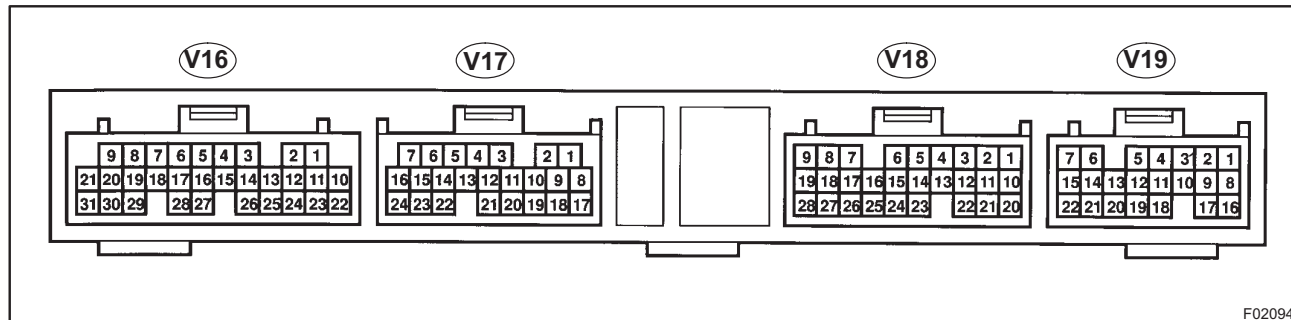

F02094

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
SA1 (V16 - 2) - GND (V16 - 6, 31, V19 - 8, 16)	B-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SA2 (V16 - 3) - GND (V16 - 6, 31, V19 - 8, 16)	W-L ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SA3 (V16 - 4) - GND (V16 - 6, 31, V19 - 8, 16)	W-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
STR (V16 - 5) - GND (V16 - 6, 31, V19 - 8, 16)	Y-G ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFLR (V16 - 7) - GND (V16 - 6, 31, V19 - 8, 16)	Y-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRH (V16 - 8) - GND (V16 - 6, 31, V19 - 8, 16)	G-Y ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRR (V16 - 9) - GND (V16 - 6, 31, V19 - 8, 16)	LG ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
VCM (V16 - 10) - GND (V16 - 6, 31, V19 - 8, 16)	B ↔ W-B	IG switch ON	4.5 - 5.5
PH (V16 - 11) - GND (V16 - 6, 31, V19 - 8, 16)	LG-B ↔ W-B	IG switch ON, pressure switch (PH) ON	Below 0.9
		IG switch ON, pressure switch (PH) OFF	5 - 8
FR+ (V16 - 14) - FR- (V16 - 13)	LG ↔ L	IG switch ON, right front wheel is turned slowly	Pulse generation
FL+ (V16 - 16) - FL- (V16 - 15)	W ↔ R	IG switch ON, left front wheel is turned slowly	Pulse generation
SR (V16 - 19) - R1+ (V16 - 1)	G-B ↔ R-B	IG switch ON, ABS warning light OFF	10 - 14
SFLH (V16 - 21) - GND (V16 - 6, 31, V19 - 8, 16)	L-B ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
PMC (V16 - 22) - E2 (V16 - 23)	W ↔ R	IG switch ON, stop light switch released	0.3 - 0.7
MSS (V16 - 24) - GND (V16 - 6, 31, V19 - 8, 16)	BR ↔ W-B	IG switch OFF	Continuity
MMT (V16 - 27) - GND (V16 - 6, 31, V19 - 8, 16)	P-B ↔ W-B	IG switch ON, (Motor relay is OFF)	Below 1.5
MT+ (V16 - 28) - MT- (V16 - 18)	GR ↔ O	IG switch ON, (Motor relay is OFF)	Below 1.5
MR1 (V16 - 29) - R1+ (V16 - 1)	L-B ↔ R-B	IG switch ON, hydraulic brake booster pump motor running	10 - 14
MR2 (V17 - 1) - R2+ (V17 - 2)	P-B ↔ Y-B	IG switch ON, hydraulic brake booster pump motor running	10 - 14