



PARKING BRAKE LEVER ON-VEHICLE INSPECTION

BR07M-02

1. CHECK THAT PARKING BRAKE LEVER TRAVEL IS CORRECT

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44.1 lbf):
7 - 9 clicks**

If incorrect, adjust the parking brake.

2. IF NECESSARY, ADJUST PARKING BRAKE LEVER TRAVEL

HINT:

Before adjusting the parking brake lever travel, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment, see page [BR-25](#).

- Remove the console box.
- Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
- Tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- Install the console box.

