


# STARTER RELAY INSPECTION

ST01R-01

## 1. REMOVE STARTER RELAY

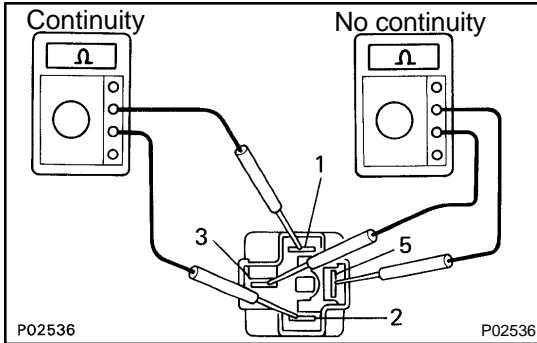


## 2. INSPECT STARTER RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there continuity, replace the relay.

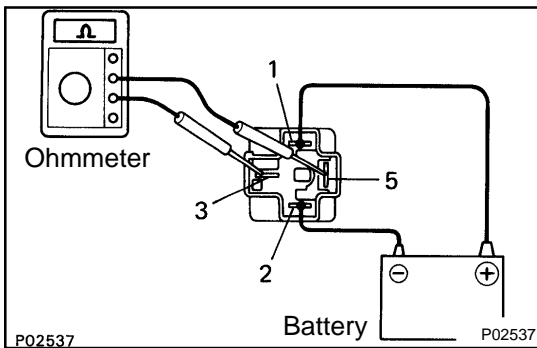

## 3. INSPECT STARTER RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Check that there is continuity between terminals 3 and 5. If operation is not as described, replace the relay.

## 4. REINSTALL STARTER RELAY