



## REMOVAL

1. **DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR**
2. **DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR**

### HINT:

Put a suitable container or shop towel under the pressure regulator.

3. **REMOVE FUEL PRESSURE REGULATOR**

(a) Remove the 2 bolts and fuel pressure regulator.

**Torque: 8.0 N·m (80 kgf·cm, 69 in·lbf)**

(b) Remove the O-ring.

### HINT:

At the time of installation please refer to the following items.  
Install the pressure regulator with a new gasket.