





4WD (W/O 2-4 SELECT SW)


A10 GRAY

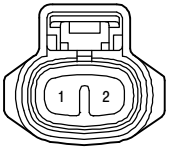


A17

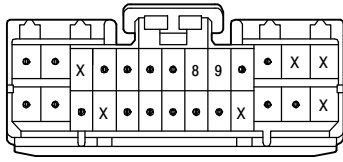


A18

 


C10 BROWN

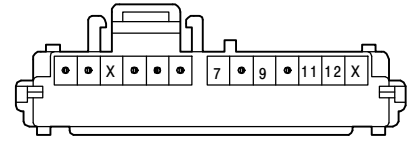


D3 BLUE

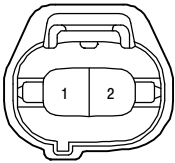


D4 BLUE

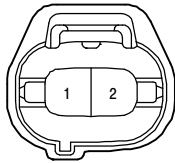


D5 GRAY

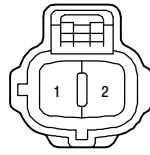


D29

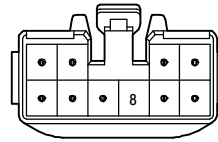


E5 (A)

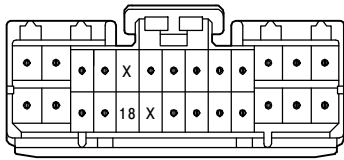


(5VZ-FE M/T) E8 (D)

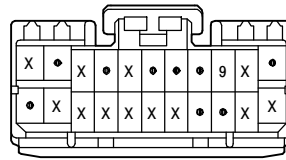


(3RZ-FE A/T) E8 (D)

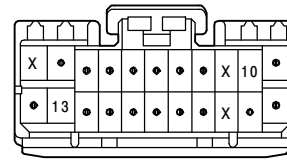


(3RZ-FE M/T) E8 (D)

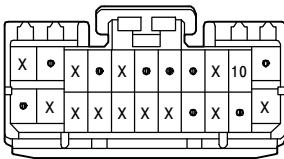


E9 (E)

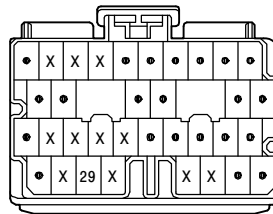

E12 (H)

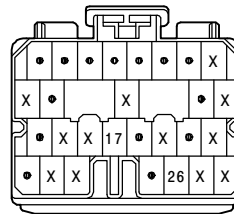


J1 (A), J2 (B) GRAY

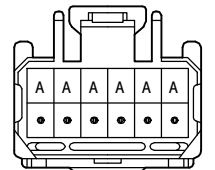


(HINT : SEE PAGE 7)

J7 (A), J8 (B) BLACK

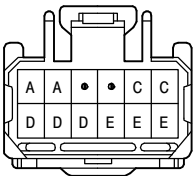


(HINT : SEE PAGE 7)

J9

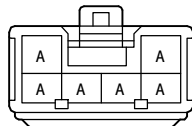


(HINT : SEE PAGE 7)


P1 GRAY

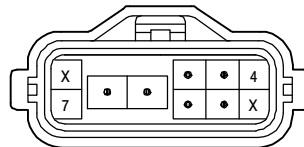

V4 BROWN

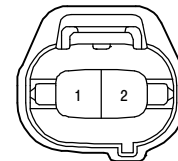


V5 BLUE

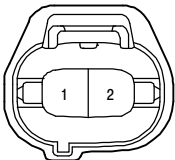



4WD (w/o 2-4 SELECT SW)

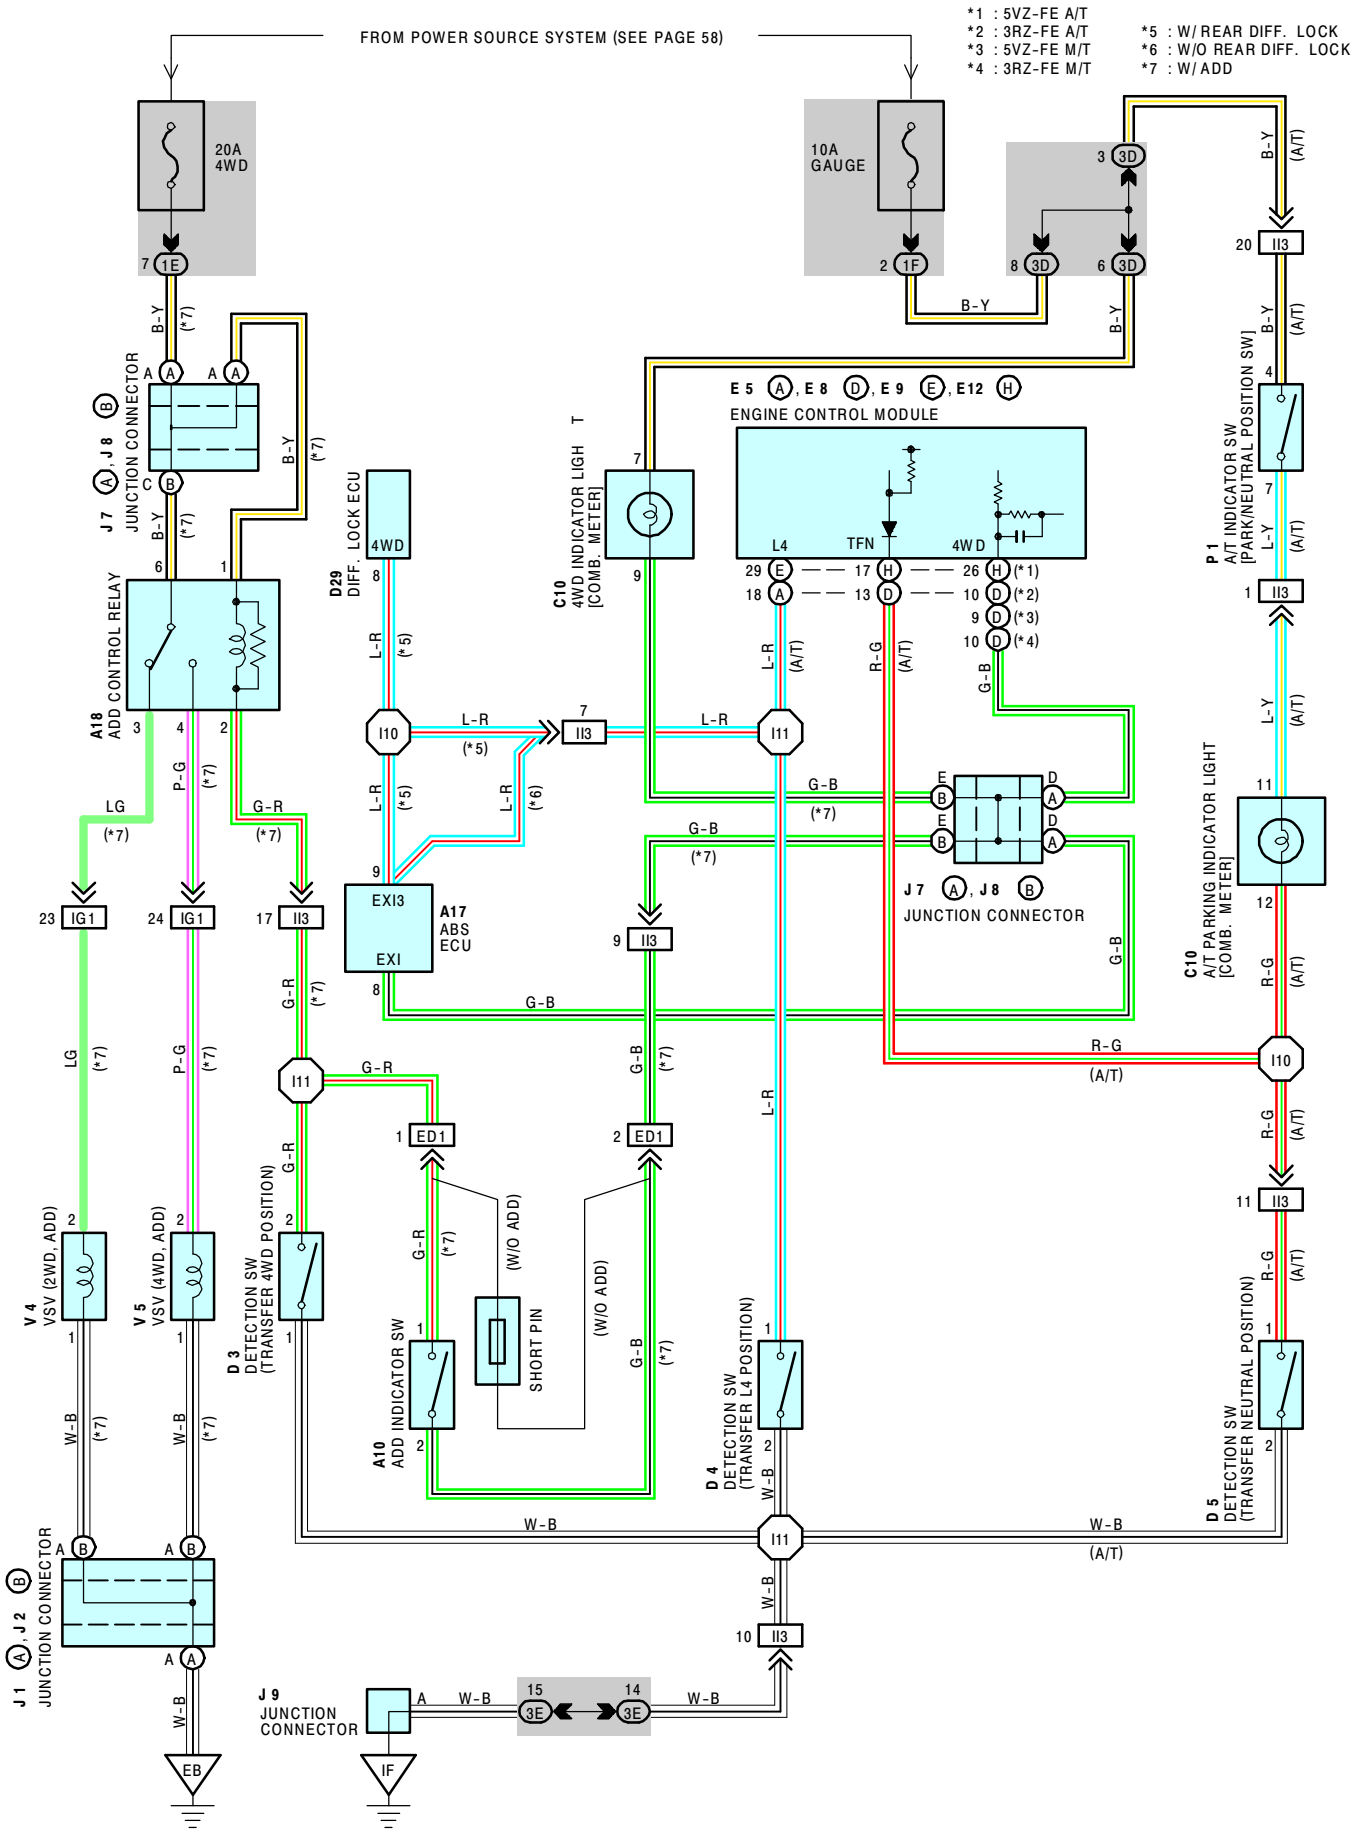

SERVICE HINTS

P 1 A/T INDICATOR SW (PARK/NEUTRAL POSITION SW)

4-7: CLOSED WITH A/T SHIFT POSITION AT "P" POSITION

D 5 DETECTION SW (TRANSFER NEUTRAL POSITION)

1-2: CLOSED WITH TRANSFER POSITION AT NEUTRAL POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A10	26 (5VZ-FE), 28 (3RZ-FE)	D29	31	J 7	A 31
A17	30	E 5	A 31	J 8	B 31
A18	30	E 8	D 31	J 9	31
C10	30	E 9	E 31	P 1	27 (5VZ-FE), 29 (3RZ-FE)
D 3	26 (5VZ-FE), 28 (3RZ-FE)	E12	H 31	V 4	27 (5VZ-FE), 29 (3RZ-FE)
D 4	26 (5VZ-FE), 28 (3RZ-FE)	J 1	A 27 (5VZ-FE), 29 (3RZ-FE)	V 5	27 (5VZ-FE), 29 (3RZ-FE)
D 5	26 (5VZ-FE), 28 (3RZ-FE)	J 2	B 27 (5VZ-FE), 29 (3RZ-FE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IE	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
IF		
3D	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ED1	36 (5VZ-FE)	ENGINE WIRE AND FRONT DIFFERENTIAL WIRE (NEAR THE FRONT DIFFERENTIAL)
	39 (3RZ-FE)	ENGINE WIRE AND FRONT DIFFERENTIAL WIRE (NEAR THE STARTER)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
I13	40	ENGINE WIRE AND COWL WIRE (ON THE GLOVE BOX)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (5VZ-FE)	FRONT LEFT FENDER
	39 (3RZ-FE)	
IF	40	COWL SIDE PANEL RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	40	COWL WIRE	I11	40	ENGINE WIRE