BE06X–01

CIRCUIT

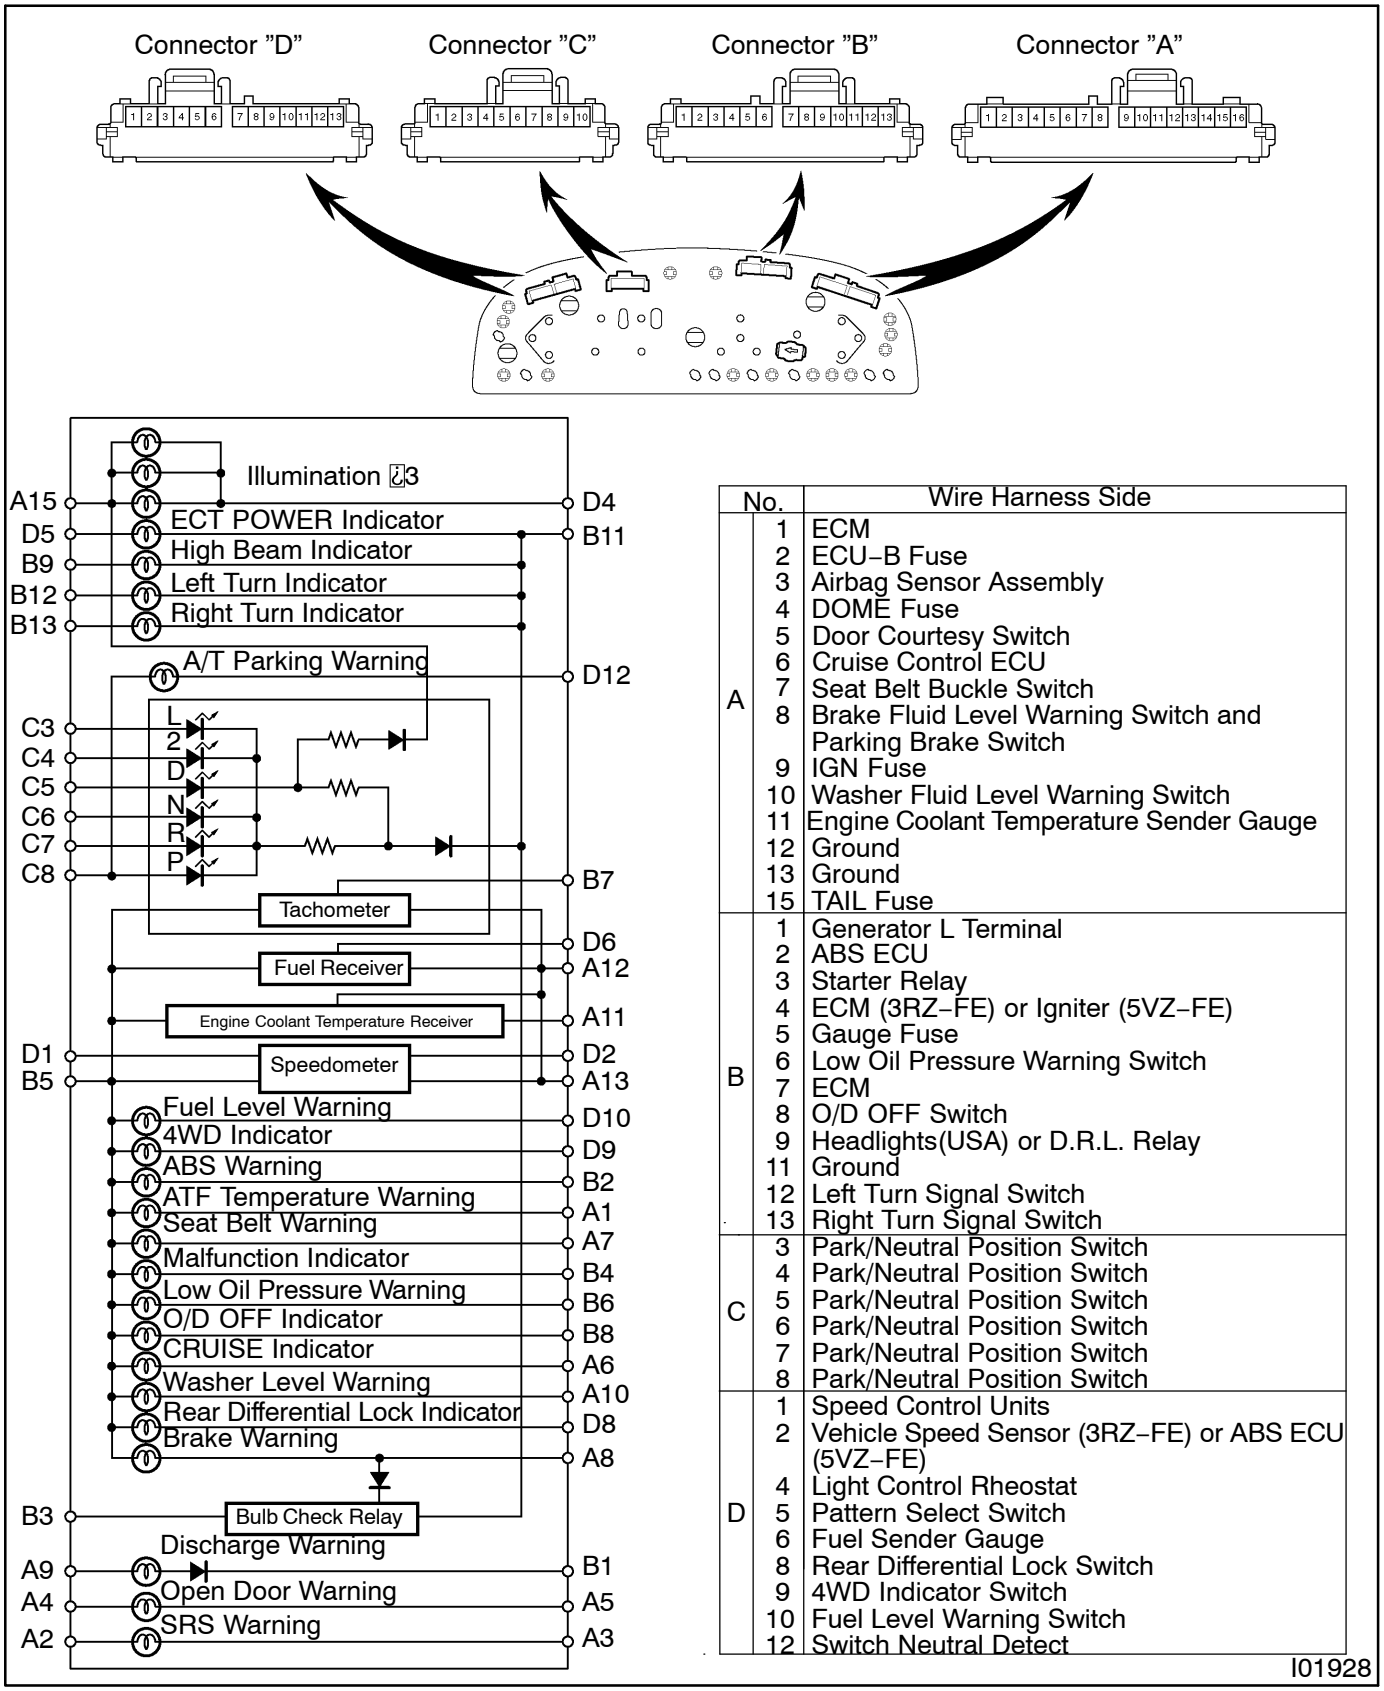

No.		Wire Harness Side
A	1	ECM
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	6	Cruise Control ECU
	7	Seat Belt Buckle Switch
	8	Brake Fluid Level Warning Switch and Parking Brake Switch
	9	IGN Fuse
	10	Washer Fluid Level Warning Switch
	11	Engine Coolant Temperature Sender Gauge
	12	Ground
	13	Ground
	15	TAIL Fuse
B	1	Generator L Terminal
	2	ABS ECU
	3	Starter Relay
	4	ECM (3RZ–FE) or Igniter (5VZ–FE)
	5	Gauge Fuse
	6	Low Oil Pressure Warning Switch
	7	ECM
	8	O/D OFF Switch
	9	Headlights(USA) or D.R.L. Relay
	11	Ground
	12	Left Turn Signal Switch
	13	Right Turn Signal Switch
C	3	Park/Neutral Position Switch
	4	Park/Neutral Position Switch
	5	Park/Neutral Position Switch
	6	Park/Neutral Position Switch
	7	Park/Neutral Position Switch
	8	Park/Neutral Position Switch
D	1	Speed Control Units
	2	Vehicle Speed Sensor (3RZ–FE) or ABS ECU (5VZ–FE)
	4	Light Control Rheostat
	5	Pattern Select Switch
	6	Fuel Sender Gauge
	8	Rear Differential Lock Switch
	9	4WD Indicator Switch
	10	Fuel Level Warning Switch
	12	Switch Neutral Detect

I01928