


LIGHT REMINDER BUZZER

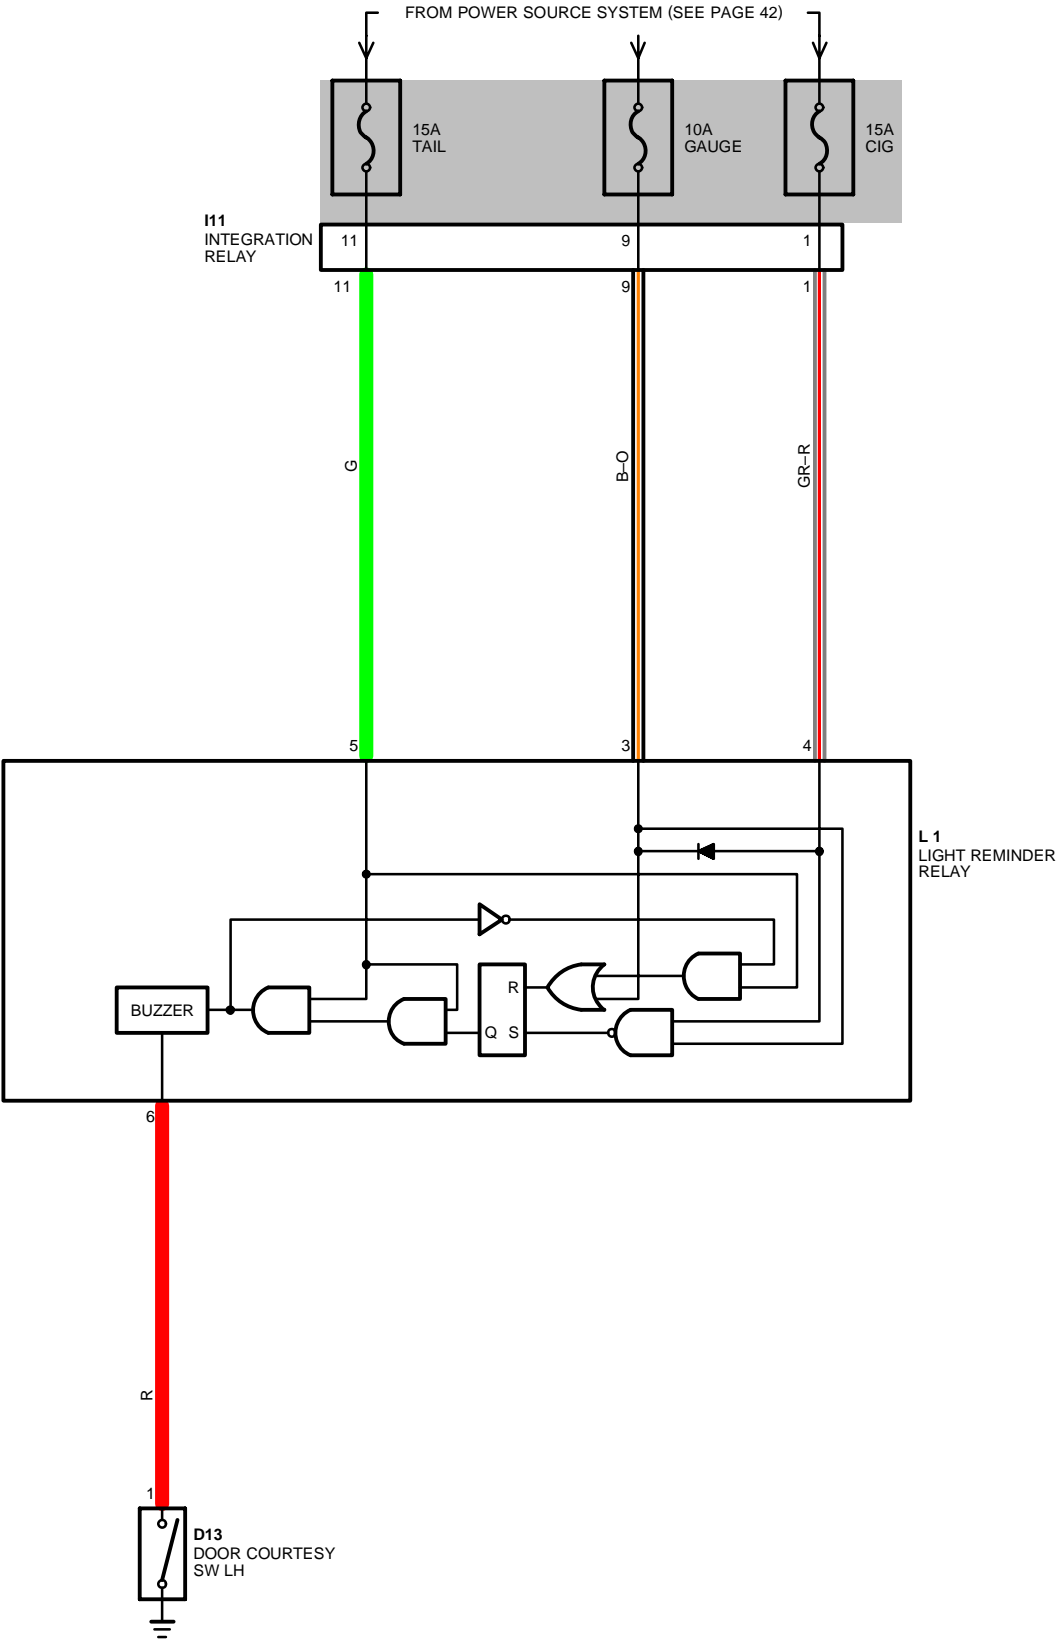

SYSTEM OUTLINE

WITH THE IGNITION SW IN **ACC** POSITION, CURRENT FLOWS TO **TERMINAL 4**. THROUGH **CIG** FUSE. WHEN THE IGNITION SW IS TURNED TO **ON** POSITION, CURRENT FLOWS TO **TERMINAL 3**. THROUGH **GAUGE** FUSE. WHEN THE LIGHT CONTROL SW IS TURNED TO **TAIL** OR **HEAD** POSITION, CURRENT IS APPLIED TO **TERMINAL 5** THROUGH **TAIL** FUSE.

LIGHT REMINDER SYSTEM

WHEN THE LIGHT CONTROL SW IS IN **TAIL** OR **HEAD** POSITION, THE IGNITION SW IS TURNED TO **OFF** FROM **ON** POSITION, AND THE DRIVER'S DOOR IS OPENED (DOOR COURTESY SW ON), THE CURRENT FLOW TO **TERMINALS 3** AND **4** OF THE LIGHT REMINDER RELAY STOPS. AS A RESULT, THE RELAY IS ACTIVATED AND CURRENT FLOWS FROM **TERMINAL 5** OF THE RELAY → **TERMINAL 6** → **TERMINAL 1** OF DOOR COURTESY SW → TO **GROUND**, SOUNDING THE LIGHT REMINDER BUZZER.

SERVICE HINTS

L 1 LIGHT REMINDER RELAY

- 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON
- 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 5-GROUND : APPROX. 12 VOLTS WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
- 6-GROUND : CONTINUITY WITH DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D13	24	I11	24	L 1	24

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		

